

Technical Reference Manual



GSE 460
GSE 465
GSE 560
GSE 562

GSE 660
GSE 661
GSE 662
GSE 663
GSE 665

PROGRAMMABLE PROCESS CONTROLLERS

VERSION 3.0
Part Number: 39-10-X60REF



TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION	1-1
INTRODUCTION.....	1-2
<i>About This Manual</i>	1-2
<i>Conventions</i>	1-2
CHAPTER 2 INSTALLATION	2-1
INSTALLATION.....	2-1
ENVIRONMENTAL SUITABILITY.....	2-2
460 AND 465 INDICATORS.....	2-2
<i>Standard 460 and 465 Indicators</i>	2-3
<i>Panel Mount 460 and 465 Indicators</i>	2-5
560 AND 562 CONTROLLERS.....	2-7
<i>Standard 560 and 562 Controllers</i>	2-7
<i>Panel Mount 560 and 562 Controllers</i>	2-10
660, 661, AND 662 CONTROLLERS.....	2-12
<i>Standard 660, 661 and 662 Controllers</i>	2-12
<i>Panel Mount 660, 661 and 662 Controllers</i>	2-14
663 CONTROLLER.....	2-16
665 CONTROLLER.....	2-17
<i>Standard 665 Controller</i>	2-18
<i>Panel Mount 665 Controller</i>	2-19
LOAD CELL CONNECTIONS.....	2-21
<i>Transducer Excitation</i>	2-21
<i>Cable Recommendations</i>	2-22
<i>Sense Lead Connections</i>	2-22
<i>Installation</i>	2-22
DC POWER CONNECTIONS.....	2-24
<i>460 Series</i>	2-24
<i>560 Series</i>	2-25
<i>660 Series</i>	2-26
LCD OPERATION.....	2-26
<i>LCD Hardware Setup</i>	2-26
<i>LCD Parameter Setup</i>	2-27
<i>LCD Contrast Adjustment</i>	2-27
KEYPAD CONFIGURATION.....	2-28
<i>460 Keypad</i>	2-28
<i>465 Keypad</i>	2-28
<i>560 Series Keypad</i>	2-29
<i>660 Series Keypad</i>	2-29
CHAPTER 3 SETUP PARAMETERS	3-30
SETUP PARAMETERS.....	3-3
<i>Accessing The Parameter Setup Mode</i>	3-3
<i>Navigating Setup Parameters</i>	3-6
<i>Parameter Types</i>	3-8
<i>Exiting the Parameter Setup Mode</i>	3-9
<i>Downloading Setup Parameters</i>	3-11
<i>Setup Parameter Map</i>	3-12

<i>Parameter Descriptions</i>	3-26
SCRIPT FILES	3-47
<i>Loading Script Files</i>	3-48
CHAPTER 4 CALIBRATION	4-1
CALIBRATION.....	4-2
<i>Quick Calibration</i>	4-2
<i>Calibration Upon Exiting Setup Mode</i>	4-2
CALIBRATION METHODS	4-3
<i>General Notes on Calibration</i>	4-3
<i>New Zero</i>	4-4
<i>Last Zero</i>	4-5
<i>Temporary Zero</i>	4-6
<i>Only Zero</i>	4-7
<i>Calibration Reset</i>	4-8
<i>Known Loadcell Output</i>	4-8
MULTI - SCALE CALIBRATION.....	4-10
CALIBRATION UNITS.....	4-10
<i>Multi - Point Linearization</i>	4-10
A/D CALIBRATION.....	4-11
<i>Printing A/D Calibration Values</i>	4-11
<i>Restoring A/D Calibration Values</i>	4-13
CALIBRATION ERROR MESSAGES.....	4-15
RESTORING THE CALIBRATED ZERO REFERENCE.....	4-16
CHAPTER 5 WEIGH MODE OPERATION	5-1
WEIGH MODE OPERATION.....	5-2
<i>Keypad Functions</i>	5-2
<i>Character Entry</i>	5-6
<i>Disabling Front Panel Keys</i>	5-6
TIME & DATE.....	5-7
<i>Viewing The Time And Date</i>	5-7
<i>Entering The Time</i>	5-7
<i>Entering The Date</i>	5-7
<i>Operator Access To Time/Date</i>	5-8
<i>Time/Date Transmit Code (Formats)</i>	5-8
<i>Time And Date Parameter Setup</i>	5-8
<i>Time/Date Specifications</i>	5-8
<i>Time / Date Operation</i>	5-8
ACCUMULATION	5-9
<i>Accumulation Parameters</i>	5-9
<i>Performing Accumulations</i>	5-9
<i>Preventing Double Accumulations</i>	5-10
<i>Accumulation Counter</i>	5-10
<i>Large Accumulation Values</i>	5-11
<i>Accumulations and NTEP</i>	5-11
COUNTING.....	5-11
<i>Counting Mode (Key Operation)</i>	5-11
<i>Negative Piece Sampling</i>	5-12
<i>Using Auto-enhance</i>	5-13
<i>Using Minimum Accuracy Assurance</i>	5-13
<i>Achieved Accuracy Less Than Required</i>	5-14
<i>Achieved Accuracy Met Requirements</i>	5-14
<i>Counting Parts</i>	5-15
<i>Additional Counting Related Parameters To Consider</i>	5-17
MULTI-RANGE OPERATIONS.....	5-17

<i>Scale Number And Range Indication</i>	5-17
<i>Accumulations</i>	5-18
<i>Warnings</i>	5-18
<i>Cal Mode</i>	5-19
<i>Printing</i>	5-19
<i>Variables</i>	5-19
CHAPTER 6 LEGAL-FOR-TRADE	6-1
LEGAL FOR TRADE.....	6-2
<i>OIML And International Operation</i>	6-2
<i>International Keypad (460 Series)</i>	6-3
<i>International Keypad (560 Series)</i>	6-4
<i>International Keypad (660 Series)</i>	6-5
<i>International Characters</i>	6-6
<i>Renaming Operating Parameters</i>	6-7
<i>Presettable Parameters</i>	6-7
<i>NTEP</i>	6-8
<i>Sealing And Audit Trails</i>	6-10
DATA STORAGE DEVICE (DSD).....	6-13
<i>Database Structure</i>	6-14
<i>Setup Parameters</i>	6-16
<i>DSD Function Selection Menu</i>	6-17
<i>MAKE ROW</i>	6-18
<i>DSD Custom Transmit</i>	6-21
<i>DSD Communication Port</i>	6-21
<i>DSD Macro Commands</i>	6-21
CHAPTER 7 OPERATING PARAMETERS	7-1
OPERATING PARAMETERS.....	7-2
<i>Operating Parameter Identification</i>	7-2
<i>Accessing Operating Parameters</i>	7-3
<i>Mode Menu Access</i>	7-6
<i>Macro Access</i>	7-7
RENAMING OPERATING PARAMETERS.....	7-7
<i>Renaming Parameters In The Setup Mode</i>	7-7
<i>Renaming Parameters with Macros</i>	7-8
WEIGHT PARAMETERS.....	7-8
<i>Gross (Mode 0)</i>	7-8
<i>Net (Mode 1)</i>	7-9
<i>Tare (Mode 2)</i>	7-9
ACCUMULATION PARAMETERS.....	7-10
<i>Gross Total (Mode 3)</i>	7-10
<i>Gross Total + Current Gross (Mode 4)</i>	7-10
<i>Gross Total - Current Gross (Mode 5)</i>	7-11
<i>Net Total (Mode 6)</i>	7-11
<i>Net Total + Current Net (Mode 7)</i>	7-11
<i>Net Total - Current Net (Mode 8)</i>	7-11
<i>Number Of Accumulations (Mode 9)</i>	7-11
<i>Scale Number (Mode 10)</i>	7-12
TIME & DATE.....	7-12
<i>Time & Date (Mode 11)</i>	7-12
WEIGHT AVERAGING PARAMETERS.....	7-13
<i>Average Gross (Mode 15)</i>	7-14
<i>Average Net (Mode 16)</i>	7-14
<i>Average Count (Mode 17)</i>	7-14
PEAK WEIGHT PARAMETERS.....	7-14

<i>Peak Gross (Mode 18)</i>	7-14
<i>Peak Net (Mode 19)</i>	7-15
ROUNDED WEIGHT PARAMETERS.....	7-15
<i>Rounded Gross (Parameter 20)</i>	7-16
<i>Rounded Net (Parameter 21)</i>	7-16
RATE PARAMETERS.....	7-16
<i>Rate (Mode 23)</i>	7-16
<i>Free Fall (Mode 24)</i>	7-17
<i>Future Gross (Mode 25)</i>	7-18
<i>Future Net (Mode 26)</i>	7-19
<i>Free Fall 2 (Mode 27)</i>	7-19
<i>Future Gross 2 (Mode 28)</i>	7-19
<i>Future Net 2 (Mode 29)</i>	7-19
COUNTING PARAMETERS.....	7-19
<i>Quantity (Mode 30)</i>	7-19
<i>Quantity Total (Mode 31)</i>	7-20
<i>Quantity Total + Current Quantity (Mode 32)</i>	7-20
<i>Quantity Total - Current Quantity (Mode 33)</i>	7-20
<i>Average Piece Weight (Mode 34)</i>	7-20
<i>Average Piece Weight x 1000 (Mode 35)</i>	7-21
<i>Percent Accuracy (Mode 36)</i>	7-21
<i>Last Sample Size (Mode 37)</i>	7-21
MULTI-SCALE PARAMETERS.....	7-21
<i>Gross Total Of All Scales (Mode 40)</i>	7-21
<i>Net Total of All Scales (Mode 41)</i>	7-21
<i>Tare Total of All Scales (Mode 42)</i>	7-21
<i>Total of All Gross Totals (Mode 43)</i>	7-22
<i>Total of All Net Totals (Mode 44)</i>	7-22
<i>Quantity Total of All Scales (Mode 45)</i>	7-22
<i>Total of All Quantity Totals (Mode 46)</i>	7-22
PROGRAMMABLE DIGITAL I/O PARAMETERS (PDIO).....	7-22
<i>Pdio A (Mode 50)</i>	7-23
<i>Pdio B (Mode 51)</i>	7-23
<i>Pdio C (Mode 52)</i>	7-23
EXTENDED WEIGHT PARAMETERS.....	7-24
<i>Extended Resolution Gross (Mode 60)</i>	7-24
<i>Extended Resolution Net (Mode 61)</i>	7-24
<i>Extended Resolution Tare (Mode 62)</i>	7-24
<i>A/D Conversion Number (Mode 63)</i>	7-24
DSD PARAMETERS.....	7-25
<i>DSD Parameters (Parameters 64.1 – 64.9)</i>	7-25
SETPOINT TIMERS.....	7-25
<i>Setpoint Countdown Timer (Parameter 76)</i>	7-26
<i>Setpoint Delay Timer (Parameter 77)</i>	7-26
<i>Setpoint Status (Parameter 78)</i>	7-26
RANDOM NUMBERS.....	7-27
<i>Random Number (Parameter 79)</i>	7-27
VARIABLES.....	7-28
<i>Variable Types</i>	7-28
<i>Accessing Variables</i>	7-28
<i>Assigning Values To Variables</i>	7-29
<i>Entering String Values</i>	7-33
<i>Displaying String Values</i>	7-33
<i>Naming Variables</i>	7-33
<i>Saving Values During Power Loss</i>	7-34
<i>Locking Variables</i>	7-34

INDEPENDENT TIMERS	7-34
<i>Timer Ticks (Mode 81)</i>	7-34
<i>Timer Seconds (Mode 82)</i>	7-34
PROMPTING PARAMETERS	7-35
<i>Macro Select (Mode 90)</i>	7-35
<i>Weigh Mode Message (Mode 91)</i>	7-36
<i>Get Displayed Data (Mode 92)</i>	7-38
DIAGNOSTIC WEIGHT PARAMETERS	7-38
<i>Status (Parameter 97)</i>	7-39
<i>Displayed Weight/Count (Parameter 98)</i>	7-39
<i>Extended Gross (Parameter 99)</i>	7-39
CHAPTER 8 COMMUNICATIONS.....	8-1
COMMUNICATION CONNECTIONS	8-2
<i>COMM Port Connections (General)</i>	8-2
<i>COMM1 & COMM2 Port Connections</i>	8-2
<i>COMM3 Port Connections (560/660 Series)</i>	8-3
<i>COMM4 Port Connections (660 Series)</i>	8-3
<i>Communications Cables</i>	8-4
COMM PORT SETUP PARAMETERS	8-4
RECEIVE OPERATIONS	8-4
<i>Receive Buffer</i>	8-5
<i>Macro Language</i>	8-5
CUSTOM TRANSMIT	8-19
<i>Custom Transmit Setup Parameters</i>	8-19
<i>Default Custom Transmit</i>	8-19
<i>Sending a Custom Transmit</i>	8-19
<i>Defining a New Custom Transmit</i>	8-20
<i>Creating a Custom Transmit Table</i>	8-21
<i>Entering Fixed Text</i>	8-21
<i>Entering Control Codes</i>	8-22
<i>Custom GSE Control Codes</i>	8-23
<i>Entering Parameter Data</i>	8-26
<i>Parameter Format Codes</i>	8-27
<i>Navigating a Custom Transmit Table</i>	8-28
<i>Editing a Custom Transmit Table</i>	8-29
TRANSMITTING DISPLAY DATA	8-33
MODBUS™ COMMUNICATIONS.....	8-34
<i>Supported Modbus Commands</i>	8-34
<i>Setup Parameters</i>	8-35
<i>Modbus “Input” Setpoints</i>	8-35
<i>Modbus Protocol (RTU Mode)</i>	8-36
<i>Other Setup Parameters</i>	8-38
<i>Modbus Packet Formats</i>	8-39
CHECKSUM PROTOCOL.....	8-41
<i>Printer Interface Example</i>	8-44
TRANSMIT THE CURRENT SCALE NUMBER (ASCII)	8-45
MISCELLANEOUS PROTOCOL (BINARY TO TEXT CONVERSION)	8-45
TRANSMIT NETWORK ADDRESS (ASCII)	8-46
TRANSMIT SETPOINT STATUS AS A BINARY CODE	8-46
PRINTING OPERATIONS.....	8-47
INPUT INTERPRETER.....	8-48
<i>Setup</i>	8-50
<i>General Setup and COMM Port Selection</i>	8-50
<i>Termination Character</i>	8-50
<i>Input Specification Type</i>	8-51

<i>Input Specification Format Line</i>	8-51
<i>Input Specification Macro Number</i>	8-52
<i>Clear Interpreter</i>	8-52
<i>Operation</i>	8-52
<i>Multiple Parameters</i>	8-52
<i>Trailing Data</i>	8-53
<i>Multiple Matches</i>	8-53
<i>Disabling the Input Interpreter</i>	8-53
<i>Using a String as a Parameter</i>	8-53
<i>Advanced Concepts</i>	8-54
<i>Input Interpreter Examples</i>	8-55
RS-485 NETWORKING (OPTION)	8-60
<i>Setup</i>	8-60
<i>Operation</i>	8-61
<i>Network Protocol</i>	8-62
CHAPTER 9 MACROS	9-1
MACRO SETUP	9-2
<i>Macro Setup Parameters</i>	9-2
<i>Using The Macro % Character</i>	9-4
<i>Creating A New Macro</i>	9-4
<i>Editing Macros</i>	9-5
<i>Deleting Macros</i>	9-6
INVOKING MACROS	9-8
<i>Front Panel Keypress</i>	9-8
<i>Macro Menu</i>	9-9
<i>Setpoint Activation / Deactivation</i>	9-10
<i>Input Interpreter</i>	9-10
<i>Serial Data</i>	9-10
<i>Other Macros</i>	9-10
MACRO EXECUTION	9-11
<i>Macro Stack</i>	9-11
<i>Entry Buffer</i>	9-12
<i>Using Macros In The Setup Mode</i>	9-15
<i>Macro Abort</i>	9-16
<i>Disabling Macros At Power-up</i>	9-17
MACRO LANGUAGE	9-18
<i>Macro Commands</i>	9-18
<i>Complete Macro Command</i>	9-30
BOOLEAN LOGIC	9-152
<i>The "If" Statement</i>	9-153
<i>The "Else" (If Not) Statement</i>	9-154
<i>The 'And' Condition</i>	9-154
<i>The 'Or' Condition</i>	9-155
<i>Grouping "If" Statements</i>	9-156
<i>Nested "If" Statements</i>	9-157
POINTERS	9-160
<i>Variable Pointers</i>	9-160
<i>Non-variable Pointers</i>	9-161
INTERRUPT MACROS	9-161
<i>Invoking An Interrupt Macro</i>	9-162
MACRO DEBUG	9-163
<i>Reviewing The Macro Debug Table</i>	9-164
<i>Printing The Macro Debug Table</i>	9-164
<i>Clearing The Macro Debug</i>	9-166
<i>Using Macro Debug Macro Commands</i>	9-166

<i>Downloading Individual Macros</i>	9-166
--------------------------------------------	-------

CHAPTER 10 **SETPOINTS**

10-1

SETPOINTS	10-2
SETPOINT SETUP PARAMETERS	10-2
SETPOINT OPERATION.....	10-3
<i>Setpoint Status Mode</i>	10-3
<i>Setpoint Status Serial Transmission</i>	10-4
<i>Setpoint Inputs</i>	10-4
SETPOINT KEYPAD ENTRY.....	10-5
SETPOINT OUTPUT RESPONSE TIME.....	10-5
SETPOINT SETUP EXAMPLES	10-6
SETPOINT OPTIONS	10-10

CHAPTER 11 **DATABASE**

11-1

INSTALLATION.....	11-2
<i>What is a Database?</i>	11-2
<i>Database Applications</i>	11-3
<i>Transaction Recorder Database</i>	11-3
<i>Part Number Look-Up Database</i>	11-4
<i>Quantity On Hand Database</i>	11-4
<i>Batch Formula Lookup Database</i>	11-4
<i>Database Setup</i>	11-4
DATABASE MENU	11-6
<i>Recall Row (Function 1)</i>	11-8
<i>Update Row (Function 2)</i>	11-8
<i>Make Row (Function 3)</i>	11-9
<i>Print Database (Function 4)</i>	11-9
<i>Advanced Database Menus</i>	11-9
<i>First Row (Function 5)</i>	11-10
<i>Next Row (Function 6)</i>	11-10
<i>Next Match (Function 7)</i>	11-11
<i>Clear Row (Function 8)</i>	11-11
<i>Clear Column (Function 9)</i>	11-12
<i>Clear Database (Function 10)</i>	11-12
<i>Set Database (Function 11)</i>	11-12
<i>Set Column (Function 12)</i>	11-13
<i>Download Database (Function 13)</i>	11-14
<i>Print Row (Function 14)</i>	11-15
<i>Print Errors (Function 15)</i>	11-16
<i>Upload New (Function 16)</i>	11-16
<i>Upload Update (Function 17)</i>	11-17
<i>Sort Database (Function 18)</i>	11-18
<i>Auto Test (Function 19)</i>	11-19
PRINT FORMAT.....	11-19
<i>Down-Load Format</i>	11-20
<i>Upload Data Format</i>	11-21
<i>Time/Date Handling</i>	11-21
<i>Database Information Parameters</i>	11-22
<i>Defaulting the Entire Database</i>	11-22
<i>Memory Consumption</i>	11-22
<i>Database Errors</i>	11-23
<i>Notes Regarding the Storing and Recalling of Weight Data</i>	11-24
<i>Database Examples</i>	11-24

CHAPTER 12 **PROGRAMMABLE DIGITAL I/O**
12-1

APPLICATIONS.....	12-2
<i>Encoders</i>	12-2
<i>Flow Meters</i>	12-2
<i>conveyors</i>	12-2
<i>Diverters</i>	12-2
<i>Flow Rate</i>	12-2
CONNECTIONS.....	12-3
TERMINOLOGY.....	12-3
I/O PARAMETERS.....	12-4
<i>I/O Parameter Numbers</i>	12-4
<i>Referencing I/O Parameters</i>	12-4
<i>Viewing I/O Parameters</i>	12-4
<i>Scaling I/O Parameters</i>	12-5
SETUP AND OPERATIONAL DETAILS.....	12-5
FUNCTIONS.....	12-7
<i>None: (Function 0)</i>	12-7
<i>Frequency Output: (Function 1)</i>	12-8
<i>Setpoint (Function 2)</i>	12-10
<i>Frequency Measurement Method 'A' (Function 3)</i>	12-10
<i>Frequency Measurement Method 'B' (Function 4)</i>	12-14
<i>Phase Time (Function 5)</i>	12-16
<i>Delay In, Delay Out (Functions 6 & 7)</i>	12-19
<i>Quadrature Decode, 2 Wire (Function 8)</i>	12-21
<i>Quadrature Decode, 3 Wire (Function 9)</i>	12-23
<i>PDIO Sampled Frequency (Function 10)</i>	12-26

CHAPTER 13 **OPTIONS**
13-1

OPTIONS.....	13-2
660 SERIES BUS OPTIONS.....	13-3
60 SERIES BUS MODULES (SBM).....	13-5
<i>Mounting Internal 660 Series SBMs</i>	13-5
<i>Mounting An Internal 460 SBM</i>	13-7
2-OPTION MOUNTING PLATE KIT.....	13-8
<i>Mounting SBMs to the RF Cover</i>	13-8
<i>Mounting SBMs to the 663 Sub-panel</i>	13-10
<i>Mounting SBMs to the 665 Option Mounting Bracket</i>	13-12
<i>Mounting More Than 2 SBMs on the 665 Option Mounting Bracket</i>	13-14
<i>Mounting SBMs Externally</i>	13-15
SERIAL I/O MODULES.....	13-16
60 SERIES I/O MODULES.....	13-17
16 POSITION I/O SETPOINT OPTION.....	13-21
<i>Installing the 24663B-100C0 16 Position I/O Board in the 663</i>	13-21
<i>Installing the 420819-31396 16 Position I/O Board</i>	13-22
<i>660 Series Interface Connections</i>	13-23
MULTI-SCALE INSTALLATION.....	13-24
<i>Multi-Scale Setup Parameters</i>	13-25
<i>A/D Calibration</i>	13-26
<i>Scale Calibration</i>	13-26
<i>Weigh Mode Operation</i>	13-26
<i>Connecting Multiple SBMs</i>	13-27
ANALOG OUTPUT INSTALLATION.....	13-27
<i>Analog Output Parameter Setup</i>	13-28

<i>Analog Output Calibration</i>	13-28
<i>Connecting Multiple SBMs</i>	13-30
REMOTE DISPLAY MODULE INSTALLATION.....	13-30
<i>Remote Display Parameter Setup</i>	13-32
<i>Connecting Multiple SBMs</i>	13-32
RS-485 MODULE INSTALLATION.....	13-33
<i>Network Parameter Setup</i>	13-34
20mA CURRENT LOOP MODULE.....	13-38
<i>20mA Parameter Setup</i>	13-39
<i>20 mA Current Loop Connections</i>	13-39
SCR MODULE.....	13-40
<i>Specifications</i>	13-40
<i>Installation</i>	13-40
<i>Connections</i>	13-41
<i>SCR Module Parameter Setup</i>	13-42
<i>Testing The SCR Module</i>	13-42
460 SERIES TIME/DATE MODULE.....	13-43
SPLASH GUARDS.....	13-43
DURASHIELD.....	13-43
ALPHA KEYPAD.....	13-44
<i>Alpha Keypad Features</i>	13-45
<i>Function Keys</i>	13-45
<i>Installing the Alpha Keypad</i>	13-46
<i>Installation</i>	13-47
<i>Using the Alpha Keypad</i>	13-52
<i>Troubleshooting</i>	13-53
ALPHANUMERIC SERIAL KEYBOARD CONVERTER KIT.....	13-54
<i>Installation</i>	13-54
<i>Character Map</i>	13-55
CABLES.....	13-55
4X20 VF DISPLAY.....	13-59
<i>Hardware Setup</i>	13-59
<i>Display Commands</i>	13-60
REFLASH SOFTWARE.....	13-65
BDM FLASH SOFTWARE.....	13-65

CHAPTER 14.....INFORMATION PARAMETERS
14-1

INFORMATION PARAMETERS.....	14-2
<i>Accessing Information Parameters</i>	14-2
<i>Memory Parameters</i>	14-2
<i>Processing Speed Parameters</i>	14-7
<i>Identification Parameters</i>	14-7
<i>Audit Trail Parameters</i>	14-8
<i>Calibration Parameters</i>	14-8
<i>Diagnostic Parameters</i>	14-11
<i>Utility Parameters</i>	14-14

APPENDIX A SPECIFICATIONS..... A-1

PERFORMANCE.....	A-1
ELECTRICAL.....	A-2
COMMUNICATIONS.....	A-2
APPROVALS.....	A-2
INPUT/OUTPUT.....	A-3
ENCLOSURE.....	A-3
DISPLAY.....	A-4

6-Digit, 7-Segment Display.....	A-4
4 X 20 Character VFD.....	A-4
8 X 40 Character Graphic LCD.....	A-5
16 X 40 Character Graphic LCD.....	A-5
KEYPAD.....	A-6
460 Keypad.....	A-6
465 Keypad.....	A-8
560 Series Keypad	A-9
660 Series Keypad	A-9
CONFIGURATIONS	A-10
DIMENSIONAL DRAWINGS	A-11
CLOCK MODULE SPECIFICATIONS.....	A-16
FCC COMPLIANCE INFORMATION.....	A-17
APPENDIX B ASCII CHART.....	B-17
APPENDIX C VFD / LCD CHARACTER SETS.....	C-1
APPENDIX D PARAMETER SETUP	D-1
APPENDIX E ERROR CODES / MESSAGES.....	E-1
OPERATIONAL MODE ERROR CODES	E-1
SETUP MODE ERROR CODES	E-2
HARDWARE PROBLEM ERROR CODES	E-2
CALIBRATION ERROR CODES	E-3
GENERAL ERROR CODES	E-4
MACRO ERROR CODES	E-5
SETUP ERROR CODES.....	E-6
COMMUNICATIONS ERROR MESSAGES	E-6
MISCELLANEOUS MESSAGES.....	E-7
APPENDIX F ASSEMBLY DRAWINGS.....	F-1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/GSE/460> and [465 Technical Reference Manual](https://the-checkout-tech.com/manuals/GSE/465)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)