

GSE 460 and 465 user ar



# GSE 460 SERIES PROGRAMMABLE WEIGH INDICATORS

Revision 1.0  
April 2001

Part Number 39-10-37661

# Table of Contents

<b>CHAPTER 1 INTRODUCTION.....</b>	<b>7</b>
DISPLAY.....	7
MODEL 460 KEYPAD.....	8
MODEL 465 KEYPAD.....	9
ALPHA-NUMERIC CHARACTER ENTRY.....	10
AVAILABLE OPTIONS .....	11
<b>CHAPTER 2 INSTALLATION INSTRUCTIONS .....</b>	<b>13</b>
WARNING!.....	13
TABLE-TOP USE.....	13
PERMANENT MOUNTING.....	14
PANEL MOUNT USE.....	15
ENVIRONMENTAL SUITABILITY.....	16
REMOTE DISPLAY.....	16
<b>CHAPTER 3 CALIBRATION MODE.....</b>	<b>17</b>
CALIBRATION MODE.....	17
QUICK CALIBRATION .....	17
"NEW ZERO?" CALIBRATION .....	17
"LAST ZERO?" CALIBRATION .....	18
"TEMP ZERO?" CALIBRATION.....	18
"ONLY ZERO?" CALIBRATION .....	19
"CAL RESET".....	19
"KNOWN LCOUT".....	20
<b>CHAPTER 4 COUNTING MODE.....</b>	<b>22</b>
PARTS COUNTING.....	22
COUNTING (FEATURES) .....	22
PARTS COUNTING METHODS .....	23
<i>Method 1 counting a specific number of parts .....</i>	<i>23</i>
<i>Counting out a specific number of parts with piece weight enhancement. ....</i>	<i>23</i>
<i>Counting the total number of parts on hand with a known container weight.....</i>	<i>24</i>
PIECE WEIGHT DATABASE MODE (MODEL 465).....	25
<i>Store APW – Store a specific APW to the database.....</i>	<i>25</i>
<i>Get APW – Retrieve a specific APW from the database.....</i>	<i>25</i>
<i>Print APW's – Prints all stored records in row/column format. ....</i>	<i>25</i>
<i>Clear One APW – Clears current record from the database.....</i>	<i>26</i>
<i>Clear All APW's – Clears all records from the database. ....</i>	<i>26</i>

<b>CHAPTER 5 TRUCK WEIGHING (MODEL 465 ONLY)</b> .....	<b>27</b>
TRUCK IN.....	27
TRUCK OUT .....	27
PRINT ID'S?.....	27
CLEAR ONE ID .....	27
CLEAR ALL.....	28
STORE PERMANENT TRUCK IN.....	28
<b>CHAPTER 6 CHECK WEIGHING AND BATCHING</b> .....	<b>29</b>
CHECK WEIGH ABSOLUTE AND PERCENTAGE OPERATION.....	29
<i>Set the Hi and Lo weights</i> .....	29
<i>Use Check Weigh</i> .....	30
BATCHING OPERATION .....	30
<i>Setting setpoints, preact, and dribbles</i> .....	30
<i>Batching</i> .....	30
<b>CHAPTER 7 ACCUMULATION OPERATIONS</b> .....	<b>31</b>
PERFORMING ACCUMULATIONS .....	31
<i>Set Accumulation</i> .....	31
<i>Get Accumulation</i> .....	31
<i>View Number of Accumulations</i> .....	31
<i>Preset Accumulation</i> .....	31
<i>Clear Accumulations</i> .....	32
(MODEL 460) ACCUMULATION .....	33
<i>Set Accumulation</i> .....	33
<i>Get Accumulation</i> .....	33
<i>View Number of Accumulations</i> .....	33
<i>Clear Accumulations</i> .....	33
<i>Preset Accumulation</i> .....	33
<b>CHAPTER 8 PRINTING OPERATIONS</b> .....	<b>34</b>
CUSTOM TRANSMIT (MODEL 465 ONLY) .....	34
<i>Print (Model 460)</i> .....	34
<i>Print (Model 465)</i> .....	34
<b>CHAPTER 9 TIME AND DATE</b> .....	<b>35</b>
NOTES .....	35
ENTERING TIME AND DATE (MODEL 460).....	35
ENTERING TIME AND DATE (MODEL 465).....	35
VIEWING THE TIME AND DATE.....	36

<i>Model 465</i> .....	36
<i>Model 460</i> .....	36
<b>CHAPTER 10 TROUBLESHOOTING</b> .....	<b>37</b>
<b>ERROR MESSAGES (OVERVIEW)</b> .....	<b>37</b>
<b>OPERATIONAL MODE ERROR MESSAGES</b> .....	<b>37</b>
<b>HARDWARE PROBLEM ERROR MESSAGES</b> .....	<b>38</b>
<b>CALIBRATION ERROR MESSAGES</b> .....	<b>38</b>
<b>MISCELLANEOUS MESSAGES</b> .....	<b>39</b>
<b>COMMUNICATIONS ERROR MESSAGES</b> .....	<b>39</b>
<b>SERVICE</b> .....	<b>40</b>
<b>GLOSSARY OF TERMS</b> .....	<b>40</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*