

INSTRUCTION MANUAL
FOR
MODEL 4640 COUNTING SYSTEM
(SUPER V-LINE)

GSE Incorporated
23640 Research Drive
Farmington Hills, MI 48024-1090 U.S.A.

Telephone: 313-476-7875
Telex: 23-0738

Revision 0
April, 1982

TABLE OF CONTENTS

SECTION 1.	SPECIFICATIONS
SECTION 2.	UNPACKING
	2.1 UNPACKING
	2.2 PLATFORM SUPPORT INSTALLATION
	2.3 SCALE SET-UP
SECTION 3.	SET UP
	3.1 ACCESS TO CONTROLS
	3.2 INITIAL INTERNAL ADJUSTMENT
	3.3 POWER-UP
	3.4 SPAN & ZERO ADJUSTMENT
	3.5 FINAL ADJUSTMENTS
SECTION 4.	WEIGHING OPERATIONS
	4.1 BASIC WEIGHING
	4.2 THE TARE FUNCTIONS
SECTION 5.	COUNTING OPERATIONS
	5.1 UNKNOWN PIECE & TARE WEIGHT
	5.2 PIECE WEIGHT KNOWN, TARE WEIGHT UNKNOWN
	5.3 PIECE & TARE WEIGHT KNOWN
	5.4 2-SCALE OPERATION (OPTION)
SECTION 6.	TROUBLE SHOOTING
	6.1 ERROR MESSAGES
	6.2 TROUBLE SHOOTING CHECK LIST
SECTION 7.	OPTIONS
	7.1 2-SCALE
	7.2 BCD OUTPUT
	7.3 BATTERY OPERATION

LIST OF ILLUSTRATIONS

FIGURE A	PLATFORM SUPPORT INSTALLATION
FIGURE B	INTERNAL ADJUSTMENTS
FIGURE C	REMOTE PLATFORM (LOAD CELL) CONNECTIONS
FIGURE D	2-SCALE OPTION BOARD
FIGURE E	BATTERY PACK

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/GSE/4640 Super V-line instruction manual.html](https://the-checkout-tech.com/manuals/GSE/4640%20Super%20V-line%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)