



A member of the  
Avery Weigh-Tronix Group

# 60 Series

## Indicators and Process Controllers



## User Instructions

NORTH AMERICA

# Table of Contents

<b>Chapter 1 General information</b> .....	3
About this manual .....	3
Text conventions .....	3
Operator interface .....	3
Special messages .....	3
Installation .....	5
Electrical installation .....	5
Pluggable equipment .....	5
Wet conditions .....	5
Routine maintenance .....	6
Cleaning the indicator .....	6
Training .....	6
Sharp objects .....	6
FCC and EMC declarations of compliance .....	7
Declaration of Conformancy .....	8
Common weighing applications .....	12
Indicator descriptions .....	12
Stainless Steel Enclosure .....	12
Features .....	12
Specifications .....	13
Enclosure Dimensions .....	14
Display .....	15
Keypad .....	17
<b>Chapter 2 Installation</b> .....	21
Table top or wall mounting .....	21
Model 460 Outline drawing .....	21
Model 465, 560, 562, 660, 662 Outline drawing .....	22
663 Outline drawing .....	22
663 Big box outline drawing .....	23
665 Outline drawing .....	23
Panel mounting .....	24
Model 460 outline drawing .....	24
Model 460 panel mount cutout .....	24
Model 465, 560, 562, 660, 662 panel mount outline drawing .....	25
Model 465, 560, 562, 660, 662 panel mount cutout .....	25
Model 665 panel mount outline drawing .....	26
Model 665 panel mount cutout .....	26
<b>Chapter 3 Operation</b> .....	27
Entering a tare value (model 460) .....	27
Entering a tare value (all models excluding model 460) .....	27
Time/Date (clock feature) .....	27
Entering the Time / Date (excluding model 460) .....	27
Entering the time / date (model 460) .....	28
Parts Counting .....	29
Simple keypad sample (model 460) .....	29
Negative piece sampling (model 460) .....	30
60 Series (excluding model 460) .....	30
Simple keypad sample .....	30
Negative piece sampling .....	31
Accumulation Mode .....	32
Performing Accumulations .....	32
Initializing Accumulation Totals .....	33

Accumulation Modes .....	33
Absolute and Percent Checkweighing .....	33
Set the high and low limits (excluding model 460) .....	34
Use checkweigh mode (excluding model 460) .....	34
Set the high and low limits ( model 460) .....	34
Use checkweigh mode (model 460) .....	34
Truck I/O .....	35
Truck in .....	35
Truck out .....	35
Print ID's? .....	35
Clear one ID .....	36
Clear all .....	36
Store truck in tare weight .....	36
APW (average piece weight) lookup .....	37
Store APW .....	37
Get APW .....	37
Print APW'S .....	37
Clear one APW .....	38
Clear all APW'S .....	38
Fill (Batching) .....	38
Setup Outputs .....	39
Batching .....	39
<b>Chapter 4 Troubleshooting .....</b>	<b>40</b>
Information and error messages .....	40
Operational Mode Error Messages .....	40
Setup Mode Error Messages .....	41
Hardware Problem Error Messages .....	41
General Error Messages .....	42
Communications Error Messages .....	42
Other troubleshooting concerns .....	42
Data transmission .....	42
Displayed weight .....	42
Service .....	43

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/GSE/60 Series instruction manual.html](https://the-checkout-tech.com/manuals/GSE/60%20Series%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)