


GSE Scale Systems

GSE 60-Series Instruments Profibus Communications Option and Application Note

Ver 1.0.1
3/13/09
P/N 39-10-39398

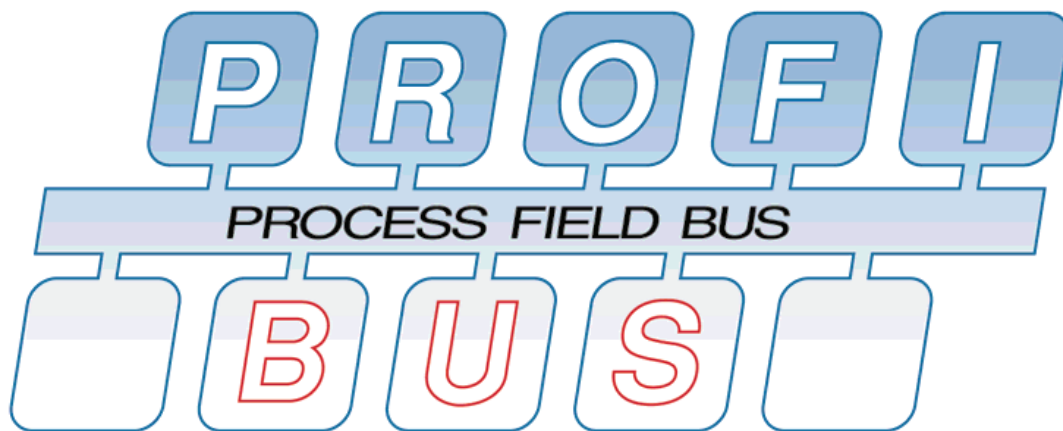

Published by
GSE Scale Systems
1525 Fairlane Circle.
Allen Park, MI 48101
USA

Copyright © 2008 GSE Scale Systems, All Rights reserved.
Information in this manual is subject to change without notice for correction or enhancement.
Profibus™ and PTO™ are trademarks of their respective owners.

Table of Contents

1	GSE	3
1.1	Profibus Basics - GSE Scale 60 Series Indicators (Profibus Slaves).	4
1.1.1	Profibus Master:	4
1.1.2	Profibus Slaves	4
1.1.3	GSD File	4
1.1.4	I/O Module	4
1.1.5	I/O Assemblies	4
1.1.6	Explicit Messaging	4
1.1.7	Overview of the GSE Profibus Option	4
1.1.7.1	GSE Profibus Option Board	4
1.1.7.2	Profibus and the GSE 60 Series Indicators	5
1.2	Initial Setup of indicator	5
1.3	Serial Port One Settings	6
1.4	Initial Profibus Master Setup	6
1.5	The I/O Modules	7
	Table 1.5	7
1.6	The I/O Assemblies	7
	Table 1.6 Scale Registers for I/O Assemblies	8
1.7	Explicit Messaging	9
	Table 1.7 Explicit Messaging Address Chart	10
1.8	Advanced Profibus Setup and Modification	19
1.8.1	How to Modify the Profibus Register Map	19
1.8.1.1	Examples of replacing Register Values	19
1.8.2	Reclaiming Setup Memory	22
1.9	Setpoints	23
	Table 1.9 Setpoint Target Variables	23
1.10	Informational Parameters for Profibus	24
1.10.1	P60000 FRam (E ²) Available	24
1.10.2	Profibus Specific	24
1.10.2.1	Using P60301 Reg Check	24
1.11	New Weigh Mode Parameter 95 – Network Status, Option Board LEDs	25
	Table 1.11 Defines the meaning of each digit displayed at parameter 95 “Profibus Stat”	25
1.12	New Scale Parameter P96	26
	Table 1.12 Bit Definition for Scale Parameter 96	26
1.13	Communicating with the device	27
1.13.1	OUTPUT DATA	27
	Table 1.13.1 Output Data Format	27

- 1.13.2 INPUT DATA27
 - Table 1.13.2 Input Data Format.....28
- 1.13.3 COMMUNICATION EXAMPLES28
 - 1.13.3.1 Get I/O Assembly data for one scale28
 - 1.13.3.2 Get I/O Assembly data for two scales29
 - 1.13.3.3 Request model number of indicator29
 - 1.13.3.4 Read a Register (word).....30
 - 1.13.3.5 Read a Register (long).....30
 - 1.13.3.6 Write a Register (word).....30
 - 1.13.3.7 Write a Register (long).....31
 - 1.13.3.8 Read a Register (string).....31
 - 1.13.3.9 Write a Register (string).....32
 - 1.13.3.10 Turn a coil on.....32
 - 1.13.3.11 Turn a coil off.....33
 - 1.13.3.12 Read coil status33
 - 1.13.3.13 Run a user created macro34
 - 1.13.3.14 Check if user created macro running34
 - 1.13.3.15 Run a built-in macro.....34
 - 1.13.3.16 Check if built-in macro running35
- 1.13.4 RETURNED ERROR CODES35
 - 1.13.4.1 ERROR Trying to Read a Register (word).....36
- 1.14 Troubleshooting and Profibus related Error Messages-----36**
 - 1.14.1 Framing or other Comm Port Errors when attempting Setup (Script or Upload).....36
 - 1.14.2 Error Codes ***See the 60 Series Tech Manual Appendix E for the description of other Codes36

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*