

**INSTRUCTION MANUAL**

**FOR MODEL 625**

**WEIGHING AND COUNTING SYSTEM**



**GSE INC.**

A Subsidiary of **CORE**  
Industries

**23640 Research Drive • Farmington Hills, MI 48024-1090 U.S.A.**

**(313) 476-7875 • Telex: 23-0738**

## TABLE OF CONTENTS

<u>CONTENTS</u>		<u>PAGE</u>
SECTION 1.0 INTRODUCTION		
SECTION 2.0 PREPARATION FOR USE, STORAGE AND SHIPMENT		
2.1	RECEIVING INSPECTION.....	3
2.2	SITE SELECTION.....	3
2.3	PRE-ASSEMBLY.....	5
2.4	CABLE CONNECTIONS.....	5
2.5	STORAGE.....	6
2.6	SHIPMENT.....	6
SECTION 3.0 OPERATING INSTRUCTIONS		
3.1	THE FRONT PANEL.....	7
3.1.1	THE KEYS.....	7
3.1.2	DISPLAY 1.....	9
3.1.3	DISPLAY 2.....	9
3.2	BASIC WEIGHING.....	9
3.2.1	OBTAINING A GROSS ZERO & WEIGHING.....	9
3.2.2	OBTAINING A NET ZERO - THE TARE FUNCTION.....	10
3.2.3	CENTER ZERO.....	10
3.2.4	UNIT CONVERSIONS.....	10
3.2.5	KEYBOARD TARE.....	10
3.3	PARTS COUNTING.....	11
3.3.1	SAMPLE WEIGHT & PIECE WEIGHT REQUIREMENTS.....	11
3.3.2	ENTERING THE COUNTING MODE.....	11
3.3.3	PIECE WEIGHT X 1000.....	12
3.3.4	COUNTING USING A KEYBOARD ENTERED SAMPLE SIZE.....	12
3.3.5	COUNTING USING PRESET SAMPLE SIZE.....	13
3.3.6	COUNTING USING PIECE WEIGHT ENTRY.....	13
3.3.7	COUNTING USING TARE WEIGHT AND PIECE WEIGHT ENTRY.....	13
3.3.8	EXCESSIVELY HIGH PART COUNTS.....	14
3.3.9	TWO SCALE COUNTING.....	14
3.3.10	THREE SCALE COUNTING.....	14
3.4	THE [*] KEY - ACCUMULATE/ENHANCEMENT.....	15
3.4.1	ACCUMULATE.....	15
3.4.2	EXITING THE ACCUMULATE MODE.....	15
3.4.3	ACCUMULATING VERY LARGE TOTALS.....	16
3.4.4	ADDITIONAL NOTES ON ACCUMULATING.....	16
3.4.5	ENHANCEMENT.....	17
SECTION 4.0 CALIBRATION		
4.1	ACCESS TO INTERNAL CONTROLS.....	19
4.2	ZERO ADJUSTMENTS.....	19
4.3	SPAN ADJUSTMENTS.....	20

<b>SECTION 5.0 THE PROGRAM MODE</b>	
5.1 PROGRAMMING DESCRIPTION.....	21
5.1.1 THE [MODE] KEY.....	21
5.1.2 THE [SEND/ENTER] KEY.....	22
5.1.3 CHANGING THE PROGRAM: THE PROGRAM JUMPER AND THE [NEXT] KEY.....	23
5.2 THE MODES.....	23
5.2.1 "OFFSET DISPLAYED".....	23
5.2.2 MODE 30: GENERAL SCALE SET-UP.....	24
5.2.3 SCALE SET-UP MODE.....	25
5.2.4 MODE 40 AND 625 ACCURACY.....	25
5.2.5 MODE 50 & 60.....	27
5.2.6 MODE 70.....	27
5.3 A PROGRAMMING EXAMPLE.....	27
<b>SECTION 6.0 SERIAL COMMUNICATIONS</b>	
6.1 CONNECTIONS.....	29
6.1.1 PRINT PORT.....	29
6.1.2 OPTIONAL COMM PORT.....	29
6.2 BASIC SET-UP FOR THE TRANSMISSION.....	30
6.2.1 A MAP OF MODE 0.....	30
6.2.2 THE MODE 0 PARAMETERS.....	31
6.2.3 MODE 10 AND MODE 20 PARAMETERS.....	32
6.3 THE Custom Txmit Setup MODE.....	33
6.3.1 DEFINITIONS.....	33
6.3.2 PLANNING THE CUSTOM TXMIT .....	34
6.3.3 ENTERING THE SEQUENCE AND FORMAT.....	37
6.3.4 ENTERING THE STRING.....	38
6.4 MAKING A SERIAL TRANSMISSION.....	39
6.5 PROGRAMMING SUMMARY FOR THE CUSTOM TXMIT SETUP.....	39
<b>SECTION 7.0 TROUBLE SHOOTING</b>	
7.1 ERROR/PROBLEM MESSAGES.....	41
7.1.1 Er-1/ZERO to begin.....	41
7.1.2 Er-03/Invalid Entry.....	41
7.1.3 Er-05/Sorry, SaveDenied.....	41
7.1.4 Er-10/Bad Zero Value.....	41
7.1.5 Er-11/Check Input.....	42
7.1.6 Er-12/Net Mode Entry.....	42
7.1.7 Add-/XX More Pcs.....	42
7.1.8 Er-13/Increase Sample!.....	42
7.1.9 Er-14/Need Valid Pcs Wt.....	42
7.1.10 Er-16/Remove Wt To ACC.....	42
7.1.11 Er-17/*ACC*Ovr Rng.....	42
7.1.12 Er-20/Display Ovr Rng.....	43
7.1.13 Er-21/Input Ovr Load.....	43
7.1.14 Er-22/ZTrack Ovr Rng.....	43
7.1.15 Er-31/Dev:1 Not Ready! OR Er-32/Dev:2 Not Ready!.....	43
7.2 THE LOAD CELL.....	43
7.2.1 OVERLOAD CONDITION.....	43
7.2.2 ADJUSTING THE OVERLOAD GAP.....	43
7.2.3 TROUBLE SHOOTING THE LOAD CELL.....	44
7.3 EPROM INSTALLATION.....	45

<b>SECTION 8.0 INSTALLATION AND OPERATION OF OPTIONS</b>	
8.1 MODEL 625 DISASSEMBLY.....	47
8.1.1 GAINING ACCESS TO THE DIGITAL BOARD.....	47
8.1.2 GAINING ACCESS TO THE ANALOG BOARD.....	47
8.2 INSTALLATION OF THE 3-SCALE OPTION.....	47
8.3 INSTALLATION OF THE BATTERY OPTION.....	49
8.4 NOTES ON BATTERY OPERATION.....	50
<b>APPENDIX A SPECIFICATIONS.....</b>	<b>51</b>
<b>APPENDIX B SPARE PARTS LIST.....</b>	<b>55</b>
<b>APPENDIX C PRINTER INTERFACES.....</b>	<b>57</b>
C.1 HECON A0543 PRINTER.....	57
C.2 SMITH-CORONA TYPEWRITER.....	57
C.3 EPSON LX-80 PRINTER.....	57
C.4 NOTE ON OPERATION OF CTS/RTS INPUTS.....	57
C.5 NOTE ON PARITY SELECTION.....	58
<b>APPENDIX D SEQUENCE AND FORMAT SET-UP SET-UP CHARTS.....</b>	<b>53</b>
<b>LIST OF ILLUSTRATIONS</b>	
FIGURE 1 MODEL 625 ASSEMBLY AND ACCESS VIEW.....	4
FIGURE 2 REAR PANEL CONNECTIONS.....	5
FIGURE 3 DE9P PLUG.....	6
FIGURE 4 THE FRONT PANEL.....	7
FIGURE 5 INTERNAL ADJUSTMENTS.....	19
FIGURE 6 SAMPLE PRINT-OUT.....	34
FIGURE 7 SAMPLE SEQUENCE AND FORMAT SET-UP CHARTS.....	35
FIGURE 8 OVERLOAD GAP ADJUSTMENT.....	44
FIGURE 9 OPTIONAL BOARD INSTALLATION.....	48
<b>LIST OF TABLES</b>	
TABLE 1 WIRING CODE.....	6
TABLE 2 SAMPLE WEIGHT CHART.....	11
TABLE 3 PROGRAMMING MODES.....	21
TABLE 4 MAP OF MODE 30.....	24
TABLE 5 MAP OF MODE 40.....	25
TABLE 6 APPLICATION ADJUSTMENTS.....	26
TABLE 7 MAP OF MODE 0.....	30
TABLE 8 MAP OF MODE 10 AND MODE 20.....	32
TABLE 9 STRING ENTRY SPECIAL CHARACTERS.....	38
TABLE 10 SEQUENCE SELECTION TABLE.....	59
TABLE 11 SEQUENCE SET-UP CHART.....	60
TABLE 12 SEQUENCE SELECTIONS LIST.....	60
TABLE 13 ASCII CHART FOR CUSTOM FORMAT ENTRY.....	61
TABLE 14 FORMAT SET-UP CHART.....	61

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/GSE/625 instruction manual.html](https://the-checkout-tech.com/manuals/GSE/625%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)