

GSE

Model 672 & Model 675

COUNTING SCALES



Technical Reference Manual
Version 1.0

Table of Contents

Chapter 1 : Introduction	1-1
672 Standard Features	1-2
675 Standard Features	1-2
Explanation of Symbols	1-2
Specifications	1-3
Enclosure	1-4
Model 672	1-4
Model 675	1-4
Load Cell Removal and Installation	1-5
Model 672	1-5
Model 675	1-5
Display	1-6
Model 672	1-6
Model 675	1-6
Keypad	1-7
Functions.....	1-7
Alpha Entry	1-8
Disabling Front Panel Keys	1-9
Rear Panel	1-9
Model 672	1-9
Model 675	1-10
Remote key connections	1-12
Chapter 2 : Option Installation	2-1
Battery Module (Model 675 Only)	2-2
Rechargeable Battery Option Installation.....	2-2
External Battery Charger	2-3
Battery Status Icons	2-4
Non-Rechargeable Battery Installation.....	2-5
Option Mounting Bracket (Model 675 Only)	2-6
Remote Scale (Model 675)	2-7
Third Scale Option	2-7
Fourth Scale	2-8
Setup Parameters.....	2-9
A/D Calibration.....	2-9
Scale Calibration.....	2-10
Weigh Mode Operation.....	2-10
Communication	2-10
Ethernet Interface Module	2-10

RS-232 Module (Model 675 Only).....	2-13
RS- 485 Networking (675 Only).....	2-14
20 mA Current Loop Operation (675 Only).....	2-16
Database Option.....	2-17
Database Setup Instructions.....	2-19
Database Menu.....	2-21
Print Format.....	2-32
FRAM Database.....	2-37
Analog Output Option (Model 675 Only).....	2-37
Installation Notes.....	2-38
Analog Output Parameter Setup.....	2-38
Analog Output Calibration.....	2-39
Setpoint Option (Model 675 Only).....	2-39
Setpoint Setup Instructions.....	2-41
Reflash Software.....	2-46
<i>Chapter 3 : Application Setup.....</i>	<i>3-1</i>
Model 672.....	3-2
F1 - Basic Weigh.....	3-2
F2 – GSE Custom.....	3-4
APW Lookup.....	3-4
F3 – GSE Default.....	3-10
Model 675.....	3-11
F1 – Quick Count.....	3-11
F2 – GSE Custom.....	3-15
APW Lookup.....	3-15
F3 – GSE Default.....	3-21
Setup Mode.....	3-21
Accessing the Parameter Setup Mode.....	3-21
Pin Number Access.....	3-23
Navigating Setup Parameters.....	3-23
Parameter Types.....	3-25
Exiting The Parameter Setup Mode.....	3-26
Downloading Setup Parameters.....	3-27
Setup Parameter Map.....	3-27
Parameter Descriptions.....	3-39
<i>Chapter 4 : Operation.....</i>	<i>4-1</i>
Basic Weigh (Model 672).....	4-2
Sample and Count.....	4-2
Quick Count (Model 675).....	4-3
Sample and Count.....	4-3

APW Lookup (Model 672 and Model 675)	4-4
Sample and Count.....	4-4
Counting Operation	4-6
Simple Keypad Sample.....	4-7
Negative Piece Sampling.....	4-8
Using Auto Enhance.....	4-8
Using Minimum Accuracy Assurance.....	4-9
Achieve Accuracy Less Than Required.....	4-9
Achieved Accuracy Met Requirements.....	4-9
Weigh Mode Operation	4-10
Time & Date.....	4-10
Accumulation.....	4-12
Multi-Range.....	4-13
Chapter 5 : Calibration	5-1
Quick Calibration	5-2
Quick Calibration Access.....	5-2
Exiting Setup Mode Calibration.....	5-2
Calibration Methods	5-2
General Notes on Calibration.....	5-3
New Zero.....	5-3
Last Zero.....	5-4
Temporary Zero.....	5-4
Only Zero.....	5-5
Reset Calibration.....	5-6
Known Loadcell Output.....	5-6
Remote Scale Calibration	5-7
Calibration Units	5-7
Mutli-Point Linearization	5-8
A/D Calibration	5-8
Printing A/D Calibration Values.....	5-9
Restoring A/D Calibration Values.....	5-10
Entering A/D Calibration Values.....	5-10
Restoring the Calibrated Zero Reference	5-11
Chapter 6 : Legal For Trade	6-1
NTEP Custom Setup.....	6-2
Sealing and Audit Trails.....	6-4
OIML Requirements.....	6-6
Data Storage Device (DSD)	6-7
Database Structure.....	6-7
Setup Parameters.....	6-10
DSD Function Selection Menu.....	6-11

Chapter 7 : Operating Parameters	7-1
Operating Parameter Identification.....	7-2
Parameter Instances	7-2
Accessing Operating Parameters	7-3
Mode Menu Access.....	7-5
Macro Access.....	7-6
Renaming Operating Parameters.....	7-6
Renaming Parameters in the Setup Mode.....	7-6
Renaming Parameters with Macros	7-7
Weight Parameters	7-7
Gross (Mode 0)	7-7
Net (Mode 1).....	7-8
Tare (Mode 2)	7-8
Accumulation Parameters.....	7-8
Gross Total (Mode 3).....	7-8
Gross Total + Current Gross (Mode 4).....	7-9
Gross Total – Current Gross (Mode 5)	7-9
Net Total (Mode 6)	7-9
Net Total + Current Net (Mode 7)	7-9
Net Total – Current Net (Mode 8)	7-9
Number of Accumulations (Mode 9).....	7-9
Scale Number (Mode 10).....	7-9
Time & Date	7-10
Time / Date (Mode 11)	7-10
Weight Averaging Parameters.....	7-11
Average Gross (Mode 15).....	7-11
Average Net (Mode 16)	7-11
Average Count (Mode 17)	7-12
Peak Weight Parameters.....	7-12
Peak Gross (Mode 18)	7-12
Peak Net (Mode 19).....	7-12
Rounded Weight Parameters.....	7-12
Rounded Gross (Parameter 20).....	7-13
Rounded Net (Parameter 21)	7-13
Rate Parameters.....	7-13
Rate (Mode 23)	7-13
Free Fall (Mode 24)	7-14
Future Gross (Mode 25).....	7-14
Future Net (Mode 26)	7-15
Free Fall 2 (Mode 27)	7-15
Future Gross 2 (Mode 28).....	7-15
Future Net 2 (Mode 29)	7-15

Counting Parameters.....	7-15
Quantity (Mode 30).....	7-15
Quantity Total (Mode 31).....	7-16
Quantity Total + Current Quantity (Mode 32).....	7-16
Quantity Total – Current Quantity (Mode 33).....	7-16
Average Piece Weight (Mode 34).....	7-16
Average Piece Weight x 1000 (Mode 35).....	7-17
Percent Accuracy (Mode 36).....	7-17
Last Sample Size (Mode 37).....	7-17
Remote Scale Parameters.....	7-17
Gross Total of All Scales (Mode 40).....	7-17
Net Total of All Scales (Mode 41).....	7-17
Tare Total of All Scales (Mode 42).....	7-17
Total of All Gross Totals (Mode 43).....	7-17
Total of All Net Totals (Mode 44).....	7-18
Quantity Total of All Scales (Mode 45).....	7-18
Total of All Quantity Totals (Mode 46).....	7-18
Extended Weight Parameters.....	7-18
Extended Resolution Gross (Mode 60).....	7-18
Extended Resolution Net (Mode 61).....	7-18
Extended Resolution Tare (Mode 62).....	7-18
A/D Conversion Number (Mode 63).....	7-18
DSD Parameters.....	7-19
DSD Parameters (Parameters 64.1 – 64.9).....	7-19
Setpoint Timers.....	7-20
Setpoint Countdown Timer (Parameter 76).....	7-20
Setpoint Delay Timer (Parameter 77).....	7-20
Setpoint Status (Parameter 78).....	7-20
Random Number.....	7-20
Random Number (Parameter 79).....	7-20
Variables.....	7-21
Variable Types (P80).....	7-21
Accessing Variables.....	7-22
Assigning Values To Variables.....	7-22
Independent Timers.....	7-26
Timer Ticks (Mode 81).....	7-27
Timer Seconds (Mode 82).....	7-27
Prompting Parameters.....	7-27
Macro Select (Mode 90).....	7-27
Weigh Mode Message (Mode 91).....	7-28
Get Displayed Data (Mode 92).....	7-30
Diagnostic Weight Parameters.....	7-31
Status (Parameter 97).....	7-31

Displayed Weight/Count (Parameter 98).....	7-31
Extended Gross (Parameter 99)	7-31
Chapter 8 : Communication	8-1
Communication Port Connections	8-2
Communication Port Setup Parameters.....	8-2
Receive Operations	8-2
Receive Buffer	8-2
Macro Language	8-3
Custom Transmit	8-6
Custom Transmit Setup Parameters.....	8-6
Default Custom Transmit.....	8-6
Sending a Custom Transmit.....	8-6
Defining A New Custom Transmit.....	8-7
Creating a Custom Transmit Table.....	8-7
Entering Fixed Text	8-7
Entering Control Codes.....	8-8
Custom GSE Control Codes	8-9
Entering Parameter Data.....	8-11
Parameter Format Codes.....	8-12
Navigating a Custom Transmit Table.....	8-12
Editing a Custom Transmit Table.....	8-14
Transmitting Display Data.....	8-17
Modbus™ Communications	8-18
Supported Modbus Commands.....	8-18
Setup Parameters.....	8-18
Modbus “Input” Setpoints.....	8-19
Modbus Protocol (RTU Mode).....	8-19
Other Setup Parameters.....	8-21
Modbus Packet Formats.....	8-22
Checksum Protocol.....	8-23
Printer Interface Example	8-26
Transmit the Current Scale Number (ASCII)	8-26
Miscellaneous Protocol (Binary to Text Conversion).....	8-26
Transmit Network Address (ASCII).....	8-27
Transmit Setpoint Status as a Binary Code	8-27
Printing Operations	8-28
Input Interpreter.....	8-28
Setup	8-29
General Setup and Comm Port Selections	8-29
Termination Character	8-30

Input Interpreter Type	8-30
Input Interpreter Entry Table (P222)	8-30
Input Specification Macro Number	8-31
Clear Interpreter	8-31
Operation.....	8-31
Trailing Data	8-31
Multiple Matches	8-32
Disabling the Input Interpreter.....	8-32
Using a String as a Parameter	8-32
Advanced Concepts	8-32
Input Interpreter Examples	8-33
RS-485 Networking (Option)	8-34
Setup	8-34
Operation.....	8-35
Network Protocol.....	8-35
Ethernet (Option).....	8-35
Setup	8-35
GSE Web Server.....	8-36
Telnet Client/Server	8-36
FTP Client.....	8-36
Modbus TCP/IP Slave (Server)	8-36
Chapter 9 : Macros	9-1
Macro Setup	9-2
Macro Setup Parameters	9-2
Using the Macro % Character.....	9-3
Creating a New Macro	9-4
Editing Macros.....	9-5
Deleting Macros.....	9-6
Invoking Macros	9-7
Front Panel Keypresses.....	9-7
Macro Menu.....	9-8
Setpoint Activation / Deactivation.....	9-9
Input Interpreter	9-9
Serial Data.....	9-9
Other Macros	9-9
Macro Execution	9-9
Macro Stack	9-10
Entry Buffer	9-11
Using Macros in the Setup Mode.....	9-14
Macro Abort.....	9-14
Disabling Macros at Power Up.....	9-15
Macro Language	9-16
Macro Commands.....	9-16

Complete Macro Command.....	9-21
%! Enable / Disable Comm Port.....	9-21
%” Select Comm Port	9-22
%# Current Scale.....	9-23
%%\$ Send Text	9-24
%%& Send Control Code.....	9-24
%’ Record Received Serial Data.....	9-25
%(If Character Received.....	9-26
%) Clear Receive Buffer	9-28
%%* Record A/D Data	9-29
%%+ Averaging.....	9-31
%, Motion Delay	9-31
%- Perform Scale Specific Function.....	9-32
A%. Audit Trail	9-33
B%. Battery Option (Model 675 Only).....	9-33
B%. Database Option Battery	9-34
%/ If Macro Interrupted	9-35
%%? Save/Restore Entry Buffer	9-36
%%@ Set Pause Time	9-37
%A Activate Setpoint	9-37
%B Break Macro.....	9-40
%C Display Text on 8x40 and 16x40 LCD.....	9-42
%C Draw Box / Line on 8x40 and 16x40 LCD	9-43
%C Place a Fixed Image on LCD.....	9-45
%C Animate Images on LCD.....	9-51
%D Deactivate Setpoint	9-54
%E End If.....	9-56
%F If Setpoint Deactivated	9-56
%G Get Entry	9-57
%H Redefine Comm Port Function.....	9-58
%I Refresh Display	9-60
%J Jump to Tag.....	9-61
%K Get Entry From 8x40 and 16x40 LCD.....	9-61

%K	If Entry Terminated By Function Key.....	9-63
%L	Language Selection	9-64
%M	Mode Selection	9-65
%N	Else (If Not).....	9-66
%O	If Setpoint Activated.....	9-66
%P	Pause.....	9-67
%Q	Send Custom Transmit.....	9-67
%R	Rename Mode.....	9-70
%S	Sound Beeper.....	9-71
%T	Tag Position	9-72
%U	Transmit Buffer	9-74
%W	Wait for Keypress	9-74
%X	Request Display Data.....	9-75
%Y	If Yes (Enter)	9-75
%[Save Entry Buffer	9-76
%\	If No Entry.....	9-76
%]	Restore Entry Buffer	9-77
%^	Call / Go To Macro	9-77
%_	If Database Error	9-78
%`	Scale Select.....	9-79
%a	Target Accuracy.....	9-80
%b	Perform Sample	9-81
%c	Clear Entry Buffer	9-82
%d	Display Control	9-82
%e	Enter / Sample.....	9-87
%f	If Parameter Preset.....	9-88
%g	Sample / Macro Error	9-88
%i	ID.....	9-90
%j	If Key/Remote Key Held	9-90
%j	Alpha Mode	9-91
%k	Digital Filter	9-92
%m	Modify String	9-93
%n	Get Numeric Entry	9-95

%o	Math Assignment	9-96
%o	Math Comparison	9-103
%o	String Concatenation	9-104
%p	Print.....	9-106
%q	Enable RS-485 Transmitter	9-106
%r	A/D Interval.....	9-107
%s	Select Mode.....	9-109
%t	Tare	9-109
%u	Units	9-110
%v	Write Value to FRAM	9-112
%w	DSD Database Functions.....	9-113
%y	Recall Row	9-117
%y	Update Row	9-118
%y	Make Row	9-118
%y	Print Database.....	9-119
%y	First / Last Row	9-120
%y	Next/Previous & Get/Recall Row	9-121
%y	Next Match	9-122
%y	Delete Row	9-123
%y	Clear Column	9-123
%y	Clear Database	9-124
%y	Set Database	9-124
%y	Set Column	9-124
%y	Download	9-125
%y	Print Row.....	9-127
%y	Print Database Errors	9-128
%y	Upload New.....	9-128
%y	Upload Update.....	9-129
%y	Sort Database	9-130
%y	Database Auto Test	9-131
%y	Database Show Links.....	9-131
%z	Zero	9-132
%{	Start Group.....	9-134

% Or	9-134
%} End Group	9-134
Boolean Logic	9-135
The “If” Statement.....	9-135
The “Else” (If Not) Statement.....	9-136
The ‘And’ Condition.....	9-136
The ‘Or’ Condition.....	9-137
Grouping “If” Statements.....	9-137
Nested “If” Statements.....	9-139
Pointers	9-141
Variable Pointers.....	9-141
Non-variable Pointers.....	9-142
Interrupt Macros	9-143
Invoking an Interrupt Macro.....	9-143
Macro Debug	9-144
Reviewing the Macro Debug Table.....	9-145
Clearing the Macro Debug.....	9-146
Using Macro Debug Macro Commands.....	9-146
Downloading Individual Macros.....	9-147
Chapter 10 : Information Parameters	10-1
Accessing Information Parameters	10-2
Navigating Information Parameters.....	10-2
Exiting Information Parameters.....	10-2
Memory Parameters	10-3
Flash Rom.....	10-3
FRAM.....	10-3
Allocating Database Memory for Setup Storage.....	10-5
Allocating Database Memory For Pile Ram.....	10-6
Processing Speed Parameters.....	10-7
Identification Parameters.....	10-8
Audit Trail Parameters.....	10-8
Calibration Parameters.....	10-8
Diagnostic Parameters.....	10-12
Utility Parameters.....	10-14
Chapter 11 : Troubleshooting	11-1
Error Messages	11-2
Operational Error Codes.....	11-2
Setup Mode Error Codes.....	11-2
Hardware Error Codes.....	11-3
Calibration Error Codes.....	11-4
General Error Codes.....	11-4
Macro Error Codes.....	11-6

Setup Error Codes	11-7
Communication Error Messages.....	11-7
Miscellaneous Messages.....	11-8
<i>Appendix A : ASCII Chart</i>	<i>A-1</i>
<i>Appendix B : LCD Character Set.....</i>	<i>B-2</i>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/GSE/672> and [675 technical reference manual.htm](https://the-checkout-tech.com/manuals/GSE/675)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)