

# *GSE*

## *Model 672 & Model 675*

### **COUNTING SCALES**



Technical Reference Manual  
Version 1.0

# Table of Contents

<b>Chapter 1 : Introduction</b> .....	<b>1-1</b>
<b>672 Standard Features</b> .....	<b>1-2</b>
<b>675 Standard Features</b> .....	<b>1-2</b>
<b>Explanation of Symbols</b> .....	<b>1-2</b>
<b>Specifications</b> .....	<b>1-3</b>
<b>Enclosure</b> .....	<b>1-4</b>
Model 672 .....	1-4
Model 675 .....	1-4
<b>Load Cell Removal and Installation</b> .....	<b>1-5</b>
Model 672 .....	1-5
Model 675 .....	1-5
<b>Display</b> .....	<b>1-6</b>
Model 672 .....	1-6
Model 675 .....	1-6
<b>Keypad</b> .....	<b>1-7</b>
Functions.....	1-7
Alpha Entry .....	1-8
Disabling Front Panel Keys .....	1-9
<b>Rear Panel</b> .....	<b>1-9</b>
Model 672 .....	1-9
Model 675 .....	1-10
Remote key connections .....	1-12
<b>Chapter 2 : Option Installation</b> .....	<b>2-1</b>
<b>Battery Module (Model 675 Only)</b> .....	<b>2-2</b>
Rechargeable Battery Option Installation.....	2-2
External Battery Charger .....	2-3
Battery Status Icons .....	2-4
Non-Rechargeable Battery Installation.....	2-5
<b>Option Mounting Bracket (Model 675 Only)</b> .....	<b>2-6</b>
<b>Remote Scale (Model 675)</b> .....	<b>2-7</b>
Third Scale Option .....	2-7
Fourth Scale .....	2-8
Setup Parameters.....	2-9
A/D Calibration.....	2-9
Scale Calibration.....	2-10
Weigh Mode Operation.....	2-10
<b>Communication</b> .....	<b>2-10</b>
Ethernet Interface Module .....	2-10

RS-232 Module (Model 675 Only).....	2-13
<b>RS- 485 Networking (675 Only).....</b>	<b>2-14</b>
<b>20 mA Current Loop Operation (675 Only).....</b>	<b>2-16</b>
<b>Database Option.....</b>	<b>2-17</b>
Database Setup Instructions.....	2-19
Database Menu.....	2-21
Print Format.....	2-32
FRAM Database.....	2-37
<b>Analog Output Option (Model 675 Only).....</b>	<b>2-37</b>
Installation Notes.....	2-38
Analog Output Parameter Setup.....	2-38
Analog Output Calibration.....	2-39
<b>Setpoint Option (Model 675 Only).....</b>	<b>2-39</b>
Setpoint Setup Instructions.....	2-41
<b>Reflash Software.....</b>	<b>2-46</b>
<b><i>Chapter 3 : Application Setup.....</i></b>	<b><i>3-1</i></b>
<b>Model 672.....</b>	<b>3-2</b>
F1 - Basic Weigh.....	3-2
F2 – GSE Custom.....	3-4
APW Lookup.....	3-4
F3 – GSE Default.....	3-10
<b>Model 675.....</b>	<b>3-11</b>
F1 – Quick Count.....	3-11
F2 – GSE Custom.....	3-15
APW Lookup.....	3-15
F3 – GSE Default.....	3-21
<b>Setup Mode.....</b>	<b>3-21</b>
Accessing the Parameter Setup Mode.....	3-21
Pin Number Access.....	3-23
Navigating Setup Parameters.....	3-23
Parameter Types.....	3-25
Exiting The Parameter Setup Mode.....	3-26
Downloading Setup Parameters.....	3-27
Setup Parameter Map.....	3-27
Parameter Descriptions.....	3-39
<b><i>Chapter 4 : Operation.....</i></b>	<b><i>4-1</i></b>
<b>Basic Weigh (Model 672).....</b>	<b>4-2</b>
Sample and Count.....	4-2
<b>Quick Count (Model 675).....</b>	<b>4-3</b>
Sample and Count.....	4-3

<b>APW Lookup (Model 672 and Model 675)</b> .....	<b>4-4</b>
Sample and Count .....	4-4
<b>Counting Operation</b> .....	<b>4-6</b>
Simple Keypad Sample.....	4-7
Negative Piece Sampling .....	4-8
Using Auto Enhance .....	4-8
Using Minimum Accuracy Assurance .....	4-9
Achieve Accuracy Less Than Required.....	4-9
Achieved Accuracy Met Requirements .....	4-9
<b>Weigh Mode Operation</b> .....	<b>4-10</b>
Time & Date .....	4-10
Accumulation.....	4-12
Multi-Range .....	4-13
<b>Chapter 5 : Calibration</b> .....	<b>5-1</b>
<b>Quick Calibration</b> .....	<b>5-2</b>
Quick Calibration Access .....	5-2
Exiting Setup Mode Calibration .....	5-2
<b>Calibration Methods</b> .....	<b>5-2</b>
General Notes on Calibration.....	5-3
New Zero .....	5-3
Last Zero .....	5-4
Temporary Zero .....	5-4
Only Zero .....	5-5
Reset Calibration.....	5-6
Known Loadcell Output.....	5-6
<b>Remote Scale Calibration</b> .....	<b>5-7</b>
<b>Calibration Units</b> .....	<b>5-7</b>
<b>Mutli-Point Linearization</b> .....	<b>5-8</b>
<b>A/D Calibration</b> .....	<b>5-8</b>
Printing A/D Calibration Values.....	5-9
Restoring A/D Calibration Values .....	5-10
Entering A/D Calibration Values.....	5-10
<b>Restoring the Calibrated Zero Reference</b> .....	<b>5-11</b>
<b>Chapter 6 : Legal For Trade</b> .....	<b>6-1</b>
NTEP Custom Setup.....	6-2
Sealing and Audit Trails .....	6-4
OIML Requirements .....	6-6
<b>Data Storage Device (DSD)</b> .....	<b>6-7</b>
Database Structure .....	6-7
Setup Parameters.....	6-10
DSD Function Selection Menu .....	6-11

<b>Chapter 7 : Operating Parameters .....</b>	<b>7-1</b>
<b>Operating Parameter Identification.....</b>	<b>7-2</b>
Parameter Instances .....	7-2
Accessing Operating Parameters .....	7-3
Mode Menu Access.....	7-5
Macro Access.....	7-6
<b>Renaming Operating Parameters.....</b>	<b>7-6</b>
Renaming Parameters in the Setup Mode.....	7-6
Renaming Parameters with Macros .....	7-7
<b>Weight Parameters .....</b>	<b>7-7</b>
Gross (Mode 0) .....	7-7
Net (Mode 1).....	7-8
Tare (Mode 2) .....	7-8
<b>Accumulation Parameters.....</b>	<b>7-8</b>
Gross Total (Mode 3).....	7-8
Gross Total + Current Gross (Mode 4).....	7-9
Gross Total – Current Gross (Mode 5) .....	7-9
Net Total (Mode 6) .....	7-9
Net Total + Current Net (Mode 7) .....	7-9
Net Total – Current Net (Mode 8) .....	7-9
Number of Accumulations (Mode 9).....	7-9
Scale Number (Mode 10).....	7-9
<b>Time &amp; Date .....</b>	<b>7-10</b>
Time / Date (Mode 11) .....	7-10
<b>Weight Averaging Parameters.....</b>	<b>7-11</b>
Average Gross (Mode 15).....	7-11
Average Net (Mode 16) .....	7-11
Average Count (Mode 17) .....	7-12
<b>Peak Weight Parameters.....</b>	<b>7-12</b>
Peak Gross (Mode 18) .....	7-12
Peak Net (Mode 19).....	7-12
<b>Rounded Weight Parameters.....</b>	<b>7-12</b>
Rounded Gross (Parameter 20).....	7-13
Rounded Net (Parameter 21) .....	7-13
<b>Rate Parameters.....</b>	<b>7-13</b>
Rate (Mode 23) .....	7-13
Free Fall (Mode 24) .....	7-14
Future Gross (Mode 25).....	7-14
Future Net (Mode 26) .....	7-15
Free Fall 2 (Mode 27) .....	7-15
Future Gross 2 (Mode 28).....	7-15
Future Net 2 (Mode 29) .....	7-15

<b>Counting Parameters.....</b>	<b>7-15</b>
Quantity (Mode 30).....	7-15
Quantity Total (Mode 31).....	7-16
Quantity Total + Current Quantity (Mode 32).....	7-16
Quantity Total – Current Quantity (Mode 33).....	7-16
Average Piece Weight (Mode 34).....	7-16
Average Piece Weight x 1000 (Mode 35).....	7-17
Percent Accuracy (Mode 36).....	7-17
Last Sample Size (Mode 37).....	7-17
<b>Remote Scale Parameters.....</b>	<b>7-17</b>
Gross Total of All Scales (Mode 40).....	7-17
Net Total of All Scales (Mode 41).....	7-17
Tare Total of All Scales (Mode 42).....	7-17
Total of All Gross Totals (Mode 43).....	7-17
Total of All Net Totals (Mode 44).....	7-18
Quantity Total of All Scales (Mode 45).....	7-18
Total of All Quantity Totals (Mode 46).....	7-18
<b>Extended Weight Parameters.....</b>	<b>7-18</b>
Extended Resolution Gross (Mode 60).....	7-18
Extended Resolution Net (Mode 61).....	7-18
Extended Resolution Tare (Mode 62).....	7-18
A/D Conversion Number (Mode 63).....	7-18
<b>DSD Parameters.....</b>	<b>7-19</b>
DSD Parameters (Parameters 64.1 – 64.9).....	7-19
<b>Setpoint Timers.....</b>	<b>7-20</b>
Setpoint Countdown Timer (Parameter 76).....	7-20
Setpoint Delay Timer (Parameter 77).....	7-20
Setpoint Status (Parameter 78).....	7-20
<b>Random Number.....</b>	<b>7-20</b>
Random Number (Parameter 79).....	7-20
<b>Variables.....</b>	<b>7-21</b>
Variable Types (P80).....	7-21
Accessing Variables.....	7-22
Assigning Values To Variables.....	7-22
<b>Independent Timers.....</b>	<b>7-26</b>
Timer Ticks (Mode 81).....	7-27
Timer Seconds (Mode 82).....	7-27
<b>Prompting Parameters.....</b>	<b>7-27</b>
Macro Select (Mode 90).....	7-27
Weigh Mode Message (Mode 91).....	7-28
Get Displayed Data (Mode 92).....	7-30
<b>Diagnostic Weight Parameters.....</b>	<b>7-31</b>
Status (Parameter 97).....	7-31

Displayed Weight/Count (Parameter 98).....	7-31
Extended Gross (Parameter 99) .....	7-31
<b>Chapter 8 : Communication .....</b>	<b>8-1</b>
<b>Communication Port Connections .....</b>	<b>8-2</b>
<b>Communication Port Setup Parameters.....</b>	<b>8-2</b>
<b>Receive Operations .....</b>	<b>8-2</b>
Receive Buffer .....	8-2
Macro Language .....	8-3
<b>Custom Transmit .....</b>	<b>8-6</b>
Custom Transmit Setup Parameters.....	8-6
Default Custom Transmit.....	8-6
Sending a Custom Transmit.....	8-6
Defining A New Custom Transmit.....	8-7
Creating a Custom Transmit Table.....	8-7
Entering Fixed Text .....	8-7
Entering Control Codes.....	8-8
Custom GSE Control Codes .....	8-9
Entering Parameter Data.....	8-11
Parameter Format Codes.....	8-12
Navigating a Custom Transmit Table.....	8-12
Editing a Custom Transmit Table.....	8-14
<b>Transmitting Display Data.....</b>	<b>8-17</b>
<b>Modbus™ Communications .....</b>	<b>8-18</b>
Supported Modbus Commands.....	8-18
Setup Parameters.....	8-18
Modbus “Input” Setpoints.....	8-19
Modbus Protocol (RTU Mode).....	8-19
Other Setup Parameters.....	8-21
Modbus Packet Formats.....	8-22
<b>Checksum Protocol.....</b>	<b>8-23</b>
Printer Interface Example .....	8-26
<b>Transmit the Current Scale Number (ASCII) .....</b>	<b>8-26</b>
<b>Miscellaneous Protocol (Binary to Text Conversion).....</b>	<b>8-26</b>
<b>Transmit Network Address (ASCII).....</b>	<b>8-27</b>
<b>Transmit Setpoint Status as a Binary Code .....</b>	<b>8-27</b>
<b>Printing Operations .....</b>	<b>8-28</b>
<b>Input Interpreter.....</b>	<b>8-28</b>
Setup .....	8-29
General Setup and Comm Port Selections .....	8-29
Termination Character .....	8-30

Input Interpreter Type .....	8-30
Input Interpreter Entry Table (P222) .....	8-30
Input Specification Macro Number .....	8-31
Clear Interpreter .....	8-31
Operation.....	8-31
Trailing Data .....	8-31
Multiple Matches .....	8-32
Disabling the Input Interpreter.....	8-32
Using a String as a Parameter .....	8-32
Advanced Concepts .....	8-32
Input Interpreter Examples .....	8-33
<b>RS-485 Networking (Option) .....</b>	<b>8-34</b>
Setup .....	8-34
Operation.....	8-35
Network Protocol.....	8-35
<b>Ethernet (Option).....</b>	<b>8-35</b>
Setup .....	8-35
GSE Web Server.....	8-36
Telnet Client/Server .....	8-36
FTP Client.....	8-36
Modbus TCP/IP Slave (Server) .....	8-36
<b>Chapter 9 : Macros .....</b>	<b>9-1</b>
<b>Macro Setup .....</b>	<b>9-2</b>
Macro Setup Parameters .....	9-2
Using the Macro % Character.....	9-3
Creating a New Macro .....	9-4
Editing Macros.....	9-5
Deleting Macros.....	9-6
<b>Invoking Macros .....</b>	<b>9-7</b>
Front Panel Keypresses.....	9-7
Macro Menu.....	9-8
Setpoint Activation / Deactivation.....	9-9
Input Interpreter .....	9-9
Serial Data.....	9-9
Other Macros .....	9-9
<b>Macro Execution .....</b>	<b>9-9</b>
Macro Stack .....	9-10
Entry Buffer .....	9-11
Using Macros in the Setup Mode.....	9-14
Macro Abort.....	9-14
Disabling Macros at Power Up.....	9-15
<b>Macro Language .....</b>	<b>9-16</b>
Macro Commands.....	9-16



Complete Macro Command.....	9-21
<b>%!</b> Enable / Disable Comm Port.....	9-21
<b>%”</b> Select Comm Port .....	9-22
<b>%#</b> Current Scale.....	9-23
<b>%%\$</b> Send Text .....	9-24
<b>%%&amp;</b> Send Control Code.....	9-24
<b>%’</b> Record Received Serial Data.....	9-25
<b>%(</b> If Character Received.....	9-26
<b>%)</b> Clear Receive Buffer .....	9-28
<b>%%*</b> Record A/D Data .....	9-29
<b>%%+</b> Averaging.....	9-31
<b>%,</b> Motion Delay .....	9-31
<b>%-</b> Perform Scale Specific Function.....	9-32
<b>A%. Audit Trail .....</b>	9-33
<b>B%. Battery Option (Model 675 Only).....</b>	9-33
<b>B%. Database Option Battery .....</b>	9-34
<b>%/ If Macro Interrupted .....</b>	9-35
<b>%%? Save/Restore Entry Buffer .....</b>	9-36
<b>%%@ Set Pause Time .....</b>	9-37
<b>%A Activate Setpoint .....</b>	9-37
<b>%B Break Macro.....</b>	9-40
<b>%C Display Text on 8x40 and 16x40 LCD.....</b>	9-42
<b>%C Draw Box / Line on 8x40 and 16x40 LCD .....</b>	9-43
<b>%C Place a Fixed Image on LCD.....</b>	9-45
<b>%C Animate Images on LCD.....</b>	9-51
<b>%D Deactivate Setpoint .....</b>	9-54
<b>%E End If.....</b>	9-56
<b>%F If Setpoint Deactivated .....</b>	9-56
<b>%G Get Entry .....</b>	9-57
<b>%H Redefine Comm Port Function.....</b>	9-58
<b>%I Refresh Display .....</b>	9-60
<b>%J Jump to Tag.....</b>	9-61
<b>%K Get Entry From 8x40 and 16x40 LCD.....</b>	9-61

<b>%K</b>	<b>If Entry Terminated By Function Key.....</b>	<b>9-63</b>
<b>%L</b>	<b>Language Selection .....</b>	<b>9-64</b>
<b>%M</b>	<b>Mode Selection .....</b>	<b>9-65</b>
<b>%N</b>	<b>Else (If Not).....</b>	<b>9-66</b>
<b>%O</b>	<b>If Setpoint Activated.....</b>	<b>9-66</b>
<b>%P</b>	<b>Pause.....</b>	<b>9-67</b>
<b>%Q</b>	<b>Send Custom Transmit.....</b>	<b>9-67</b>
<b>%R</b>	<b>Rename Mode.....</b>	<b>9-70</b>
<b>%S</b>	<b>Sound Beeper.....</b>	<b>9-71</b>
<b>%T</b>	<b>Tag Position .....</b>	<b>9-72</b>
<b>%U</b>	<b>Transmit Buffer .....</b>	<b>9-74</b>
<b>%W</b>	<b>Wait for Keypress .....</b>	<b>9-74</b>
<b>%X</b>	<b>Request Display Data.....</b>	<b>9-75</b>
<b>%Y</b>	<b>If Yes (Enter) .....</b>	<b>9-75</b>
<b>%[</b>	<b>Save Entry Buffer .....</b>	<b>9-76</b>
<b>%\</b>	<b>If No Entry.....</b>	<b>9-76</b>
<b>%]</b>	<b>Restore Entry Buffer .....</b>	<b>9-77</b>
<b>%^</b>	<b>Call / Go To Macro .....</b>	<b>9-77</b>
<b>%_</b>	<b>If Database Error .....</b>	<b>9-78</b>
<b>%`</b>	<b>Scale Select.....</b>	<b>9-79</b>
<b>%a</b>	<b>Target Accuracy.....</b>	<b>9-80</b>
<b>%b</b>	<b>Perform Sample .....</b>	<b>9-81</b>
<b>%c</b>	<b>Clear Entry Buffer .....</b>	<b>9-82</b>
<b>%d</b>	<b>Display Control .....</b>	<b>9-82</b>
<b>%e</b>	<b>Enter / Sample.....</b>	<b>9-87</b>
<b>%f</b>	<b>If Parameter Preset.....</b>	<b>9-88</b>
<b>%g</b>	<b>Sample / Macro Error .....</b>	<b>9-88</b>
<b>%i</b>	<b>ID.....</b>	<b>9-90</b>
<b>%j</b>	<b>If Key/Remote Key Held .....</b>	<b>9-90</b>
<b>%j</b>	<b>Alpha Mode .....</b>	<b>9-91</b>
<b>%k</b>	<b>Digital Filter .....</b>	<b>9-92</b>
<b>%m</b>	<b>Modify String .....</b>	<b>9-93</b>
<b>%n</b>	<b>Get Numeric Entry .....</b>	<b>9-95</b>

<b>%o</b>	<b>Math Assignment .....</b>	<b>9-96</b>
<b>%o</b>	<b>Math Comparison .....</b>	<b>9-103</b>
<b>%o</b>	<b>String Concatenation .....</b>	<b>9-104</b>
<b>%p</b>	<b>Print.....</b>	<b>9-106</b>
<b>%q</b>	<b>Enable RS-485 Transmitter .....</b>	<b>9-106</b>
<b>%r</b>	<b>A/D Interval.....</b>	<b>9-107</b>
<b>%s</b>	<b>Select Mode.....</b>	<b>9-109</b>
<b>%t</b>	<b>Tare .....</b>	<b>9-109</b>
<b>%u</b>	<b>Units .....</b>	<b>9-110</b>
<b>%v</b>	<b>Write Value to FRAM .....</b>	<b>9-112</b>
<b>%w</b>	<b>DSD Database Functions.....</b>	<b>9-113</b>
<b>%y</b>	<b>Recall Row .....</b>	<b>9-117</b>
<b>%y</b>	<b>Update Row .....</b>	<b>9-118</b>
<b>%y</b>	<b>Make Row .....</b>	<b>9-118</b>
<b>%y</b>	<b>Print Database.....</b>	<b>9-119</b>
<b>%y</b>	<b>First / Last Row .....</b>	<b>9-120</b>
<b>%y</b>	<b>Next/Previous &amp; Get/Recall Row .....</b>	<b>9-121</b>
<b>%y</b>	<b>Next Match .....</b>	<b>9-122</b>
<b>%y</b>	<b>Delete Row .....</b>	<b>9-123</b>
<b>%y</b>	<b>Clear Column .....</b>	<b>9-123</b>
<b>%y</b>	<b>Clear Database .....</b>	<b>9-124</b>
<b>%y</b>	<b>Set Database .....</b>	<b>9-124</b>
<b>%y</b>	<b>Set Column .....</b>	<b>9-124</b>
<b>%y</b>	<b>Download .....</b>	<b>9-125</b>
<b>%y</b>	<b>Print Row.....</b>	<b>9-127</b>
<b>%y</b>	<b>Print Database Errors .....</b>	<b>9-128</b>
<b>%y</b>	<b>Upload New.....</b>	<b>9-128</b>
<b>%y</b>	<b>Upload Update.....</b>	<b>9-129</b>
<b>%y</b>	<b>Sort Database .....</b>	<b>9-130</b>
<b>%y</b>	<b>Database Auto Test .....</b>	<b>9-131</b>
<b>%y</b>	<b>Database Show Links.....</b>	<b>9-131</b>
<b>%z</b>	<b>Zero .....</b>	<b>9-132</b>
<b>%{</b>	<b>Start Group.....</b>	<b>9-134</b>

%	<b>Or</b> .....	<b>9-134</b>
%}	<b>End Group</b> .....	<b>9-134</b>
	<b>Boolean Logic</b> .....	<b>9-135</b>
	The “If” Statement.....	9-135
	The “Else” (If Not) Statement.....	9-136
	The ‘And’ Condition.....	9-136
	The ‘Or’ Condition.....	9-137
	Grouping “If” Statements.....	9-137
	Nested “If” Statements.....	9-139
	<b>Pointers</b> .....	<b>9-141</b>
	Variable Pointers.....	9-141
	Non-variable Pointers.....	9-142
	<b>Interrupt Macros</b> .....	<b>9-143</b>
	Invoking an Interrupt Macro.....	9-143
	<b>Macro Debug</b> .....	<b>9-144</b>
	Reviewing the Macro Debug Table.....	9-145
	Clearing the Macro Debug.....	9-146
	Using Macro Debug Macro Commands.....	9-146
	Downloading Individual Macros.....	9-147
	<b>Chapter 10 : Information Parameters</b> .....	<b>10-1</b>
	<b>Accessing Information Parameters</b> .....	<b>10-2</b>
	Navigating Information Parameters.....	10-2
	Exiting Information Parameters.....	10-2
	<b>Memory Parameters</b> .....	<b>10-3</b>
	Flash Rom.....	10-3
	FRAM.....	10-3
	Allocating Database Memory for Setup Storage.....	10-5
	Allocating Database Memory For Pile Ram.....	10-6
	Processing Speed Parameters.....	10-7
	Identification Parameters.....	10-8
	Audit Trail Parameters.....	10-8
	Calibration Parameters.....	10-8
	Diagnostic Parameters.....	10-12
	Utility Parameters.....	10-14
	<b>Chapter 11 : Troubleshooting</b> .....	<b>11-1</b>
	<b>Error Messages</b> .....	<b>11-2</b>
	Operational Error Codes.....	11-2
	Setup Mode Error Codes.....	11-2
	Hardware Error Codes.....	11-3
	Calibration Error Codes.....	11-4
	General Error Codes.....	11-4
	Macro Error Codes.....	11-6

Setup Error Codes .....	11-7
Communication Error Messages.....	11-7
Miscellaneous Messages.....	11-8
<b><i>Appendix A : ASCII Chart .....</i></b>	<b><i>A-1</i></b>
<b><i>Appendix B : LCD Character Set.....</i></b>	<b><i>B-2</i></b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*