



# FREEDOM / B SERIES

## DISTRIBUTOR MANUAL

DISTRIBUTOR MANUAL INDEX  
FREEDOM MODELS

Title	Page
=====	
SECTION 1 General	1-1
General Description	1-1
Receiving Inspection	
SECTION 2 Features	2-1 thru 2-4
Standard Features	2-5
Options and Accessories	2-5
Regulatory Specifications	2-6
Technical Specifications	
SECTION 3 Operation	3-1
Power up / Power down	3-2
Front Panel Description	3-3
General Operating Procedure	3-4
Pushbutton Functions	3-8
Weighing Operating Procedures	3-13
Beep Tone Length	3-13
Time and Date Setting	
SECTION 4 Connections and Jumpers	
Front and Back Panel Drawing	Fig. 1 4-1
Interconnections Drawing	Fig. 2 4-2
Load Cell Wiring Table	Fig. 3 4-3
Serial Interface Wiring	Fig. 4 4-4
Setpoint and Pushbutton Wiring	Fig. 5 4-4
Jumper Locations	Fig. 6 4-5
Error Messages	4-6
SECTION 5 Setup and Calibration	5-1
Setup Overview	5-2
Initial Setup and Calibration	5-4
Setup Functions	5-4
Setup Lock	5-4
F1 - Calibration	5-8
F2 - Units #2 Calibration	5-10
F3 - Tare's, ID's + Setpoints	5-12
F4 - AZM, Motion + Filtering	5-14
F5 - Serial Interface #1	5-16
F6 - Serial Interface #2	5-17
F7 - Programmable Features (APS & PPF)	5-18
F9 - Scale Setup Functions	

(continued) DISTRIBUTOR MANUAL INDEX  
FREEDOM MODELS

Title	Page
=====	=====
SECTION 6 Automatic Program Sequence (APS)	
APS Overview	6-1
Programming Definitions	6-2
Programming Sequence	6-7
Printing the Program	6-8
APS Operation	6-8
APS Examples	6-9
Blank Programming Sheet	6-15
SECTION 7 Programmable Print Format (PPF)	
Overview	7-1
Format Design	7-1
Definitions	7-1
Design Instructions	7-4
Example	7-5
Blank Programming Sheet	7-7
PPF Layout Sheet	7-8
SECTION 8 Communications Interface	
Overview	8-1
Computer Interface Protocol	8-2
"X" Command	8-3
Scoreboard Protocol	8-4
Freedom Remote Control Commands	8-6
APPENDIX A Setup Chart	A-1
APPENDIX B Weight Units Conversion Table	B-1
APPENDIX C ASCII Code Tables	C-1
WARRANTY	

# ALPHABETICAL INDEX FOR FREQUENTLY USED REFERENCE SECTIONS

<u>TITLE</u>	<u>PAGE #</u>
Automatic Program Sequence	6-1 to 6-15
ASCII Code Tables	C-1
Computer Select	5-16
Communications Overview	8-1
Computer Interface Protocol	8-2
Date Setting	3-13
Error Messages	4-6
Features	2-1 to 2-5
Interconnections	4-2, 4-4, 4-4A
Jumpers	4-5, 5-2
Operating Procedures	3-8
Power Up	3-1
Pushbutton Descriptions	3-2
Pushbutton Functions	3-4
Print Operation	3-11
Printer Set-Up	5-14
Programmable Print Format	7-1
Quick Span	5-9
Specifications	2-6
Serial Interface	4-4
Set-Up and Calibration	5-1 to 5-19
Set-Up Lock	5-4
Scoreboard Protocol	8-4
Set-Up Chart	A-1
Time Setting	3-13
Tare Set-Up	5-10
Weight Conversion Table	B-1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/GSE/Freedom B Series user manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)