User's Guide for the RSD3000 Series of Remote Serial Displays

TABLE OF CONTENTS

SECTION I - INTRODUCTION
RSD3000 SERIES
SECTION II - SETTING UP THE RSD
CONFIGURATION 5 PUSHBUTTONS FOR CONFIGURATION 5 TYPICAL LOADING OF PARAMETERS 5 ORDER OF CONFIGURATION 6 HOST INSTRUMENT 6 RECEIVE SERIAL PARAMETERS 7 RECEIVE TIME-OUT 7 TRANSMIT SERIAL PARAMETERS 8 LIMITATIONS OF TRANSMIT BAUD RATE 8 TRANSMIT MODE 9 SCALE CONVERSION 9 FUNCTION KEYS 10 AUTO FUNCTION KEY CONFIGURATION 10 RELAYS - RRB3000 OPTION 11 INTERNAL SETPOINTS 11,12
RELAY INVERSIONS
WEIGHING INSTRUMENT (SIMPLEX) 13 WEIGHING INSTRUMENT WITH FUNCTION KEYS 13 PRINTER OF OTHER DEVICE 14 PUSHBUTTONS 14 POWER 14 RELAY BOARD (RRB3000) 15 FUSES 15
SECTION IV - INSTRUMENT PARAMETERS
GSE550/570 - INSTRUMENT MODE 0 - NORMAL 16 GSE550/570 - INSTRUMENT MODE 0 - PRINTER PASS-THROUGH 16 GSE550/570 - INSTRUMENT MODE 0 - SCALE CONVERSION 16 GSE622/625 - INSTRUMENT MODE 1 - NORMAL 16 GSE622/625 - INSTRUMENT MODE 1 - PRINTER PASS-THROUGH 16 GSE622/625 - INSTRUMENT MODE 2 - SCALE CONVERSION 17 CONDEC - INSTRUMENT MODE 8 - UMC2000 SERIES, UMC600/550/440 17 WEIGHTRONIX - INSTRUMENT MODE 9 - BASIC 17 PENNSYLVANIA SCALE - INSTRUMENT MODE 10 - BASIC 17
SECTION V - APPLICATIONS
GSE622/625 WITH PRINTER PASS-THROUGH18 SECTION VI - DIAGRAMS
RRB3000 MOUNTING

This manual is for program version 3.00 and above.

This is a "Table of Contents preview" for quality assurance

The full manual can be found at http://the-checkout-tech.com/estore/catalog/

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<u>http://the-checkout-tech.com</u>: the biggest supplier of cash register and scale manuals on the net