

Operating manual

600 Hz Measuring
Amplifier

ME30

Contents	Page
Safety instructions	4
1 Measuring Amplifiers on Eurocards ME30	8
2 Electrical Connection	9
2.1 Transducer Connection	9
2.2 Supply Voltage	10
2.3 Output	10
2.4 Supply Voltage for Additional Units	10
2.5 Pin Assignment	11
3 Putting into Operation	12
3.1 Select Measuring Range	12
3.2 Bridge Zero Balancing	12
3.3 MR Fine Adjustment	12
4 Individual Settings	14
4.1 Operational Setting	14
4.2 Setting the Measuring Range	14
4.3 External Fine Balancing of the MR1	15
4.4 Bridge Fine Balancing	16
4.5 Calibration signal	16
4.6 Measuring Frequency Range / Cut-off Frequency f_{co}	17
4.7 Synchronization	17
5 Options	18
5.1 Stabilized Power Supply	18
5.2 DC-DC Converter	18
5.3 Current Output Module	19
5.4 Safety Barriers for use in Hazardous Areas	19
5.5 Additional Units	19
6 General Notes	20
6.1 Disturbances	20
7 Technical Data	21
8 Component Layout	23
9 Copy of Declaration of Conformity	24

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/hbm/ME-30 operating manual.html](https://the-checkout-tech.com/manuals/hbm/ME-30%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)