

Operating manual



PME industrial
measurement
electronics linked
to a field bus

MP55 module

Contents	Page
Safety instructions	4
1 Introduction	7
1.1 List of components and accessories supplied	7
1.2 Introduction	7
2 Choose amplifier settings with the aid of DIP switches	8
3 Fitting/removing the MP55	12
3.1 Linking several modules	13
4 Connections	14
4.1 Functional overview of the MP55	14
4.2 Supply voltage and remote contact I/Os	15
4.2.1 External supply voltage for the control I/Os	16
4.3 Transducers	17
4.4 CAN-interface	19
4.5 Synchronisation	20
5 Setting up and operation (MP55)	21
5.1 Operating principles	21
5.2 Commissioning	24
5.3 Overview of all groups and parameters	25
5.3.1 Set up all parameters	26
6 Declaring the significant parameters	30
7 CAN interface description	38
7.1 Introduction	38
7.2 Cyclical data transmission	38
7.3 Parameter assignment	39
7.4 Object directory: communications profile section as defined in CANopen (CiA-DS301)	41
7.5 Object directory: manufacturer-specific objects	44
7.6 Manufacturer-specific objects in FLOAT data format	53
7.7 Examples	55
8 Error messages/operating status (LED)	57
9 Specifications	60
10 Keyword index	63

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/hbm/MP-55 operating manual.html](https://the-checkout-tech.com/manuals/hbm/MP-55%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)