

Operating manual

Measuring amplifier in
desktop housing

SCOUT55



A0236-5.3 en



Contents	Page
Safety instructions	5
1 Introduction	7
1.1 Scope of supply	7
1.2 General	8
1.3 Block diagram	8
2 Connections	9
2.1 Factory settings	9
2.2 Changing the factory settings	9
2.2.1 Setting the analogue output signal	10
2.2.2 Choosing the operating mode for synchronisation	10
2.3 Connecting the voltage supply	10
2.3.1 Changing the mains voltage selection/replacing the fuse	11
2.3.2 Device mounting	12
2.4 Transducer connection	12
2.5 Analogue output	14
2.6 Control inputs / outputs	15
2.7 Synchronisation	16
2.8 Connecting the serial interface	17
3 Setting up and operation	17
3.1 Commissioning and factory settings	17
3.2 Control concept and functional overview	24
3.3 Button functions in measuring mode	25
3.3.1 Querying and setting limit values in measuring mode	25
3.4 Button functions in programming mode	27
3.4.1 Changing from “Measuring” mode to “Programming” mode	27
3.4.2 Programming	28
3.4.3 Switching from “Programming” operating mode to “Measuring” operating mode	29
3.5 Overview of all groups and parameters	30
3.5.1 Setting all parameters	31
3.5.2 Dialogue	34
3.5.3 Load/Save in parameter set (PARAM. SET)	34
3.5.4 Adaptation	34

3.5.5 Calibration (CALIBR.)	37
3.5.6 Limit values 1...4 (LIMITVAL.1...4)	38
3.5.7 Set peak value store (PV STORE)	39
3.5.8 Inputs and outputs (IN/OUT)	41
3.5.9 Additional functions (ADD. FUNCT)	44
4 Example	46
5 Error messages	55
6 Specifications	56
7 Keyword index	61

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/hbm/Scout-55 operating manual.html](https://the-checkout-tech.com/manuals/hbm/Scout-55%20operating%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)