

Weighing Indicator WE2107

Contents

Contents	3
Typographical conventions	9
Important information	10
Safety information	11
1 Introduction and appropriate use	13
2 Special features	14
3 Mechanical construction and scope of supply	15
4 Scale commissioning overview	17
4.1 NAWI application (with / without limit values).....	18
4.2 NAWI application (counting scale function).....	19
4.3 Batching and tank weighing applications.....	20
5 Electrical connections	21
5.1 Notes.....	21
5.2 Cable entry.....	21
5.3 Cable preparation.....	22
5.4 Load cell connection.....	23
5.5 Process outputs.....	24
5.6 Operating voltage.....	24
5.7 Process inputs / analog output.....	25
5.8 WE2107 - RS232 interfaces.....	26
5.9 WE2107M - RS232 and RS485 serial interfaces (2-wire).....	26
5.10 Comments.....	27

6	Control and display functions.....	28
6.1	Device view.....	28
6.2	Operator controls	29
6.3	Display.....	30
7	Basic scale functions.....	31
7.1	Switching on and off.....	32
7.2	Gross/net selection	32
7.3	Taring	33
7.4	Manual tare function.....	33
7.5	Initial zero setting	34
7.6	Error displays.....	34
7.7	Standstill recognition	35
7.8	Function keys "F1" / "F2"	35
7.9	External operator controls	35
8	Parameter menu	36
8.1	Calling the Parameter menu.....	36
8.2	Disabling / enabling menu functions	36
8.3	Main menu.....	37
8.4	Navigation in the parameter menu.....	38
8.4.1	Navigation in levels 1 and 2.....	38
8.4.2	Navigation in the third parameter level.....	39
8.5	Full menu structure	42
8.5.1	Information sub-menu.....	42
8.5.2	Selecting a print protocol and starting printing.....	43
8.5.3	Limit value switches and dosing/filling parameters	44
8.5.4	Filter settings, manual tare value and counting function	46
8.5.5	Settings for the COM1/2 communications port	47
8.5.6	Print protocol settings, adjusting the real-time clock.....	50

8.5.7	Function of digital inputs IN1 and IN2	52
8.5.8	Function of keys F1 and F2	53
8.5.9	Test functions	56
8.5.10	Basic scale function, menu access selection and legal-for-trade operation	57
8.5.11	Setting and adjusting the scale	59
8.5.12	Restoring factory settings	62
8.5.13	Switching off the device	62
9	Filter selection	63
10	Scale adjustment	64
10.1	Prerequisites for scale adjustment	64
10.2	Maximum capacity adjustment at calibration weight (standard method, CAP = CAL)	65
10.3	Partial load adjustment with the calibration weight (CAL <> CAP)	66
10.4	Adjustment without a calibration weight (mV/V adjustment)	67
10.5	Multi-range scale	69
10.6	Taking gravitational acceleration into account	69
11	Linearization	71
12	Legal-for-trade applications	73
13	Functions of keys F1 and F2	77
14	Counting scale	79
15	Print function	82
15.1	Activating COM2 for the print function	82
15.2	Linking the WE2107 to the printer	83
15.3	Print protocol selection	84
15.4	Starting printing	84
15.5	Different print protocols	85
15.6	Formatting the printout	86

15.7	Setting the date and time.....	89
15.8	Summation function	90
16	Interface for a second display.....	91
16.1	Activating COM2 for the second display	91
16.2	Linking the WE2107 to the second display	92
16.3	Selecting telegram content.....	93
17	Function of the digital inputs	94
17.1	Electrical properties and level assignment	96
18	Function of the digital outputs.....	97
19	Limit values	98
20	Batching and tank weighing.....	99
20.1	Overview	99
20.2	Batching (FILL1, portion weighing)	100
20.2.1	Digital inputs/outputs	101
20.2.2	Parameters	101
20.2.3	Description of the dosing cycle	103
20.3	Tank weighing (FILL2).....	105
20.3.1	Digital inputs/outputs	106
20.3.2	Parameters	106
20.3.3	Description of the dosing cycle (portion weighing).....	108
20.3.4	Description of tank filling.....	109
20.3.5	Description of the emptying function	110
20.4	Tank weighing (FILL3).....	111
20.4.1	Digital outputs	111
20.4.2	Parameters	111
20.4.3	Description of the dosing cycle (portion weighing).....	112
20.4.4	Description of tank filling.....	112
20.4.5	Description of the emptying function	112

21	Analog output (4 - 20 mA)	113
22	Alibi and calibration memory	113
22.1	Calibration memory	114
22.2	Alibi memory	115
23	Parameter factory settings	115
24	Monitoring functions and error messages	117
24.1	Monitoring functions	117
24.2	Error messages	118
25	Maintenance and cleaning	120
26	Mechanical dimensions and mounting information	122
26.1	WE2107 dimensions (plastic housing, ABS)	122
26.2	WE2107M dimensions (stainless steel front panel)	123
26.3	Wall mounting (WE2107, plastic housing).....	124
26.4	Mounting on a stand (WE2107 in plastic housing)	126
26.5	Using as a desktop device (WE2107 in plastic housing)	127
26.6	Panel mounting (WE2107M with stainless-steel front panel)	127
26.7	Sealing / legal-for-trade capability.....	128
26.8	Notes on the achievable degree of protection	128
27	Specifications	129
	Index	133

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/hbm/WE-2107> Weighing Indicator operating man

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)