

# Reference Manual

Scale electronic unit  
(NAWI)

**WE2108...**  
(P83...P85)

WE2108S



WE2108



WE2108M



Content	Page
<b>Safety instructions .....</b>	<b>7</b>
<b>1      Typographic Conventions .....</b>	<b>11</b>
<b>2      Commissioning .....</b>	<b>12</b>
2.1    Notes on cabling .....	12
<b>3      Short description .....</b>	<b>13</b>
3.1    Scope of supply .....	13
3.1.1 WE2108 unit view .....	14
3.1.2 Operating elements .....	14
3.1.3 Display .....	15
3.2    Connections .....	16
3.2.1 Cable entry .....	17
3.2.2 Preparation of the cables .....	17
3.2.3 Load cell connection .....	17
3.2.4 Process Outputs .....	18
3.2.5 WE2108 operating voltage .....	18
3.2.6 Process Inputs .....	18
3.2.7 RS-232 interface (only RS-232 versions) .....	19
3.2.8 RS-485 interface (only RS-485 versions) .....	19
3.2.9 Remarks .....	19
<b>4      Installation .....</b>	<b>20</b>
4.1    Wall mounting (WE2108 in a plastic housing) .....	20
4.2    Mounting on a stand (WE2108 in a plastic housing) .....	21
4.3    Use as desktop unit (WE2108 in a plastic housing) .....	22
4.4    Wall mounting / desktop unit (WE2108S in a stainless steel housing) .....	22
4.5    Control panel assembly (WE2108M in a stainless steel housing)	22
4.6    Sealing / calibration ability .....	23
4.7    Information on achievable type of protection .....	23
<b>5      Operation .....</b>	<b>24</b>

5.1	Basic functions . . . . .	25
5.1.1	Switching on and off . . . . .	25
5.1.2	Zeroing . . . . .	25
5.1.3	Taring . . . . .	26
5.1.4	Gross/Net . . . . .	26
5.1.5	Printing . . . . .	26
5.1.6	Preset tare . . . . .	26
5.1.7	Display lighting . . . . .	27
5.1.8	External operating elements . . . . .	27
5.1.9	Counting scale . . . . .	27
5.1.10	Parameter setting . . . . .	28
5.1.11	Error displays . . . . .	29
5.1.12	Stillstand . . . . .	29
5.2	Menu operation . . . . .	30
5.2.1	Menu Overview . . . . .	30
5.2.2	Example: Setting the parameter "CAP 1" . . . . .	32
5.2.3	Complete menu structure . . . . .	33
5.3	Explanations for the settings . . . . .	39
5.3.1	Display limits . . . . .	39
5.3.2	Tare value . . . . .	39
5.3.3	Standstill criterion . . . . .	41
<b>6</b>	<b>Calibration . . . . .</b>	<b>42</b>
6.1	Quick start without special functions . . . . .	42
6.1.1	Setting to the nominal data of the scale . . . . .	42
6.1.2	Calibration (standard method) . . . . .	42
6.1.3	Part load calibration . . . . .	43
6.1.4	Setting for legal for trade . . . . .	43
6.2	Special applications . . . . .	44
6.3	Calibration with linearization . . . . .	45
6.3.1	Selection of the calibration method with the "Lin" parameter . . . . .	45
6.3.2	Calibration steps for linearization (3 or 4 points) . . . . .	45
6.4	Direct entry of the characteristic values . . . . .	47
6.4.1	Calibrating with calculated values . . . . .	48
6.5	Influence of the geographical installation site . . . . .	49

6.6	Access authorization . . . . .	50
6.6.1	Pushbutton lock . . . . .	51
6.7	Selection of suitable load cells . . . . .	51
6.7.1	Division number: . . . . .	51
6.7.2	Supply voltage and measuring signal: . . . . .	51
6.7.3	Dead load and nominal value: . . . . .	52
<b>7</b>	<b>Further functions . . . . .</b>	<b>53</b>
7.1	Filtering . . . . .	53
7.1.1	Filter and standstill . . . . .	53
7.1.2	Special filter for animal scales . . . . .	53
7.2	Limit outputs . . . . .	54
7.3	Inputs . . . . .	55
7.4	Printing function . . . . .	57
7.5	Formatting of the printing output . . . . .	58
7.5.1	Example . . . . .	59
7.6	Setting the time . . . . .	59
7.7	Summing function . . . . .	59
7.7.1	Overview . . . . .	59
7.7.2	Functions in the menu Add (new) . . . . .	60
7.7.3	Permitted range . . . . .	60
7.7.4	Deletion of the sums . . . . .	61
7.7.5	Summing function during counting scale operation . . . . .	61
7.7.6	Print . . . . .	62
7.8	Interface for large display (second display) . . . . .	63
<b>8</b>	<b>Troubleshooting . . . . .</b>	<b>64</b>
<b>9</b>	<b>Specifications . . . . .</b>	<b>66</b>
9.1	Specifications WE2108 in ABS-housing . . . . .	66
9.2	Dimensions WE2108 in ABS-housing . . . . .	67
9.3	Specifications WE2108S/WE2108M in steel-housing . . . . .	68
9.4	Dimensions WE2108S/WE2108M in steel-housing . . . . .	69

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net