

Reference Manual

Scale electronic unit
(NAWI)

WE2108...
(P83...P85)

WE2108S



WE2108



WE2108M



Content	Page
Safety instructions	7
1 Typographic Conventions	11
2 Commissioning	12
2.1 Notes on cabling	12
3 Short description	13
3.1 Scope of supply	13
3.1.1 WE2108 unit view	14
3.1.2 Operating elements	14
3.1.3 Display	15
3.2 Connections	16
3.2.1 Cable entry	17
3.2.2 Preparation of the cables	17
3.2.3 Load cell connection	17
3.2.4 Process Outputs	18
3.2.5 WE2108 operating voltage	18
3.2.6 Process Inputs	18
3.2.7 RS-232 interface (only RS-232 versions)	19
3.2.8 RS-485 interface (only RS-485 versions)	19
3.2.9 Remarks	19
4 Installation	20
4.1 Wall mounting (WE2108 in a plastic housing)	20
4.2 Mounting on a stand (WE2108 in a plastic housing)	21
4.3 Use as desktop unit (WE2108 in a plastic housing)	22
4.4 Wall mounting / desktop unit (WE2108S in a stainless steel housing)	22
4.5 Control panel assembly (WE2108M in a stainless steel housing)	22
4.6 Sealing / calibration ability	23
4.7 Information on achievable type of protection	23
5 Operation	24

5.1	Basic functions	25
5.1.1	Switching on and off	25
5.1.2	Zeroing	25
5.1.3	Taring	26
5.1.4	Gross/Net	26
5.1.5	Printing	26
5.1.6	Preset tare	26
5.1.7	Display lighting	27
5.1.8	External operating elements	27
5.1.9	Counting scale	27
5.1.10	Parameter setting	28
5.1.11	Error displays	29
5.1.12	Stillstand	29
5.2	Menu operation	30
5.2.1	Menu Overview	30
5.2.2	Example: Setting the parameter "CAP 1"	32
5.2.3	Complete menu structure	33
5.3	Explanations for the settings	39
5.3.1	Display limits	39
5.3.2	Tare value	39
5.3.3	Standstill criterion	41
6	Calibration	42
6.1	Quick start without special functions	42
6.1.1	Setting to the nominal data of the scale	42
6.1.2	Calibration (standard method)	42
6.1.3	Part load calibration	43
6.1.4	Setting for legal for trade	43
6.2	Special applications	44
6.3	Calibration with linearization	45
6.3.1	Selection of the calibration method with the "Lin" parameter ...	45
6.3.2	Calibration steps for linearization (3 or 4 points)	45
6.4	Direct entry of the characteristic values	47
6.4.1	Calibrating with calculated values	48
6.5	Influence of the geographical installation site	49

6.6	Access authorization	50
6.6.1	Pushbutton lock	51
6.7	Selection of suitable load cells	51
6.7.1	Division number:	51
6.7.2	Supply voltage and measuring signal:	51
6.7.3	Dead load and nominal value:	52
7	Further functions	53
7.1	Filtering	53
7.1.1	Filter and standstill	53
7.1.2	Special filter for animal scales	53
7.2	Limit outputs	54
7.3	Inputs	55
7.4	Printing function	57
7.5	Formatting of the printing output	58
7.5.1	Example	59
7.6	Setting the time	59
7.7	Summing function	59
7.7.1	Overview	59
7.7.2	Functions in the menu Add (new)	60
7.7.3	Permitted range	60
7.7.4	Deletion of the sums	61
7.7.5	Summing function during counting scale operation	61
7.7.6	Print	62
7.8	Interface for large display (second display)	63
8	Troubleshooting	64
9	Specifications	66
9.1	Specifications WE2108 in ABS-housing	66
9.2	Dimensions WE2108 in ABS-housing	67
9.3	Specifications WE2108S/WE2108M in steel-housing	68
9.4	Dimensions WE2108S/WE2108M in steel-housing	69

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/hbm/WE-2108> reference and calibration manual.

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)