



PT300 Weighing System Users Manual

**Intercomp Co.
3839 County Road 116
Medina, MN 55340 U.S.A.**

**763-476-2531
800-328-3336
Fax: 763-476-2613
www.intercompcompany.com**

Manual #: 700028-G

Table of Contents

| | |
|--|-----------|
| INTRODUCTION | 4 |
| <i>Weights and Measures.....</i> | <i>4</i> |
| SPECIFICATIONS | 5 |
| CONTROLS | 5 |
| ELECTRICAL..... | 5 |
| PERFORMANCE..... | 5 |
| ENVIRONMENTAL | 5 |
| PHYSICAL..... | 6 |
| RADIO (OPTIONAL)..... | 6 |
| OPTIONAL EQUIPMENT | 7 |
| SCALE OPERATIONS..... | 8 |
| OPERATIONAL OVERVIEW | 8 |
| DISPLAY DESCRIPTION | 8 |
| CONTROLS | 9 |
| <i>ON / OFF</i> | <i>9</i> |
| <i>PRINT / ACCUMULATE.....</i> | <i>9</i> |
| <i>LOCAL / TOTAL</i> | <i>10</i> |
| <i>ZERO.....</i> | <i>10</i> |
| TOTALIZING SETUP | 11 |
| SERIAL OUTPUT SETUP | 12 |
| <i>On-Demand.....</i> | <i>12</i> |
| <i>Continuous</i> | <i>12</i> |
| <i>Data Format.....</i> | <i>13</i> |
| <i>Accumulating Print.....</i> | <i>13</i> |
| USING ACCUMULATED TOTAL | 13 |
| <i>Accumulating Print Axle</i> | <i>13</i> |
| <i>Accumulating Print Standard.....</i> | <i>14</i> |
| ACCUMULATING PROCEDURE:..... | 15 |
| WEIGHING PROCEDURES | 17 |
| TABLE 1: WEIGHING COMBINATIONS..... | 18 |
| TYPICAL SCALE LAYOUTS | 19 |
| MODE MENU..... | 20 |
| MODE MENU..... | 20 |
| SETTING THE MODE MENU PARAMETERS | 21 |
| CABLED SCALE USAGE | 24 |
| TOTALIZING/PRINTING IN CURRENT LOOP MODE | 24 |
| <i>Example of Master/Slave designations.....</i> | <i>24</i> |
| TOTALIZING | 25 |
| PRINTING | 25 |
| DATA INTERFACE..... | 26 |
| CALIBRATION | 27 |
| PROCEDURE: CALIBRATION (VERIFICATION) | 27 |
| <i>Check front/back load cell balance</i> | <i>27</i> |
| <i>Scale Span Calibration.....</i> | <i>28</i> |
| PROCEDURE: CALIBRATION (ADJUSTMENT) | 29 |
| <i>Calibration Enable Jumper.....</i> | <i>30</i> |
| CALIBRATION MENU | 31 |
| SETTING THE CALIBRATION PARAMETERS..... | 32 |
| <i>Multiple Graduation Break Points</i> | <i>32</i> |
| WEIGHT CALIBRATION | 34 |
| <i>Corner Calibration (Both load cells)</i> | <i>34</i> |
| <i>Corner Calibration (Single load cell)</i> | <i>35</i> |

| | |
|---|-----------|
| <i>Span Calibration</i> | 36 |
| TROUBLESHOOTING | 38 |
| PROBLEM TABLE..... | 38 |
| ERROR MESSAGES | 39 |
| DIAGNOSTIC TESTS AND VOLTAGE MEASUREMENTS | 40 |
| <i>Charger voltage</i> | 40 |
| <i>Lamp</i> | 40 |
| <i>Keys</i> | 40 |
| <i>Power down shutoff</i> | 40 |
| <i>Load Cells</i> | 40 |
| <i>Step Entries</i> | 42 |
| CONNECTOR | 43 |
| HOW TO REACH INTERCOMP SERVICE | 44 |

"This document is the property of Intercomp Co. It contains material and information that is confidential and protected under federal and/or state trade secret, unfair competition, and copyright law. Any reproduction, use or disclosure without written permission from Intercomp Co. is prohibited".

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/InterComp/PT-300 users manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)