

ISHIDA

ALPHA COSMIC-1000 SERVICE MANUAL

ISHIDA SCALES MFG. CO.,LTD.

KYOTO , JAPAN

TABLE OF CONTENTS

1 Introduction

1.1	EXTERNAL VIEW	1-1
1.2	FEATURES	1-1
	A. SOFTWARE	1-1
	B. HARDWARE	1-1
1.3	SPECIFICATIONS	1-2
1.4	EXTERNAL DIMENSIONS	1-3

2 Mechanical Components

2.1	OVERVIEW	2-1
2.2	PLATTER AND CASE DISASSEMBLY	2-1
	A. DISASSEMBLY VIEW	2-1
	B. DISASSEMBLY PROCEDURE	2-1
2.3	INTERNAL CONSTRUCTION	2-2
	A. PARTS IDENTIFICATION	2-2
	B. CONSTRUCTION	2-2
2.4	LOAD CELL UNIT	2-3
	A. EXTERNAL VIEW	2-3
	B. FUNCTION	2-3
	C. LOAD CELL REPLACEMENT PROCEDURE	2-3
2.5	CIRCUIT BOARD REPLACEMENT	2-4
	A. CPU BOARD P-594, I/O BOARD P-641 REMOVAL	2-4
	B. A/D BOARD P-527 REMOVAL	2-4
	C. DOT DISPLAY BOARD P-640 REMOVAL	2-5
	D. DOT DISPLAY D/D CONVERTER BOARD REMOVAL	2-5
	E. POWER SUPPLY UNIT REPLACEMENT	2-6
	F. DISPLAY BOARD P-532 REPLACEMENT	2-8
2.6	KEYBOARD UNIT	2-9
	A. DISASSEMBLY VIEW	2-9
	B. KEYBOARD UNIT REPLACEMENT	2-9
2.7	PRINTER UNIT	2-10
	A. EXTERNAL VIEW	2-10
	B. CONSTRUCTION	2-10
	C. FUNCTION	2-10
	D. THERMAL HEAD REPLACEMENT	2-11
	E. TAKE UP ROLLER	2-12

3 Electrical Components

3.1	SYSTEM CONFIGURATION	3-1
	A. BLOCK DIAGRAM	3-1
	B. WIRING CONNECTION DIAGRAM	3-2
3.2	A/D BOARD P-527	3-3
	A. EXTERNAL VIEW	3-3
	B. BLOCK DIAGRAM	3-3
	C. FUNCTION	3-4
3.3	CPU BOARD P-594	3-5
	A. EXTERNAL VIEW	3-5

B.	BLOCK DIAGRAM	3-6
C.	FUNCTION	3-7
D.	ADJUSTMENT POINTS	3-7
E.	BATTERY SWITCH	3-8
F.	FREQUENCY SWITCH	3-8
G.	ROM, RAM	3-9
3.4	I/O BOARD P-641	3-10
A.	EXTERNAL VIEW	3-10
B.	BLOCK DIAGRAM	3-10
C.	FUNCTION	3-11
3.5	POWER SUPPLY UNIT DL-145	3-12
A.	EXTERNAL VIEW	3-12
B.	BLOCK DIAGRAM	3-12
C.	FUNCTION	3-13
D.	THERMAL RELAY	3-14
E.	POWER SUPPLY UNIT MODEL	3-15
F.	ADJUSTMENT POT	3-15
G.	FUSES	3-15
3.6	DOT DISPLAY BOARD P-640	3-16
A.	EXTERNAL VIEW	3-16
B.	BLOCK DIAGRAM	3-16
C.	FUNCTION	3-16
3.7	DOT DISPLAY D/D CONVERTER BOARD UDD-221E	3-17
A.	EXTERNAL VIEW	3-17
B.	BLOCK DIAGRAM	3-17
C.	FUNCTION	3-17
3.8	DISPLAY BOARD P-532	3-18
A.	EXTERNAL VIEW	3-18
B.	BLOCK DIAGRAM	3-18
C.	FUNCTION	3-18
D.	JUMPERS	3-18
3.9	LABEL SENSOR BOARD P-545	3-19
A.	EXTERNAL VIEW	3-19
B.	BLOCK DIAGRAM	3-19
C.	FUNCTION	3-19

4 Mechanical Adjustment

4.1	OVERVIEW	4-1
4.2	FOUR CORNER LIMIT ADJUSTMENT	4-1
A.	PURPOSE	4-1
B.	ADJUSTMENT LOCATION	4-1
C.	ADJUSTMENT PROCEDURE	4-1
4.3	PRINT POSITION ADJUSTMENT	4-2
A.	PURPOSE	4-2
B.	ADJUSTMENT LOCATION	4-2
C.	ADJUSTMENT PROCEDURE	4-2
D.	PRINT SAMPLES	4-2

5 Electrical Adjustment

5.1	OVERVIEW	5-1
5.2	INITIAL A/D VALUE ADJUSTMENT	5-1
A.	PURPOSE	5-1
B.	ADJUSTMENT LOCATION	5-1
C.	ADJUSTMENT VALUES	5-2
D.	DISPLAY	5-2
E.	ADJUSTMENT PROCEDURE	5-2
5.3	SPAN ADJUSTMENT	5-2

A.	PURPOSE	5-2
B.	ADJUSTMENT LOCATION	5-2
C.	ADJUSTMENT VALUES	5-3
D.	ADJUSTMENT PROCEDURE	5-3
E.	DIP SWITCH SETTING	5-4
5.4	LABEL SENSITIVITY ADJUSTMENT	5-5
A.	PURPOSE	5-5
B.	ADJUSTMENT LOCATION	5-5
C.	ADJUSTMENT PROCEDURE	5-6
D.	ADJUSTMENT VERIFICATION	5-6
E.	RECEIPT PAPER	5-6

6 Thermal Head

6.1	OVERVIEW	6-1
6.2	CONTENTS	6-1
6.3	MODEL	6-1
6.4	SPECIFICATIONS	6-1
6.5	THERMAL HEAD CONSTRUCTION	6-1
A.	DOT COUNT	6-1
B.	DOT DIMENSIONS	6-1
C.	CIRCUIT CONFIGURATION	6-2
6.6	FUNCTION	6-2
6.7	THERMAL HEAD HEATING TIME AND SIGNAL TIME CHART	6-3
6.8	RELATIONSHIP BETWEEN THERMAL HEAD AND HEAD HEATER	6-4
A.	FUNCTION OF HEAD HEATER	6-4
6.9	MECHANICAL ADJUSTMENT	6-5
A.	THERMAL HEAD POSITION ADJUSTMENT	6-5
B.	THERMAL HEAD LEFT-RIGHT PRINT DARKNESS ADJUSTMENT	6-6
C.	PRINT ROLLER ADJUSTMENT	6-7
6.10	ELECTRICAL ADJUSTMENT	6-8
A.	THERMAL HEAD APPLIED VOLTAGE ADJUSTMENT	6-8
B.	CPU BOARD P-594 THERMAL HEAD CONTROL	6-10

7 Test Program

7.1	OVERVIEW	7-1
7.2	TEST PROGRAM CONSTRUCTION	7-1
A.	TEST MODE 1	7-1
B.	TEST MODE 2	7-1
C.	TEST MODE 3	7-1
D.	TEST MODE 6	7-1
E.	TEST MODE 7	7-1
7.3	TEST MODE STARTUP	7-1
7.4	TEST MODE 1 - HARDWARE CHECK	7-2
A.	PURPOSE	7-2
B.	OPERATION	7-2
C.	A/D VALUE CHECK	7-2
D.	KEY CHECK	7-3
E.	DISPLAY CHECK	7-3
F.	THERMAL CHECK	7-4
G.	ROM NO. CHECK	7-4
7.5	TEST MODE 2	7-5
A.	PURPOSE	7-5
B.	OPERATION 1	7-5
C.	OPERATION 2	7-5
D.	INITIAL DATA SET CONTENTS	7-6
E.	DIFFERENCE BETWEEN OPERATION 1 AND 2	7-6
7.6	TEST MODE 3 - LABEL FORMAT SET	7-7

A.	PURPOSE	7-7
B.	OPERATION	7-7
C.	PRODUCT NAME COL NUMBER OF DOTS	7-8
7.7	TEST MODE 6 - SECRET NO REGISTRATION	7-9
A.	PURPOSE	7-9
B.	OPERATION	7-9
7.8	TEST MODE 7 - OPEN PLU REGISTRATION	7-11
A.	PURPOSE	7-11
B.	OPERATION	7-11

8 Cassette Loading

8.1	OVERVIEW	8-1
8.2	WIRING DIAGRAM	8-1
8.3	PROCEDURE	8-2
A.	DATA TRANSFER FROM CASSETTE TO SCALE	8-2
B.	DATA TRANSFER FROM SCALE TO CASSETTE.	8-6
C.	IN THE EVENT OF A TRANSMISSION ERROR	8-7
8.4	INTERFACE BOX (IF-RQ)	8-8
A.	HARDWARE CONFIGURATION	8-8
B.	FUNCTION	8-9
C.	DIP SWITCH	8-9
D.	BATTERY REPLACEMENT	8-10
8.5	CASSETTE DECK HEAD POSITION ADJUSTMENT	8-11
A.	PURPOSE	8-11
B.	REQUIRED TOOLS	8-11
C.	ADJUSTMENT LOCATION	8-11
D.	ADJUSTMENT PROCEDURE.	8-12

9 Options

9.1	RECEIPT SPECIFICATIONS	9-1
A.	MODIFICATIONS	9-1
B.	PRINTER PARTS REPLACEMENT AND MOUNTING DIAGRAM	9-1
C.	PRINTER PARTS REPLACEMENT PROCEDURE (FIG. 9-1)	9-2
D.	PROGRAM ROM REPLACEMENT.	9-2
E.	REQUIRED PARTS	9-2

10 Installation At User Site

10.1	INSTALLATION PREPARATION	10-1
A.	PROCEDURES OVERVIEW	10-1
B.	PROCEDURE	10-1
10.2	INSTALLATION AT USER SITE	10-2
A.	TRANSPORT	10-2
B.	INSTALLATION	10-2
C.	EXPLANATION TO USER	10-2

11 Maintenance

11.1	OVERVIEW	11-1
11.2	CLEANING	11-1
A.	CLEANING LOCATIONS	11-1
B.	EXTERNAL VIEW	11-1
11.3	INSPECTION	11-2
A.	DAILY INSPECTION	11-2
B.	PRE-MAINTENANCE	11-3
C.	MAINTENANCE CAUTIONARY INSTRUCTIONS	11-4
11.4	TROUBLESHOOTING	11-5

■ 12 Parts

12.1 OVERVIEW	12-1
12.2 PARTS LIST	12-1
A. A/D BOARD P-527	12-1
B. CPU BOARD P-594	12-1
C. I/O BOARD P-641	12-1
D. DISPLAY BOARD P-532	12-1
E. DOT DISPLAY BOARD P-640	12-1
F. LOAD CELL	12-1
G. THERMAL HEAD	12-1
H. LABEL FEED MOTOR	12-1

■ 13 Schematics

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/ishida/AC-1000 Mk-III service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)