

# **AC-2000 PLU SCALE OPERATOR MANUAL**

## AC2000 USER MANUAL INDEX

Description	Page Number
Applying Power to the Scale	1
Loading Labels	1
Key Board Operation	2
Display Indicators	2
Key Switch Operation	3
Zeroing the Weight Display	3
Tare Entry	
Manual Entry	4
Preset Tare	4
Tare Look-Up	4
PLU Programmed Tare	4
Basic Operation	5
Weighed Item	5
Non-Weighed Item (Bakery)	6
Auto/Manual Label Printing	6
Save Mode	6
Program Value Over-ride	
Unit Price	7
Pack Date	7
@/FOR Key	9

APPENDIX A - WEIGH CHECK

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/AC-2000-PLU operation manual.html](https://the-checkout-tech.com/manuals/ishida/AC-2000-PLU%20operation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)