

Ishida 3000 Series

Scales and Printers

Ethernet Configuration Manual



Contents

About This Manual	1
1.0 Introduction	1
1.1 Installation and Wiring	1
1.1.1 Connector Mounting Bracket Removal	1
1.1.2 Ethernet Installation	2
2.0 Configuring Ethernet Card	3
2.1 Assigning an IP Address to your Ishida Scale	3
2.2 Basic Parameters	3
2.3 Exit Configuration Mode	3
2.4 Parameters	4
2.4.1 Entering Telnet Session	4
2.4.2 Setting the Scale's IP Address	4
2.4.3 Setting the Scale's TCP/IP Connection	4
2.4.4 Setting the Scale's UDP Connection	4
2.4.5 Ending the Telnet Session	5
2.5 Scale Modifications For Ethernet	5
3.0 Replacement Parts List	6
4.0 Appendix	7
4.1 IP Addressing	7
4.2 Class A Network	7
4.3 Class B Network	7
4.4 Class C Network	7
4.5 Network Address	7
4.6 Broadcast Address	7
4.7 IP Netmask	7
4.8 Private IP Networks and the Internet	8
Ishida 3000 Series Ethernet Option Limited Warranty	9

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/ishida/AC-3000 Series Ethernet Configuration m>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)