



AC-3000/3000E

SYSTEM SETUP MANUAL

Table of Contents

1 AC-3000 System Setup Overview

1.1 INTRODUCTION	1-1
1.2 PARTS REQUIRED FOR MOUNTING	1-2
1.3 OPTIONS	1-2
1.4 MASTER BOARD	1-3

2 Setup Procedures

2.1 MASTER SCALE PROCEDURES	2-1
2.2 SATELLITE SCALE PROCEDURES	2-2
2.3 MASTER BOARD (P-835) ATTACHMENT	2-3
2.4 I ² NET CABLE CONNECTION METHOD	2-5
2.5 I ² NET CABLE CONNECTORS	2-5

3 Test Mode Procedures

3.1 MENU SCHEMATIC	3-1
3.2 MENU SELECTION METHODS	3-2
3.3 SALES MODE (C08)	3-2
3.4 MASTER BOARD HARDWARE TEST (C101)	3-3
3.5 MASTER BOARD RAM CLEAR (C102)	3-4
3.6 MEMORY CHECK	3-4
3.7 MASTER BOARD DATA SD/LD (C199)	3-5

4 Registration Mode

4.1 SYSTEM EXPANSION MODE	4-1
4.2 MACHINE NO. (P17)	4-2
4.3 INLINE REGISTRATION (P19)	4-2
4.4 MASTER MAINTENANCE (P20)	4-3

5 Setup Error Messages

5.1 ERROR MESSAGE HANDLING	5-1
----------------------------------	-----

6 Electrical Diagrams

6.1 BLOCK DIAGRAM	6-1
6.2 CONNECTION DIAGRAM	6-2

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/AC-3000 and AC-3000E System Setup ma](https://the-checkout-tech.com/manuals/ishida/AC-3000%20and%20AC-3000E%20System%20Setup%20ma)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)