



AC-3000 & AC-3000E

SERVICE MANUAL



IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

TABLE OF CONTENTS

1. INTRODUCTION

1.1 Main Components	1-1
1.2 Setup Environment	1-2

2. SET UP

2.1 Part Check	2-1
2.2 Installation Site Check	2-1
2.3 Assembly	2-1
2.4 Set Up Sequence	2-2

3. PARTS DISSASSEMBLY AND REPLACEMENT

3.1 Parts Disassembly View and Part Names	3-1
3.2 Upper Cover Removal	3-3
3.3 Circuit Board Replacement	3-6
3.4 Display Unit Replacement	3-7
3.5 Load Cell Replacement	3-8
3.6 Cassette Modification: Label to Receipt	3-9

4. ELECTRONIC CONFIGURATIONS

4.1 Connector Configuration	4-1
4.2 Block Diagram	4-2
4.3 Power Unit	4-3
4.4 Main Board (P-834)	4-4
4.5 A/D Board (P-830)	4-6
4.6 Keyboard Junction Board	4-6
4.7 Junction Board (P-838)	4-7
4.8 Display Unit	4-8
4.9 Connector Bracket	4-9
4.10 Peeling Sensor	4-9
4.11 Cassette Sensor	4-10
4.12 Label Sensor and Sensor Board (P-545)	4-10

5. THERMAL HEAD

5.1 Overview	5-1
5.2 Specifications	5-1
5.3 Thermal Head Adjustment	5-2
5.4 Thermal Head Cleaning	5-3
5.5 Other Adjustment	5-3

6. TROUBLESHOOTING

6.1 Periodic Parts Replacement	6-1
6.2 Troubleshooting	6-2
6.3 Error Message	6-3

SOFTWARE SECTION

S1. Outline of Software

S1.1 Memory Map	S1-1
-----------------------	------

S2. PRINT FORMAT MODIFICATION

S2.1 Print Format Overviews	S2-1
S2.2 Label Format Modification Range	S2-1
S2.3 Format Modification Method	S2-1

S3. DISPLAY MODULES

S3.1 Display Module Overview	S3-1
S3.2 Roots and Sub Menu Selection	S3-2

S4. SETTING MODE

S4.1 Menu Schematic	S4-1
S4.2 Setting Procedures	S4-3
1. Label Format (b01)	S4-3
2. Bar Code (b02)	S4-4
3. Code (b03)	S4-10
4. Initial Data Setting (b04)	S4-12
5. Tax Rate (b07)	S4-12
6. PLU File (b08)	S4-13
7. Preset Report (b10)	S4-14
8. PLU File (b11)	S4-16
9. Total Mode Select (b12)	S4-16
10. Password (b13)	S4-17
11. Default PLU (b14)	S4-17

S5. TEST MODE

S5.1 Menu Schematic	S5-1
S5.2 Test Mode Procedures	S5-2
1. Hardware Test (c01)	S5-2
2. RAM Clear (c02)	S5-6
3. Thermal Head (c03)	S5-7
4. Sensor Check (c04)	S5-8
5. Memory Check (c05)	S5-9
6. ROM Switch Number Select (c06)	S5-9
7. Label Format (c07)	S5-10
8. Sales Mode (c08)	S5-11
9. Node Number (c09)	S5-12
10. Preset Function Key (c09)	S5-13
11. Data SD/LD (c99)	S5-14

REFERENCE DIAGRAMS

P-838 Circuit Diagram

PWB: 838 Circuit Diagram

P-830A Circuit Diagram

P-834B Circuit Diagram

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/ishida/AC-3000 and AC-3000E service manual.pdf>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)