

# Ishida 3000 Series

*Scales and Printers*

## Ethernet Configuration Manual



# Contents

---

<b>About This Manual</b> .....	<b>1</b>
<b>1.0 Introduction</b> .....	<b>1</b>
1.1 Installation and Wiring .....	1
1.1.1 Connector Mounting Bracket Removal .....	1
1.1.2 Ethernet Installation .....	2
<b>2.0 Configuring Ethernet Card</b> .....	<b>3</b>
2.1 Assigning an IP Address to your Ishida Scale .....	3
2.2 Basic Parameters .....	3
2.3 Exit Configuration Mode .....	3
2.4 Parameters .....	4
2.4.1 Entering Telnet Session .....	4
2.4.2 Setting the Scale's IP Address .....	4
2.4.3 Setting the Scale's TCP/IP Connection .....	4
2.4.4 Setting the Scale's UDP Connection .....	4
2.4.5 Ending the Telnet Session .....	5
2.5 Scale Modifications For Ethernet .....	5
<b>3.0 Replacement Parts List</b> .....	<b>6</b>
<b>4.0 Appendix</b> .....	<b>7</b>
4.1 IP Addressing .....	7
4.2 Class A Network .....	7
4.3 Class B Network .....	7
4.4 Class C Network .....	7
4.5 Network Address .....	7
4.6 Broadcast Address .....	7
4.7 IP Netmask .....	7
4.8 Private IP Networks and the Internet .....	8
<b>Ishida 3000 Series Ethernet Option Limited Warranty</b> .....	<b>9</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*