



AC-3000

Retail Scale

Service Manual

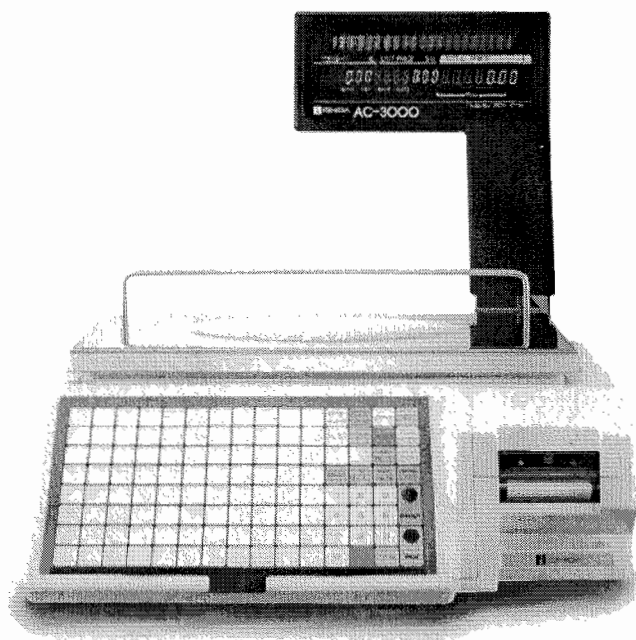


Table of Contents

1 Introduction

1.1 MAIN COMPONENTS	1-1
1.2 CHARACTERISTICS	1-2

2 Set Up

2.1 PARTS CHECK	2-1
2.2 INSTALLATION SITE CHECK	2-1
2.3 ASSEMBLY	2-1
2.4 SET UP SEQUENCE	2-2

3 Parts Disassembly and Replacement

3.1 PARTS DISASSEMBLY VIEW AND PART NAMES	3-1
3.2 UPPER COVER REMOVAL	3-3
3.3 CIRCUIT BOARD REPLACEMENT	3-6
3.4 DISPLAY UNIT REPLACEMENT	3-7
3.5 LOAD CELL REPLACEMENT	3-8
3.6 CASSETTE MODIFICATION: LABEL TO RECEIPT	3-9

4 Electronic Configurations

4.1 CONNECTOR CONFIGURATION	4-1
4.2 BLOCK DIAGRAM	4-2
4.3 POWER UNIT	4-3
4.4 MAIN BOARD (P-834)	4-4
4.5 A/D BOARD (P-830)	4-6
4.6 KEYBOARD JUNCTION BOARD	4-6
4.7 JUNCTION BOARD (P-838)	4-7
4.8 DISPLAY UNIT	4-8
4.9 CONNECTOR BRACKET	4-9
4.10 PEELING SENSOR	4-9
4.11 CASSETTE SENSOR	4-10
4.12 LABEL SENSOR AND SENSOR BOARD (P-545)	4-10

5 Thermal Head

5.1 OVERVIEW	5-1
5.2 SPECIFICATIONS	5-1
5.3 THERMAL HEAD ADJUSTMENT	5-2
5.4 THERMAL HEAD CLEANING	5-3
5.5 OTHER ADJUSTMENTS	5-3

6 Troubleshooting

6.1 PERIODIC PARTS REPLACEMENT	6-1
6.2 TROUBLESHOOTING CHART	6-2
6.2 ERROR MESSAGES	6-3

SOFTWARE SECTION

S1 Outline of Software

S1.1	MEMORY MAP	S1-1
------	------------------	------

S2 Print Format Modification

S2.1	PRINT FORMAT OVERVIEWS	S2-1
S2.2	LABEL FORMAT MODIFICATION RANGE	S2-1
S2.3	FORMAT MODIFICATION METHOD	S2-1

S3 Display Modules

S3.1	DISPLAY MODULE OVERVIEW	S3-1
S3.2	ROOT AND SUB MENU SELECTION	S3-2

S4 Setting Mode

S4.1	MENU SCHEMATIC	S4-1
S4.2	SETTING PROCEDURES	S4-3
	1. LABEL FORMAT (b01)	S4-3
	2. BAR CODE (b02)	S4-4
	3. CODE (B03)	S4-4
	4. INITIAL DATA SETTING (b04)	S4-5
	5. TAX RATE (b07)	S4-5
	6. PLU FILE (b08)	S4-6
	7. PRESET REPORT (b10)	S4-7
	8. REGISTRATION SELECT (b11)	S4-8
	9. TOTAL MODE SELECT (b12)	S4-9
	10. PASSWORD (b13)	S4-9
	11. DEFAULT PLU (b14)	S4-9

S5 Test Mode

S5.1	MENU SCHEMATIC	S5-1
S5.2	TEST MENU PROCEDURES	S5-3
	1. HARDWARE TEST (C01)	S5-2
	2. RAM CLEAR (C02)	S5-6
	3. THERMAL HEAD (C03)	S5-7
	4. SENSOR CHECK (C04)	S5-8
	5. MEMORY CHECK (C05)	S5-9
	6. ROM SWITCH NUMBER SELECT (C06)	S5-9
	7. LABEL FORMAT (C07)	S5-10
	8. SALES MODE (C08)	S5-11
	9. NODE NUMBER (C09)	S5-12
	10. PRESET FUNCTION KEY (C10)	S5-12
	11. DATA SD/LD (C99)	S5-13

Reference Diagrams

- P-838 CIRCUIT DIAGRAM
- PWB:838 CIRCUIT DIAGRAM
- P-830A CIRCUIT DIAGRAM
- P-834B CIRCUIT DIAGRAM

Appendix

A1.1	ROM SWITCH LIST	A1-1
A1.2	SALES MODE C08-01 EXPLANATION	A1-2
A1.3	LABEL FORMAT WORKSHEETS	A1-3
	1. AC-3000	
	2. AC-3000B	
	3. AC-3000F	
	4. AC-3000E	
A1.4	ADDITIONAL TROUBLESHOOTING	
A1.5	PARTS LIST	
	1. AC-3000	
	2. AC-3000B	
	3. AC-3000F	
	4. AC-3000	

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*