




System Scale Printer
AC-4000^{B/E}
SERVICE MANUAL

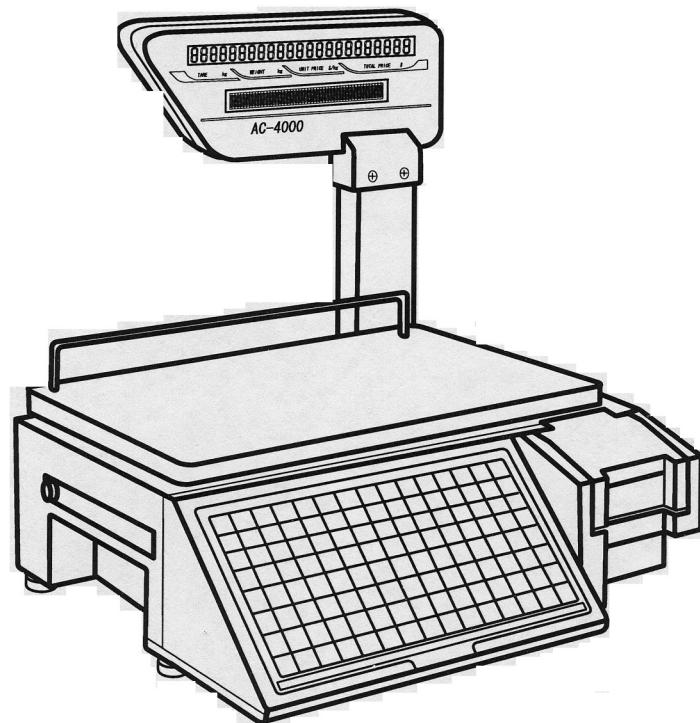

IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

Manual No. 0181A

PN 83928

Contents

| | |
|---|------------|
| CHAPTER 1 OVERVIEW | 1-1 |
| 1.1 Appearance and Name of Each Part..... | 1-1 |
| 1.2 Display | 1-1 |
| 1.3 Key Sheet | 1-2 |
| 1.4 Printer | 1-2 |
| 1.5 Main Specifications | 1-3 |
| 1.6 Exploded Drawing | 1-4 |
| CHAPTER 2 INSTALLATION | 2-1 |
| 2.1 Packed Goods | 2-1 |
| 2.2 Installation Environment | 2-2 |
| 2.3 Assembly | 2-2 |
| 2.4 Weigh Platter Installation | 2-3 |
| 2.5 Label Loading | 2-3 |
| 2.6 Power Cable Connection | 2-4 |
| 2.7 Turning Power Switch "ON" | 2-4 |
| 2.8 Customer's Specification Setup | 2-5 |
| (Initialization, Setup, and Registration) | 2-5 |
| 2.9 Normal Mode Display | 2-6 |
| 2.10 Label Batch Print Mode | 2-7 |
| 2.10.1 Basic operation | 2-7 |
| 2.10.2 Additional functions | 2-7 |
| 2.10.3 Label batch printing on continuous paper | 2-8 |
| 2.11 Scroll Message Display | 2-9 |
| 2.12 Campaign Function | 2-9 |
| CHAPTER 3 TEST MODE..... | 3-1 |
| 3.1 Test Mode Menu List | 3-1 |
| 3.2 Test Mode Start | 3-2 |
| 3.3 Hardware Test | 3-2 |
| 3.4 RAM Clear | 3-7 |
| 3.5 Printer Head | 3-11 |
| 3.6 Label Sensor Check | 3-13 |
| 3.7 Total Memory | 3-14 |
| 3.8 ROM Switch | 3-15 |
| 3.9 Peel Sensor Check | 3-17 |
| CHAPTER 4 SETUP MODE | 4-1 |
| 4.1 Setup Mode Menu | 4-1 |
| 4.2 Starting Procedure for Each Mode | 4-2 |
| 4.3 Starting Procedure for Setup Mode | 4-2 |
| 4.4 Label Format [Print conditions] | 4-3 |
| 4.5 POS Code | 4-8 |
| 4.6 Barcode [Item code] | 4-11 |

| | |
|--|------------|
| 4.7 Default Data | 4-12 |
| 4.8 Total Mode Select | 4-13 |
| 4.9 Forced Tare [USA specification only] | 4-13 |
| 4.10 Open Price [Prohibition of Unit Price Change] | 4-14 |
| 4.11 PLU Select [Editing PLU File]..... | 4-15 |
| 4.12 System [Availabilty of Registration Mode Menu]..... | 4-22 |
| 4.13 Ethernet Setup [Ethernet Data Setting] | 4-26 |
| 4.14 System Timer | 4-32 |
| 4.15 Password Setup | 4-33 |
| CHAPTER 5 ELECTRICITY COMPOSITION | 5-1 |
| CHAPTER 6 TROUBLESHOOTING | 6-1 |
| 6.1 Error List | 6-1 |
| CHAPTER 7 PARTS REPLACEMENT | 7-1 |
| 7.1 Detaching Each Part (Unit)..... | 7-1 |
| 7.2 Detaching Internal Parts | 7-4 |
| 7.3 Periodical Replacement Parts | 7-14 |
| 7.4 How to Pass Labels..... | 7-14 |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/ishida/AC-4000 AC-4000B AC-4000E service manual.pdf>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)