




System Scale Printer  
**AC-4000** B/E  
**SERVICE MANUAL**

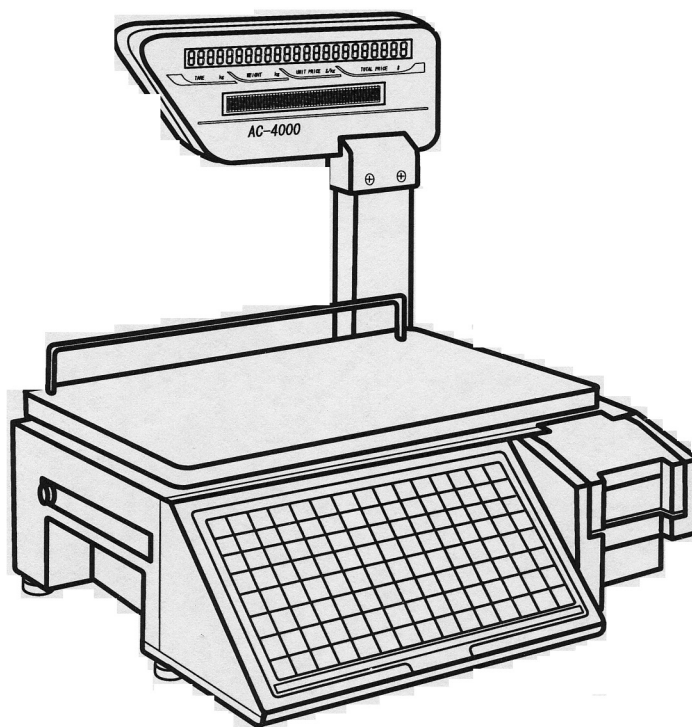

**IMPORTANT**

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

**ISHIDA CO., LTD.**

# Contents

<b>CHAPTER 1 OVERVIEW .....</b>	<b>1-1</b>
1.1 Appearance and Name of Each Part.....	1-1
1.2 Display .....	1-1
1.3 Key Sheet .....	1-2
1.4 Printer .....	1-2
1.5 Main Specifications .....	1-3
1.6 Exploded Drawing .....	1-4
<b>CHAPTER 2 INSTALLATION .....</b>	<b>2-1</b>
2.1 Packed Goods .....	2-1
2.2 Installation Environment .....	2-2
2.3 Assembly .....	2-2
2.4 Weigh Platter Installation.....	2-3
2.5 Label Loading .....	2-3
2.6 Power Cable Connection.....	2-4
2.7 Turning Power Switch “ON” .....	2-4
2.8 Customer’s Specification Setup .....	2-5
(Initialization, Setup, and Registration) .....	2-5
2.9 Normal Mode Display .....	2-6
2.10 Label Batch Print Mode .....	2-7
2.10.1 Basic operation .....	2-7
2.10.2 Additional functions.....	2-7
2.10.3 Label batch printing on continuous paper .....	2-8
2.11 Scroll Message Display .....	2-9
2.12 Campaign Function .....	2-9
<b>CHAPTER 3 TEST MODE.....</b>	<b>3-1</b>
3.1 Test Mode Menu List .....	3-1
3.2 Test Mode Start .....	3-2
3.3 Hardware Test .....	3-2
3.4 RAM Clear .....	3-7
3.5 Printer Head .....	3-11
3.6 Label Sensor Check .....	3-13
3.7 Total Memory .....	3-14
3.8 ROM Switch .....	3-15
3.9 Peel Sensor Check.....	3-17
<b>CHAPTER 4 SETUP MODE .....</b>	<b>4-1</b>
4.1 Setup Mode Menu .....	4-1
4.2 Starting Procedure for Each Mode .....	4-2
4.3 Starting Procedure for Setup Mode .....	4-2
4.4 Label Format [Print conditions] .....	4-3
4.5 POS Code .....	4-8
4.6 Barcode [Item code] .....	4-11

---

4.7	Default Data .....	4-12
4.8	Total Mode Select .....	4-13
4.9	Forced Tare [USA specification only] .....	4-13
4.10	Open Price [Prohibition of Unit Price Change] .....	4-14
4.11	PLU Select [Editing PLU File].....	4-15
4.12	System [Availability of Registration Mode Menu] .....	4-22
4.13	Ethernet Setup [Ethernet Data Setting] .....	4-26
4.14	System Timer .....	4-32
4.15	Password Setup .....	4-33
<b>CHAPTER 5 ELECTRICITY COMPOSITION .....</b>		<b>5-1</b>
<b>CHAPTER 6 TROUBLESHOOTING .....</b>		<b>6-1</b>
6.1	Error List .....	6-1
<b>CHAPTER 7 PARTS REPLACEMENT .....</b>		<b>7-1</b>
7.1	Detaching Each Part (Unit).....	7-1
7.2	Detaching Internal Parts .....	7-4
7.3	Periodical Replacement Parts .....	7-14
7.4	How to Pass Labels .....	7-14

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*