


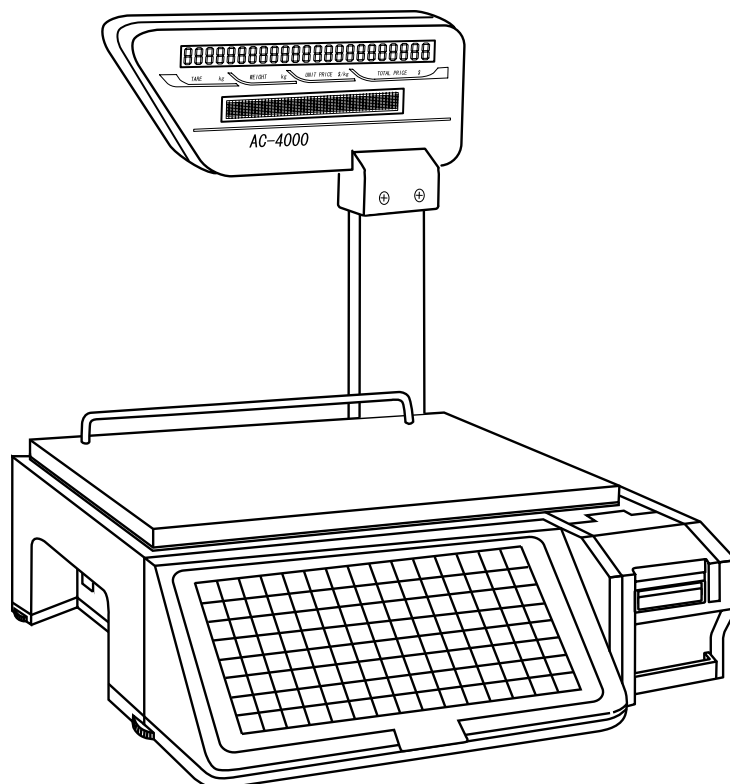

System Scale Printer

AC-4000

SERVICE MANUAL



IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

Contents

CHAPTER 1 OVERVIEW

1.1	Appearance and Name of Each Part	1-1
1.2	Display	1-1
1.4	Printer	1-2
1.3	Key Sheet	1-2
1.5	Main Specifications	1-3
1.6	Exploded Drawing	1-4

CHAPTER 2 INSTALLATION

2.1	Packed Goods	2-1
2.2	Installation Environment	2-2
2.3	Assembly	2-2
2.4	Weigh Platter Installation	2-3
2.5	Label Loading	2-3
2.7	Power Switch "ON"	2-4
2.6	Power Cable Connection	2-4
2.8	Customer's Specification Setup (Initialization, Setup, and Registration).....	2-5
2.9	Normal Mode Display	2-6
2.10	Label Batch Print Mode	2-7
2.10.1	Basic operation	2-7
2.10.2	Additional functions	2-7
2.10.3	Label batch printing on continuous paper	2-8
2.11	Scroll Message Display	2-9
2.12	Campaign Function	2-9

CHAPTER 3 TEST MODE

3.1	Test Mode Menu List	3-1
3.2	Test Mode Start	3-2
3.3	Hardware Test	3-2
■A/D CHECK		3-3
■KEY CHECK		3-4
■DISPLAY CHECK		3-4
■RS232C CHECK		3-5
■APPLICATION PROGRAM No.		3-5
■BIOS PROGRAM No.		3-6
3.4	RAM Clear	3-7
■SRAM CLEAR		3-7
■SETUP CLEAR		3-8
■TEST DATA SET		3-8
■APPLICATION COPY		3-9
■BIOS COPY		3-9
■BOOT COPY		3-10

3.5	Printer Head	3-11
	■RESISTANCE	3-11
	■PRINT USAGE IN km	3-12
	■RESISTANCE VALUE ADJUSTMENT	3-12
3.6	Label Sensor Check	3-13
3.7	Total Memory	3-14
3.8	ROM Switch	3-15
3.9	Peel Sensor Check	3-17
3.10	Machine Type Check	3-18

CHAPTER 4

4.1	Setup Mode Menu	4-1
4.2	Starting Procedure for Each Mode	4-2
4.3	Starting Procedure for Setup Mode	4-2
4.4	Label Format	4-3
	■LABEL FORMAT No.	4-3
	■LABEL LENGTH + GAP	4-3
	■LABEL WIDTH	4-4
	■LABEL SENSOR DISTANCE	4-4
	■LABEL DIE-CUT, CONTINUOUS	4-4
	■STORE NAME, ADDRESS	4-4
	■FIELD TITLE PRINT	4-5
	■PEEL SENSOR	4-5
	■TEST ITEM No.	4-5
	■THERMAL HEAD CHECK	4-5
	■SUBTOTAL LABEL FORMAT No.	4-6
	■SHOP No. PRINT	4-6
	■MACHINE No. PRINT	4-6
	■LABEL FORMAT EDIT	4-7
	■FORMAT No. + [PLU]	4-7
	■UNIT	4-8
	■DEFAULT PLU	4-8
	■UNIT DATA	4-9
	■NUMBER OF UNITS	4-9
	■LABEL LENGTH	4-9
4.5	POS Code	4-10
	■POS FLAG 8/3	4-10
	■10 DIGIT FLAG 8/13	4-10
	■BARCODE TYPE	4-10
	■POS TYPE	4-11
	■ITF	4-12
	■MANUFACTURE CODE	4-12
4.6	Item Code	4-13
	■BARCODE POSITION	4-13
	■DEPARTMENT CODE	4-13
	■GROUP CODE	4-13

4.7	Default Data	4-14
	■DATA PRINT FLAG	4-14
	■SHELF LIFE	4-14
	■PACKING TIME FLAG	4-14
	■EXPIRY TIME FLAG	4-15
	■BEST BEFORE FLAG	4-15
	■BEST BEFORE DATE	4-15
	■UNIT TYPE	4-15
4.8	Total Mode Select	4-16
	■DAILY TOTAL	4-16
	■WEEKLY TOTAL	4-16
	■MONTHLY TOTAL	4-16
	■BATCH TOTAL	4-16
4.9	Open Price	4-17
4.10	PLU Select	4-18
	■SALES MODE	4-18
	■UNIT PRICE	4-18
	■MD (Mark Down) FLAG	4-18
	■MD (Mark Down) PRICE	4-18
	■FIXED WEIGHT	4-19
	■PCS	4-19
	■TARE	4-19
	■DATE PRINT	4-19
	■SHELF LIFE	4-19
	■BEST BEFORE DATE FLAG	4-20
	■BEST BEFORE DATE	4-20
	■PACKING TIME FLAG	4-20
	■PACKING TIME DATE	4-20
	■EXPIRY TIME FLAG	4-20
	■EXPIRY TIME DATA	4-21
	■ITEM CODE	4-21
	■BARCODE TYPE	4-21
	■POS CODE TYPE	4-21
	■POS CODE FLAG	4-21
	■POS CODE	4-22
	■OPEN PRICE	4-22
	■COMMODITY MESSAGE	4-22
	■INGREDIENTS MESSAGE	4-22
	■NIP MESSAGE	4-22
	■COUPON MESSAGE	4-23
	■LOGO IMAGE 1	4-23
	■LOGO IMAGE 2	4-23
	■LABEL FORMAT No.	4-23
	■UPPER LIMIT	4-23
	■LOWER LIMIT	4-24
	■UNIT TYPE	4-24
	■DEPARTMENT CODE	4-24
	■GROUP CODE	4-24
	■REGISTER CODE	4-24
	■COST PRICE	4-25

■POP NUMBER	4-25
■STORAGE MESSAGE	4-25
■ADVISORY MESSAGE	4-25
4.11 System	4-26
■SYSTEM	4-26
■PLU	4-26
■COMMODITY NAME	4-26
■PRESET KEY	4-26
■STORE ADDRESS	4-26
■DATE/TIME	4-27
■EXTRA MESSAGE 1	4-27
■OPEN PLU	4-27
■ITEM LIST	4-27
■RS232C COMMUNICATION	4-27
■COUPON MESSAGE	4-28
■INGREDIENT MESSAGE	4-28
■NIP MESSAGE	4-28
■TCP/IP COMMUNICATION	4-28
■OPERATOR NAME	4-28
■TITLE MESSAGE	4-29
■ADVERTISEMENT MESSAGE 2	4-29
4.12 Ethernet Setup	4-30
■IP ADDRESS SETUP	4-30
■GATEWAY ADDRESS SETUP	4-31
■SUBNET MASK SETUP	4-32
■SERVER ADDRESS SETUP	4-33
■LOG-IN NAME ADDRESS SETUP	4-34
■PASSWORD SETUP	4-34
■MAC ADDRESS SETUP	4-35
■DHCP SETUP	4-35
■NETWORK STATUS	4-36
4.13 System Timer	4-37
4.14 Password Setup	4-38
■REGISTRATION	4-38
■TOTAL	4-38
■SUBTRACTION	4-39
■SETUP	4-39
4.15 Machine Number Setup	4-40

CHAPTER 5 ELECTRICITY COMPOSITION

5.1 Block wiring diagram "P-950B"	5-1
5.2 Main Board [P-950B]	5-2
5.3 Connector Specifications	5-3
5.4 PK-229 (A/D board)	5-8
5.5 Lithium Battery	5-8
5.6 Power Unit (LSF100 - 24S)	5-9
5.7 PK-232 (TCP/IP)	5-10
5.8 PK-236 (Span switch)	5-11
5.9 P-862 (Key board)	5-11

CHAPTER 6 TROUBLESHOOTING

6.1 Error List	6-1
6.2 Symptom, Cause, And Measures	6-4

CHAPTER 7 PARTS REPLACEMENT

7.1 Detaching Each Part	7-1
■ Detach the weigh platter	7-1
■ Detaching the platter holder	7-1
■ Detaching the display unit.	7-1
■ Detaching the front cover (key sheet)	7-2
■ Detaching the top case	7-3
7.2 Detaching Internal Parts	7-4
■ Detaching the keyboard relay board (P-862A)	7-4
■ Detaching the key sheet	7-4
■ Detaching the power supply	7-5
■ Detaching the span switch (PK-236).....	7-5
■ Detaching the load cell	7-6
■ Detaching the PK-229 (A/D board)	7-7
■ Detaching the PK-232 (TCP/IP)	7-7
■ Detaching the PK-950A (Main board)	7-8
■ Detaching the thermal head	7-9
■ Cleaning the thermal head	7-10
■ Detaching the display	7-10
■ Cleaning the cassette sensor/peel sensor	7-11
■ Adjusting the belt tension	7-11
7.3 Periodical Replacement Parts	7-12

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/AC-4000-System service manual.html](https://the-checkout-tech.com/manuals/ishida/AC-4000-System%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)