


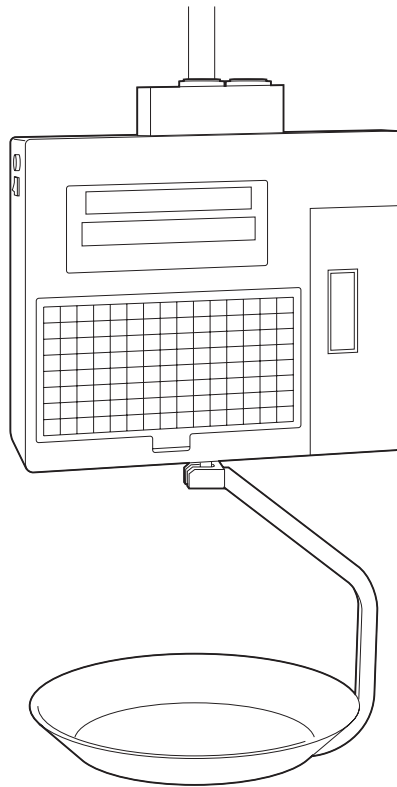

System Scale Printer
AC-4000H
SERVICE MANUAL



IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

Contents

CHAPTER 1 OVERVIEW

1.1 Appearance and Name of Each Part	1-1
1.2 Display	1-1
1.3 Key Sheet	1-2
1.4 Printer	1-2
1.5 Main Specifications	1-3
1.6 Layout of components	1-4

CHAPTER 2 INSTALLATION

2.1 Packed Goods	2-1
2.2 Installation Environment	2-2
2.3 Installing the main body	2-2
2.4 Installing the weigh platter	2-3
2.5 Label Loading	2-3
2.6 Power Cable Connection	2-5
2.7 Power Switch "ON"	2-5
2.8 Customer's Specification Setup (Initialization, Setup, and Registration)	2-6
2.9 Normal Mode Display	2-7
2.10 Label Batch Print Mode	2-8
2.10.1 Basic operation	2-8
2.10.2 Additional functions	2-9
2.10.3 Label batch printing on continuous paper	2-9
2.11 Scroll Message Display	2-10
2.12 Campaign Function	2-10

CHAPTER 3 TEST MODE

3.1 Test Mode Menu List	3-1
3.2 Test Mode Start	3-2
3.3 Hardware Test	3-2
■A/D check	3-2
■KEY CHECK	3-4
■DISPLAY CHECK	3-4
■RS232C CHECK	3-5
■APPLICATION PROGRAM No.	3-5
■BIOS PROGRAM No.	3-6
3.4 RAM Clear	3-7
■SRAM CLEAR	3-7
■SETUP CLEAR	3-8
■TEST DATA SET	3-8
■APPLICATION COPY	3-9
■BIOS COPY	3-9
■BOOT COPY	3-10

3.5	Printer Head	3-11
	■PRINTER HEAD	3-11
	■RESISTANCE	3-11
	■PRINT USAGE IN km	3-12
3.6	Label Sensor Check	3-13
3.7	Total Memory	3-14
3.8	ROM Switch	3-15
3.9	Peel Sensor Check	3-17
3.10	Machine Type Check	3-18

CHAPTER 4 SETUP MODE

4.1	Setup Mode Menu	4-1
4.2	Starting Procedure for Each Mode	4-2
4.3	Starting Procedure for Setup Mode	4-2
4.4	Label Format	4-3
	■LABEL FORMAT No.	4-3
	■LABEL LENGTH + GAP	4-3
	■LABEL WIDTH	4-4
	■LABEL SENSOR DISTANCE	4-4
	■LABEL DIE-CUT, CONTINUOUS	4-4
	■STORE NAME, ADDRESS	4-4
	■FIELD TITLE PRINT	4-5
	■PEEL SENSOR	4-5
	■TEST ITEM No.	4-5
	■THERMAL HEAD CHECK	4-5
	■SUBTOTAL LABEL FORMAT No.	4-6
	■STORE No. PRINT	4-6
	■MACHINE No. PRINT	4-6
	■LABEL FORMAT EDIT	4-7
	■FORMAT No. + [PLU]	4-7
	■UNIT	4-8
	■DEFAULT PLU	4-8
	■UNIT DATA	4-9
	■NUMBER OF UNITS	4-9
	■LABEL LENGTH	4-9
4.5	POS Code	4-10
	■POS FLAG 8/3	4-10
	■10 DIGIT FLAG 8/13	4-10
	■POS TYPE	4-10
	■BAR TYPE	4-11
	■ITF	4-12
	■MANUFACTURE CODE	4-12
4.6	Item Code	4-13
	■BARCODE POSITION	4-13
	■DEPARTMENT CODE	4-13
	■GROUP CODE	4-13

4.7	Default Data	4-14
	■DATE PRINT FLAG	4-14
	■USED BY	4-14
	■PACKING TIME FLAG	4-14
	■EXPIRY TIME FLAG	4-15
	■BEST BEFORE FLAG	4-15
	■BEST BEFORE DATE	4-15
	■UNIT TYPE	4-15
4.8	Total Mode Select	4-16
	■DAILY TOTAL	4-16
	■WEEKLY TOTAL	4-16
	■MONTHLY TOTAL	4-16
4.9	Open Price	4-17
4.10	PLU Select	4-18
	■SALES MODE	4-18
	■UNIT PRICE	4-18
	■MD (Mark Down) FLAG	4-18
	■MD (Mark Down) PRICE	4-18
	■FIXED WEIGHT	4-19
	■PCS (Quantity)	4-19
	■TARE	4-19
	■DATE PRINT	4-19
	■USED BY	4-19
	■BEST BEFORE DATE FLAG	4-20
	■BEST BEFORE DATE	4-20
	■PACKING TIME FLAG	4-20
	■PACKING TIME DATA	4-20
	■EXPIRY TIME FLAG	4-20
	■EXPIRY TIME DATA	4-21
	■ITEM CODE	4-21
	■BARCODE TYPE	4-21
	■POS CODE TYPE	4-21
	■POS CODE FLAG	4-21
	■POS CODE	4-22
	■OPEN PRICE	4-22
	■EXTRA MESSAGE 1	4-22
	■EXTRA MESSAGE 2	4-22
	■EXTRA MESSAGE 3	4-22
	■COUPON MESSAGE	4-23
	■LOGO IMAGE 1	4-23
	■LOGO IMAGE 2	4-23
	■LABEL FORMAT No.	4-23
	■UPPER LIMIT	4-23
	■LOWER LIMIT	4-24
	■UNIT TYPE	4-24
	■DEPARTMENT CODE	4-24
	■GROUP CODE	4-24
	■RESISTER CODE	4-24
	■COST PRICE	4-25
	■POP MESSAGE	4-25

4.11 System	4-26
■SYSTEM	4-26
■PLU	4-26
■COMMODITY NAME	4-26
■PRESET KEY	4-26
■STORE ADDRESS	4-27
■DATE	4-27
■EXTRA MESSAGE 1	4-27
■OPEN PLU	4-27
■ITEM LIST	4-27
■RS232C COMMUNICATION	4-28
■COUPON MESSAGE	4-28
■EXTRA MESSAGE2	4-28
■EXTRA MESSAGE3	4-28
■TCP/IP COMMUNICATION	4-28
■OPERATOR NAME	4-29
■TITLE MESSAGE	4-29
■ADVERTISEMENT MESSAGE	4-29
■DEPARTMENT	4-29
■GROUP	4-29
■CAMPAIGN ITEM	4-30
4.12 Ethernet Setup	4-31
■IP ADDRESS SETUP	4-31
■GATEWAY ADDRESS SETUP	4-32
■SUBNET MASK SETUP	4-33
■SERVER ADDRESS SETUP	4-34
■LOG-IN NAME ADDRESS SETUP	4-35
■PASSWORD SETUP	4-35
■MAC ADDRESS SETUP	4-36
■DHCP SETUP	4-37
■NETWORK STATUS	4-38
4.13 System Timer	4-39
4.14 Password Setup	4-40
■REGISTRATION	4-40
■TOTAL	4-40
■SUBTRACTION	4-41
■SETUP	4-41
■PASSWORD CHANGE	4-41
4.15 Machine Number Setup	4-42

CHAPTER 5 ELECTRICITY COMPOSITION

5.1 Block wiring diagram	5-1
5.2 Main Board [PK-950B]	5-2
5.3 Connector Specifications	5-3
5.4 PK-229A (A/D board)	5-7
5.5 Lithium Battery	5-7
5.6 Power Unit (PB-LSF150-S)	5-8
5.7 PK-232 (TCP/IP)	5-9
5.8 PK-236A (Span switch)	5-10
5.9 PK-240 (DC/DC converter)	5-10
5.10 P-862A (Key board)	5-11

CHAPTER 6 TROUBLESHOOTING

6.1 Error List 6-1
 6.2 Symptom, Cause, And Measures 6-4

CHAPTER 7 PARTS REPLACEMENT

7.1 Removing the covers 7-1
 ■ Removing the front cover (shop side) 7-1
 ■ Removing the rear cover (customer side) 7-2
 7.2 Detaching Internal Parts 7-3
 ■ Detaching the keyboard relay board (P-862A) 7-3
 ■ Detaching the key sheet 7-3
 ■ Detaching the operator display 7-3
 ■ Detaching the customer display 7-4
 ■ Detaching the power supply 7-4
 ■ Detaching the span switch (PK-236A) 7-4
 ■ Detaching the PK-232 (TCP/IP) 7-5
 ■ Detaching the PK-240 (DC/DC converter) 7-5
 ■ Detaching the PK-229A (A/D board) 7-6
 ■ Detaching the PK-950B (Main board) 7-6
 ■ Detaching the load cell 7-7
 ■ limit adjustment 7-7
 ■ Detaching the thermal head 7-8
 ■ Cleaning the thermal head 7-9
 ■ Adjusting the belt tension 7-9
 ■ Cleaning the label sensor/peel sensor 7-9
 7.3 Periodical Replacement Parts 7-10

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/AC-4000H service manual.html](https://the-checkout-tech.com/manuals/ishida/AC-4000H%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)