



Counter Scale Printer

ASTRA

SERVICE MANUAL

Lb

 **WARNING**

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

CONTENTS

Chapter 1 Precautions

1.1 Cautions for Installation	2
1.1.1 Installation Areas	2
1.1.2 Power Supply	2
1.1.3 Level Adjustment	3
1.1.4 Handling Precautions	3

Chapter 2 Product Overview

2.1 Appearance	6
2.2 Display (lb)	6
2.3 Operation Key Sheet	7
2.3.1 Basic Function Keys	7
2.4 Program Key Sheet	8
2.5 Loading/Unloading Label Roll	9
2.5.1 Loading	9
2.5.2 Unloading	10
2.6 ASTRA Hardware Specifications	11

Chapter 3 Setup Mode

3.1 Setup Mode Entry	14
3.2 Label Print (b01-01)	15
3.3 Label Format (b01-02)	17
3.4 POS Code (b02)	20
3.5 Bar Code (b03)	22
3.6 Default Setup (b04)	23
3.7 Total (b05)	24
3.8 Forced Tare (b06)	25
3.9 Open Price Setup (b07)	26

Chapter 4 Test Mode

4.1 Test Mode Entry	28
4.2 Hardware Test	29
4.2.1 A/D Calibration (C01-01)	29
4.2.2 Key Check (C01-02)	30
4.2.3 Display Check (C01-03)	31
4.2.4 RS-232C Check (C01-04)	32
4.2.5 PROM Number Check (C01-05)	33

4.3 RAM Clear (C02)	34
4.4 Print Head (C03).....	36
4.5 Sensor Check (C04)	38
4.6 Total Memory (C05)	39
4.7 ROM Switch (C06).....	40

Chapter 5 Registration Mode

5.1 Registration Mode Entry	44
5.2 PLU Programming (P01)	45
5.2.1 Deleting a PLU	49
5.3 PLU Name (P02)	50
5.4 Price Change (P03)	51
5.5 Preset Keys (P04)	52
5.5.1 Preset Keys – PLU and Tare Values	52
5.5.2 Preset Function Keys	54
5.5.3 Deleting All Preset Keys	56
5.6 Shop Name/Address (P05)	57
5.7 Date/Time (P06).....	58
5.8 Extra Message (P07)	59
5.9 Default PLU (P08)	60
5.10 PLU List Print (P09).....	61
5.11 Communication (Sending) (P10-01)	62
5.12 Communication (Receiving) (P10-02)	63
5.13 Nutrition (P11)	64

Chapter 6 Text Editing

6.1 Edit Keys	70
6.2 Key Definition	70
6.3 Edit Display	71
6.4 Edit Examples	71
6.5 7-Segment Characters	72
6.6 Wordwrap Function	73
6.7 Selecting Italic Character Fonts	73
6.8 Character Size	74

Chapter 7 Normal Mode

7.1 Normal Mode Operations	76
7.2 Tare Weight Subtraction	78
7.3 Preset Function Keys	80

Chapter 8 Total Mode

8.1 Total Mode Operations	82
--	----

Chapter 9 Subtraction Mode

9.1 Subtraction Mode Operations	86
--	----

Chapter 10 Troubleshooting

10.1 Before Using the Troubleshooting Chart	90
10.2 Operator Troubleshooting Chart	90
10.3 Service Personnel Troubleshooting Chart	91

Chapter 11 Hardware Structure

11.1 Mechanical Structure	94
11.1.1 Exploded Diagram	94
11.1.2 Parts List	95
11.2 Electrical Diagram	97
11.2.1 Block Diagram	97
11.2.2 Circuit Boards	98

Chapter 12 Maintenance

12.1 Daily Maintenance	102
12.2 Setting the Power Supply Unit (LSF100-24S)	103
12.3 Parts Replacement	104
12.3.1 Replacing the Thermal Head	104
12.3.2 Replacing the Load Cell	105
12.3.3 Replacing the Print Roller	108
12.3.4 Replacing the Keysheet	110

Appendix

A.1 Sample Labels	114
A.2 Label Format Worksheets	119
A.3 Communication Cable Wiring Diagram	135

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/ishida/ASTRA Lb service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)