



ASTRA

SERVICE MANUAL (1st Edition)



IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

Table of Contents

| | |
|--|----------|
| CHAPTER 1 OVERVIEW | 4 |
| 1.1 Specifications..... | 4 |
| 1.2 Terminology..... | 4 |
| CHAPTER 2 SETUP | 5 |
| 2.1 External Dimensions..... | 5 |
| 2.2 Confirmation of Package Contents..... | 5 |
| 2.3 Pre-installation..... | 5 |
| 2.4 Initializing Scale | 5 |
| CHAPTER 3 ACCESSING SCALE MODES | 7 |
| 3.1 Test Mode | 7 |
| 3.1.1 Calling up Test Mode | 7 |
| 3.1.2 Menu Layout..... | 7 |
| 3.1.3 HARDWARE TEST (C01) | 7 |
| 3.1.4 RAM CLEAR (C02) | 10 |
| 3.1.5 PRINT HEAD (C03) | 11 |
| 3.1.6 SENSOR CHECK (C04) | 12 |
| 3.1.7 TOTAL MEMORY (C05) | 12 |
| 3.1.8 ROM SWITCH (C06) | 12 |
| 3.2 Setup Mode..... | 14 |
| 3.2.1 Calling up Setup Mode..... | 14 |
| 3.2.2 Menu Layout..... | 14 |
| 3.2.3 PRINT (B01-01) | 14 |
| 3.2.4 LABEL (B01-02) | 15 |
| 3.2.5 POS CODE (B02) | 16 |
| 3.2.6 BAR CODE (B03) | 17 |
| 3.2.7 DEFAULT (B04) | 18 |
| 3.2.8 SHELF LIFE (B04-02) | 18 |
| 3.2.9 TOTAL (B05) | 18 |
| 3.2.10 FORCED TARE (B06) (Only for USA)..... | 19 |
| 3.2.11 OPEN PRICE (B07) | 19 |

| | | |
|------------------|------------------------------------|-----------|
| CHAPTER 4 | HARDWARE STRUCTURE | 20 |
| 4.1 | Mechanical Structure..... | 20 |
| 4.2 | Electrical Diagram | 21 |
| 4.2.1 | Circuit Boards..... | 22 |
| CHAPTER 5 | MAINTENANCE | 26 |
| 5.1 | Replacing the Thermal Head..... | 26 |
| 5.2 | Replacing the Load Cell Unit | 27 |
| 5.3 | Replacing the Print Roller | 30 |
| 5.4 | Replacing the Keysheet | 31 |
| 5.5 | Troubleshooting | 33 |
| CHAPTER 6 | LABEL SAMPLES | 34 |

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)