



AstraLink

USER GUIDE Dealer Mode Operation

2nd Edition

4/10/2001



Contents

1. Introduction	1
2. How to Run AstraLink in Dealer Mode	2
3. ROM Switch Settings	3
4. AstraLink Setup.....	4
Customizing the PLU Edit Dialog.....	4
Options (General Settings)	6
5. Cable Specification Diagram	7

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/AstraLink dealer and cable spec manual.h](https://the-checkout-tech.com/manuals/ishida/AstraLink%20dealer%20and%20cable%20spec%20manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)