

ISHIDA BC-3000

Scale to Scale Communications

Setup Procedure & Operating Instructions



March 2006

BC-3000 Scale to Scale Communications

Overview	2
Communication Cables	2
Scale to Scale	2
Scale to PC (RS-232)	2
Scale to Scale Communications with a Master Board	3
System Configuration	3
Additional Components	3
Firmware	3
Installing the Master Board (P-835) into a BC-3000 Master Scale	4
Master Board Kit Components (Part No 48744 or 48745)	4
Procedure	4
Configuration Programming	6
Test Mode	6
Programming Mode	8
Communication Settings	9
Label Formats	9
Chinese (Hong Kong) firmware (version C1312x) - Special RAM Clear	10
Background	10
Procedure	10
Notes	10
Scale to Scale Communications without a Master Board	11
Overview	11
Configuration	11
Communication Cable	12
Programming	12
Operation	12
Totals	12
Errors	12
Label Formats	12
Miscellaneous	12

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/BC-3000 Scale to Scale Comms manual.h](https://the-checkout-tech.com/manuals/ishida/BC-3000%20Scale%20to%20Scale%20Comms%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)