




# IP-EMZ

## Service Manual

COUNTRY: CAN. USA. EU.

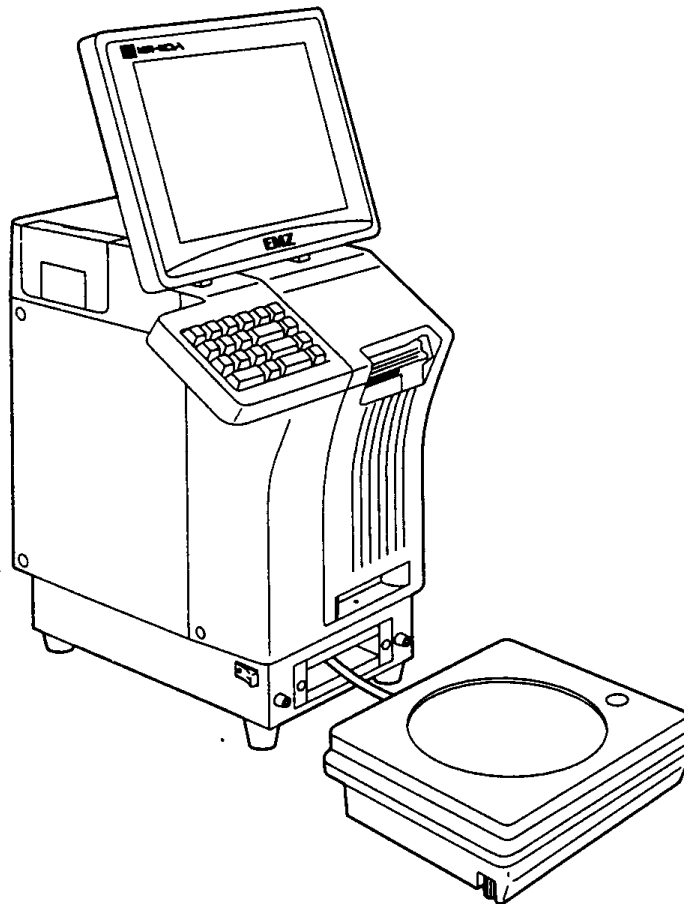

### IMPORTANT

- Read this manual thoroughly, and do not perform installation, operation, maintenance, or inspection unless you fully understand all of the contents.
- Keep this manual in a safe place where you can refer to it easily while installing, operating, and carrying out maintenance or inspections.

**ISHIDA CO., LTD.**

PN 107287

# TABLE OF CONTENTS

## Chapter 1 INSTALLATION

1.1	SPECIFICATIONS.....	1-2
1.2	NAME OF EACH PART .....	1-4
1.2.1	FRONT VIEW.....	1-4
1.2.2	REAR VIEW.....	1-4
1.3	OUTER DIMENSIONS .....	1-5
1.4	PREPARATION FOR INSATALLATION.....	1-6
1.4.1	UNPACKING .....	1-6
1.4.2	THINGS TO BE PREPARED .....	1-6
1.5	PRECAUTIONS FOR INSTALLATION .....	1-7
1.5.1	GENERAL PRECAUTIONS .....	1-7
1.5.2	MAINTENANCE PRECAUTIONS .....	1-7
1.5.3	PROHIBITED LOCATIONS.....	1-7
1.5.4	PRECAUTIONS FOR POWER SUPPLY .....	1-7
1.6	HARDWARE INSTALLATION.....	1-8
1.7	FINALIZING INSTALLATION.....	1-10

## Chapter 2 SETUP MODE

2.1	SETUP MENU ENTRY .....	2-2
2.2	SETUP MENU .....	2-3
2.3	EXPIRY DATE SETTING.....	2-5
2.4	PASSWORD SETTING .....	2-8
2.5	WORDWRAP WIDTH SETTING .....	2-9
2.6	REFERENCE DATA SETUP.....	2-10
2.7	TOTAL ADD SETTING .....	2-12
2.8	BARCODE SETUP .....	2-14
2.9	ITEM CODE SETTING .....	2-16
2.10	PLU DEFAULT DATA SETTING .....	2-17
2.11	PLU UPDATE SETTING.....	2-19
2.12	KEY LOCK SETTING .....	2-21
2.13	PLU DATE/TIME SETTING .....	2-24
2.14	PLU OPERATION SETTING .....	2-25

2.15	ERROR SETTING .....	2-26
2.16	PRINT SELECT SETTING .....	2-27

### Chapter 3 TEST MODE

3.1	TEST MENU ENTRY .....	3-2
3.2	TEST MENU .....	3-3
3.3	KEY CHECK MENU .....	3-4
3.3.1	STROKE KEY CHECK.....	3-5
3.3.2	TOUCH PANEL ADJUSTMENT .....	3-6
3.4	MACHINE SET 1/2: BASIC COMPONENT .....	3-7
3.4.1	MACHINE SET 1/2 (COMPONENT) .....	3-7
3.4.2	MACHINE SET 2/2 (VARIATION).....	3-8
3.5	SELF DIAGNOSTIC .....	3-9
3.6	MEMORY INITIALIZATION .....	3-10
3.7	DISPLAY ADJUSTMENT .....	3-11
3.8	SCALE CALIBRATION .....	3-12
3.8.1	A/D DATA INITIALIZATION, ZERO POINT/SPAN ADJUSTMENT .....	3-12
3.8.2	SCALE ADJUSTMENT .....	3-14
3.9	PRINT ADJUSTMENT 1/2: PRINTER HEAD .....	3-15
3.9.1	PRINT ADJUSTMENT 1/2.....	3-15
3.9.2	PRINT ADJUSTMENT 2/2.....	3-22
3.10	ROM VERSION DISPLAY .....	3-25
3.11	COMMUNICATION CHECK .....	3-26
3.12	OPTION CHECK .....	3-27
3.13	MEMORY DATA CHANGE MENU.....	3-28
3.13.1	SRAM DATA CHANGE.....	3-29
3.13.2	FROM DATA REFERENCE.....	3-30
3.14	TIME AND DATE SETTING.....	3-31

### Chapter 4 SYSTEM MODE

4.1	SYSTEM MENU ENTRY .....	4-2
4.2	SYSTEM MENU .....	4-3
4.3	TCP/IP SETUP .....	4-5
4.4	SYSTEM DATA SETUP .....	4-7
4.5	AUTO PROGRAM SETTING.....	4-9
4.5.1	AUTOMATIC UPDATE ITEMS .....	4-11
4.6	LABEL PRINT COMBINATION SETUP .....	4-12
4.6.1	CONNECTED PRINTER / PATTERN SELECTION ITEMS .....	4-18
4.6.2	LABEL DETAIL SETUP .....	4-19
4.7	FORMAT SETTING .....	4-22
4.8	PRINT ITEM SETTING.....	4-23

4.9	FILE CHECK .....	4-25
4.10	FILE INPUT/OUTPUT .....	4-27
4.11	FREE MESSAGE NAME REGISTRATION .....	4-30
4.12	LINK MASTER ERROR SETUP .....	4-31
4.13	DISPLAY ERROR LOG .....	4-32
	4.13.1 ERROR LOG FILE OUTPUT PROCEDURE.....	4-34
	4.13.2 ERROR LOG FILE OUTPUT DELETE PROCEDURE.....	4-35
4.14	SRAM DATA INPUT/OUTPUT .....	4-36
4.15	FILE TRANSFER MENU .....	4-42
	4.15.1 OPTION DEVICE PROGRAM FILE COPY.....	4-43
	4.15.2 IMAGE FILE COPY .....	4-44
4.16	MEAT CUT SETUP .....	4-46
4.17	TRACEABILITY SETUP .....	4-48
4.18	SPECIAL TIME.....	4-49
4.19	CF FILE I/O .....	4-51
	4.19.1 FILE DOWNLOAD .....	4-51
	4.19.2 FILE UPLOAD.....	4-54
	4.12.3 FILE DELETION.....	4-57
4.20	MACHINE NO. ....	4-59
4.21	EXCHANGE RATE.....	4-60
4.22	SCANNER SETUP.....	4-61

## **Chapter 5 MECHANICAL ASSEMBLY**

5.1	CASSETTE UNIT .....	5-2
5.2	MAIN BODY UNIT .....	5-4
5.3	DISPLAY UNIT .....	5-6
5.4	SCALE UNIT .....	5-7

## **Chapter 6 ELECTRIC ASSEMBLY**

6.1	ELECTRIC BLOCK DIAGRAM.....	6-2
6.2	MAIN PC BOARD (P-910R-2) .....	6-3
	6.2.1 BOARD LOCATION .....	6-3
	6.2.2 I/O SIGNALS.....	6-4
6.3	THERMAL PC BOARD (P-964-3).....	6-7
	6.3.1 BOARD LOCATION .....	6-7
	6.3.2 I/O SIGNALS.....	6-8
6.4	CONTROL CONSOLE PC BOARD (P-917B-2) .....	6-10
	6.4.1 BOARD LOCATION .....	6-10
	6.4.2 I/O SIGNALS.....	6-11
6.5	CONNECTOR JUNCTION PC BOARD (P-918A-1).....	6-12
	6.5.1 BOARD LOCATION .....	6-12
	6.5.2 I/O SIGNALS.....	6-12

6.6	LAN PC BOARD (P-967-1).....	6-14
6.6.1	BOARD LOCATION .....	6-14
6.6.2	I/O SIGNALS.....	6-14
6.7	DISPLAY JUNCTION PC BOARD (P-919B-3) .....	6-15
6.7.1	BOARD LOCATION .....	6-15
6.7.2	I/O SIGNALS.....	6-15
6.8	SCALE BOARD (P-930A-1/2) .....	6-17
6.8.1	BOARD LOCATION .....	6-17
6.8.2	DIP SWITCH SETTING .....	6-17
6.8.3	I/O SIGNALS.....	6-18
6.9	SWITCHING POWER SUPPLY (2H113WI) .....	6-19
6.9.1	BOARD LOCATION .....	6-19
6.9.2	I/O SIGNALS.....	6-20

## **APPENDIX A LABEL FORMATTING**

A.1	LABEL FORMAT TABLE .....	A-2
A.2	LABEL FORMAT TABLE CONFIGURATION.....	A-3
A.3	PRINTING POSITION CHANGE .....	A-4
A.4	PRINT SIZE CHANGE .....	A-5
A.5	FIXED CHARACTER CONTENT CHANGE .....	A-6

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/IP-EMZ service manual.html](https://the-checkout-tech.com/manuals/ishida/IP-EMZ%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)