



IW Weigh Indicator (IWQ-D)

Setup Manual



Design and specifications are subject to change without notice.



44 SANNO-CHO SHOGDIN SAKYO-KU KYOTO, 606-8382 JAPAN

PHONE : 81-75-771-4141

FACSIMILE : 81-75-751-1834

TELEX : 05422065 SCALES J

CABLE ADD: "SCALES"KYOTO

URL : <http://www.ishida.co.jp>

Manual No. 0186A

ISHIDA CO., LTD.


097-0054-11 (E1A5)

CONTENTS

1. Product Overview	1
1.1 Appearance and Features	1
1.2 Operation Panel	2
1.3 Outer Dimensions	3
1.4 Specifications	4
1.5 Exploded Drawing	5
1.6 Block Diagram	6
1.7 Main Board (P-935)	7
2. Hardware Installation	8
2.1 Precautions	8
2.2 Required Tools	8
2.3 Load Cell Connection Procedure	9
3. Default Bit Settings (C1 menu)	12
3.1 Country No. List (Addresses 112 to 115)	13
3.2 Scale No. List (Addresses 110 and 111)	14
3.3 Setting Procedure (Addresses 110 to 115 in C1 Menu)	15
4. Individual Bit Settings (C7 and C1 Menus)	19
4.1 Measurement Condition Setup Table (Addresses 110 and 111)	20
4.2 Country No. List (Addresses 112 to 115)	21
4.3 C7 Menu Setting Procedure	22
4.4 C1 Menu Setting Procedure	24

1. Product Overview

1.1 Appearance and Features

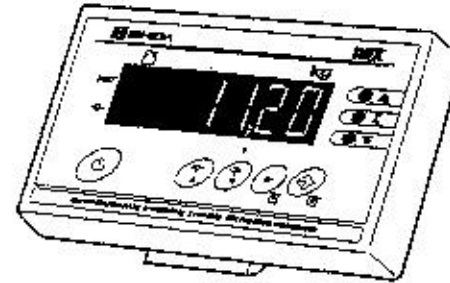

- Large, clear fluorescent display
- Upper and lower weight limits can be set
- Superior visibility featuring large digits
- Weight checking function for accurate weighing

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/ishida/IWB IWQ IWX setup including calibration>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)