




# OMNi-3000S/ST


---

## SERVICE MANUAL

*OMNi-3000S*

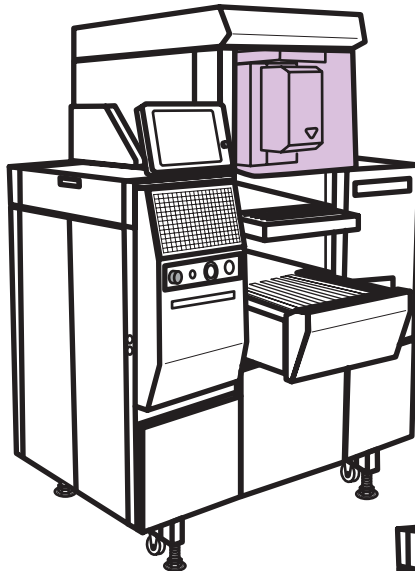

*OMNi-3000ST*

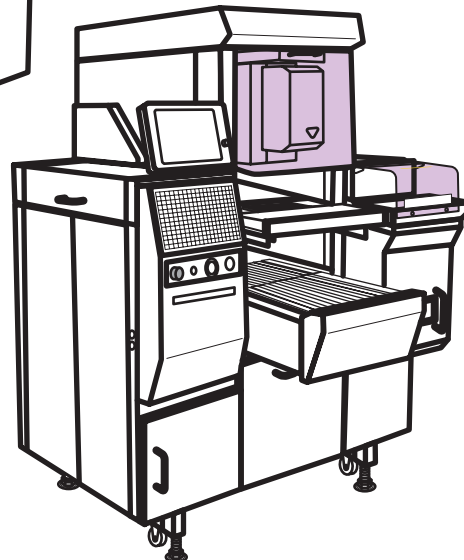

### IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

# CONTENTS

## Chapter 1 OMNi-3000S OVERVIEW

1.1	APPEARANCE .....	1-2
1.2	BASIC SPECIFICATIONS .....	1-3
1.3	NAME OF EACH UNIT .....	1-4
1.4	NAME OF EACH MOTOR .....	1-5
1.5	NAME OF EACH POWER SUPPLY .....	1-6
1.6	FUNCTION OF EACH UNIT .....	1-7
1.7	STICKERS .....	1-9
1.7.1	WARNING SYMBOLS .....	1-9
1.7.2	STICKER DEFINITIONS .....	1-10
1.7.3	STICKER PLACEMENT .....	1-11

## Chapter 2 OMNi-3000ST OVERVIEW

2.1	APPEARANCE .....	2-2
2.2	BASIC SPECIFICATIONS .....	2-3
2.3	NAME OF EACH UNIT .....	2-4
2.4	NAME OF EACH MOTOR .....	2-5
2.5	NAME OF EACH POWER SUPPLY .....	2-6
2.6	FUNCTION OF EACH UNIT .....	2-7
2.7	STICKERS .....	2-9
2.7.1	WARNING SYMBOLS .....	2-9
2.7.2	STICKER DEFINITIONS .....	2-10
2.7.3	STICKER PLACEMENT .....	2-11

## Chapter 3 INSTALLATION

3.1	INSTALLATION PRECAUTIONS .....	3-2
3.1.1	NECESSARY TOOLS .....	3-2
3.1.2	PROHIBITED LOCATIONS .....	3-2
3.1.3	POWER SUPPLY .....	3-2
3.1.4	PACKING MATERIALS .....	3-3
3.1.5	WORK CLOTHES .....	3-3
3.2	LEVEL ADJUSTMENT .....	3-4
3.3	INSTALLATION SPACE .....	3-5
3.4	SAFETY SWITCH .....	3-6
3.5	CABLE CONNECTION .....	3-7
3.6	MAIN POWER ON/OFF .....	3-8
3.6.1	POWER ON .....	3-8
3.6.2	POWER OFF .....	3-8
3.6.3	EMERGENCY STOP BUTTON .....	3-8
3.7	MEMORY INITIALZATION .....	3-9
3.8	LABEL SETTING .....	3-11

3.9	FILM ROLL SETTING .....	3-12
3.9.1	FILM SETTING .....	3-13
3.9.2	FILM POSITION ADJUSTMENT .....	3-14
3.9.3	BRAKE UNIT ADJUSTMENT .....	3-15
3.10	HEATER SWITCH .....	3-16

## Chapter 4 TEST MODE

4.1	HARDWARE TEST .....	4-2
4.1.1	KEY CHECK .....	4-3
4.1.2	COMMUNICATION CHECK .....	4-7
4.1.3	A/D CHECK .....	4-8
4.1.4	THERMAL HEAD SET .....	4-9
4.1.5	PROGRAM NUMBER .....	4-11
4.2	MEMORY INITIALIZATION .....	4-12
4.2.1	RAM DISK ALL CLEAR PROCESS .....	4-12
4.2.2	E2PROM INITIALIZE PROCESS .....	4-12
4.2.3	TEST DATA SETTING PROCESS .....	4-13
4.3	PERIPHERAL MACHINE .....	4-14
4.3.1	WRAPPER CHECK .....	4-15
4.3.2	WRAPPER SETTING .....	4-16
4.3.3	PRINTER ADJUSTMENT .....	4-18
4.4	FILE CONTROL .....	4-21
4.4.1	FILE CHECK .....	4-22
4.4.2	DATA SAVE / LOAD .....	4-23
4.5	ROM SWITCH SETTING .....	4-26
4.5.1	ROM SWITCH SETTING 1/2 .....	4-26
4.5.2	ROM SWITCH SETTING 2/2 .....	4-29

## Chapter 5 SETUP MODE

5.1	LABEL FORMAT .....	5-2
5.2	BARCODE SETUP .....	5-5
5.3	CODE SETUP .....	5-7
5.4	INITIAL DATA SET .....	5-8
5.5	PRINT SELECTION .....	5-11
5.6	AUTO RENEW SET .....	5-12
5.7	TOTAL SELECT .....	5-13
5.8	FUNCTION KEY SET .....	5-14
5.9	PASSWORD SETTING .....	5-16
5.10	LABEL FORMAT EDIT .....	5-17
5.10.1	FORMAT CHANGE .....	5-17
5.10.2	LABEL FORMAT HEADER EDIT .....	5-19
5.10.3	FORMAT EDIT FOR EACH UNIT .....	5-20
5.11	WRAPPER SETTING .....	5-41
5.12	LABEL POSITION ADJUSTMENT .....	5-45

## Chapter 6 PROGRAM MODE

6.1	PLU FILE .....	6-2
6.1.1	PLU FILE SCREEN 1/3.....	6-2
6.1.2	PLU FILE SCREEN 2/3.....	6-5
6.1.3	PLU FILE SCREEN 2/3.....	6-6
6.1.4	PLU FILE SCREEN 3/3.....	6-8
6.2	COMMODITY NAME .....	6-10
6.2.1	COMMODITY NAME EDIT SCREEN .....	6-10
6.2.2	SAVE CONFIRMATION POP-UP SCREEN .....	6-14
6.2.3	DELETION CONFIRMATION POP-UP SCREEN .....	6-15
6.2.4	COPY EXECUTION CONFIRMATION POP-UP SCREEN .....	6-16
6.2.5	EDITOR SPECIFICATION .....	6-17
6.3	PRICE CHANGE .....	6-18
6.3.1	PRICE CHANGE EDIT SCREEN .....	6-18
6.3.2	PRICE CHANGE (REAL) EDIT SCREEN .....	6-19
6.3.3	PRICE CHANGE (BATCH) EDIT SCREEN .....	6-20
6.4	EXTRA MESSAGE .....	6-21
6.4.1	EXTRA MESSAGE EDIT SCREEN .....	6-21
6.4.2	SAVE CONFIRMATION POP-UP SCREEN .....	6-22
6.4.3	DELETE CONFIRMATION POP-UP SCREEN .....	6-23
6.4.4	COPY CONFIRMATION POP-UP SCREEN .....	6-24
6.5	DATE/TIME REGISTRATION .....	6-25
6.6	STORE NAME/ADDRESS .....	6-26
6.6.1	STORE FILE EDIT SCREEN .....	6-26
6.6.2	STORE FILE DELETE CONFIRMATION POP-UP SCREEN .....	6-27
6.6.3	STORE NAME EDIT SCREEN .....	6-28
6.6.4	STORE NAME SAVE CONFIRMATION POP-UP SCREEN .....	6-29
6.6.5	STORE NAME DELETE CONFIRMATION POP-UP SCREEN .....	6-30
6.6.6	STORE NAME COPY CONFIRMATION POP-UP SCREEN .....	6-31
6.6.7	STORE ADDRESS EDIT SCREEN .....	6-32
6.6.8	STORE ADDRESS SAVE CONFIRMATION POP-UP SCREEN .....	6-33
6.6.9	STORE ADDRESS DELETE CONFIRMATION POP-UP SCREEN .....	6-34
6.6.10	STORE ADDRESS COPY CONFIRMATION POP-UP SCREEN .....	6-35
6.7	PRESET .....	6-36
6.7.1	PRESET FILE EDIT SCREEN .....	6-36
6.7.2	DELETE CONFIRMATION POP-UP SCREEN .....	6-37
6.8	BARCODE CHECK LABEL .....	6-38
6.9	DEPARTMENT NAME .....	6-39
6.9.1	DEPARTMENT NAME EDIT SCREEN .....	6-39
6.9.2	SAVE CONFIRMATION POP-UP SCREEN .....	6-40
6.9.3	DELETE CONFIRMATION POP-UP SCREEN .....	6-41
6.9.4	COPY CONFIRMATION POP-UP SCREEN .....	6-42
6.10	GROUP NAME .....	6-43
6.10.1	GROUP NAME EDIT SCREEN .....	6-43
6.10.2	SAVE CONFIRMATION POP-UP SCREEN .....	6-44
6.10.3	DELETE CONFIRMATION POP-UP SCREEN .....	6-45
6.10.4	COPY CONFIRMATION POP-UP SCREEN .....	6-46
6.11	TRAY FILE .....	6-47
6.11.1	TRAY PROGRAM 1/2 SCREEN .....	6-47
6.11.2	TRAY PROGRAM 2/2 SCREEN .....	6-49
6.11.3	TRAY PROGRAM 1/2 DELETE CONFIRMATION POP-UP SCREEN .....	6-50

6.11.4	TRAY NAME EDIT SCREEN .....	6-51
6.11.5	RAY NAME SAVE CONFIRMATION POP-UP SCREEN .....	6-52
6.11.6	TRAY NAME DELETE CONFIRMATION POP-UP SCREEN .....	6-53
6.11.7	TRAY NAME COPY CONFIRMATION POP-UP SCREEN .....	6-54
6.12	CAMPAIGN ITEM .....	6-55
6.12.1	CAMPAIGN ITEM 1/2 EDIT SCREEN .....	6-55
6.12.2	CAMPAIGN ITEM 1/2 DELETE CONFIRMATION POP-UP SCREEN .....	6-56
6.12.3	CAMPAIGN ITEM 2/2 EDIT SCREEN .....	6-57
6.12.4	CAMPAIGN ITEM 2/2 DELETE CONFIRMATION POP-UP SCREEN .....	6-58
6.13	CASSETTE NUMBER .....	6-59
6.14	MACHINE SETUP .....	6-60
6.15	ONLINE SETUP .....	6-61
6.16	FILE DOWNLOAD .....	6-62
6.17	NUTRITION .....	6-63

## Chapter 7 MAIN UNITS & ERROR MESSAGES

7.1	CONTROL CONSOLE .....	7-2
7.2	PRINTER / APPLICATOR .....	7-4
7.3	REAR CHANGE MOTOR .....	7-7
7.4	LEFT / RIGHT CHANGE MOTOR .....	7-9
7.5	PUSHER .....	7-11
7.6	FEEDER MOVEMENT .....	7-13
7.7	FEEDER DRIVE .....	7-15
7.8	INFEED CONVEYOR .....	7-17
7.9	SET ROLLER .....	7-19
7.10	SWITCHING LIFT .....	7-21
7.11	LABELING MACHINE MOVEMENT .....	7-23
7.12	FILM ROLLER .....	7-25
7.13	CUTTER .....	7-27
7.14	LIFT SERVO CONTROLLER .....	7-29
7.15	FILM FEEDER .....	7-31
7.16	BOARD(P-857, P-858A, P-858B, P-858C) .....	7-33
7.17	EMERGENCY STOP BUTTON .....	7-39
7.18	FOREIGN OBJECT / ITEM SENSOR .....	7-41
7.19	SOLENOID .....	7-43
7.20	FILM TENSION CONTROL DIAL .....	7-45
7.21	LIFT .....	7-47
7.22	SAFETY SWITCH .....	7-49
7.23	LIFT DRIVE .....	7-51
7.24	LIFT HEAD .....	7-53
7.25	FUSE MAX. CAPACITY .....	7-54
7.26	DISCHAGE CONVEYOR .....	7-55

**Chapter 8 LOAD CELL UNIT**

8.1 LOCATION OF MAIN PARTS ..... 8-2  
8.2 REPLACING THE LOAD CELL UNIT ..... 8-3  
8.3 SPAN ADJUSTMENT ..... 8-6  
    8.3.1 ADJUSTMENT PROCEDURE ..... 8-6  
    8.3.2 SPAN ADJUSTMENT FLOWCHART ..... 8-7

**Chapter 9 WRAPPING KNOWLEDGE**

9.1 WRAPPING PROGRAMMING ..... 9-2

**Chapter 10 WIRING DIAGRAMS ..... 10-1**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*