


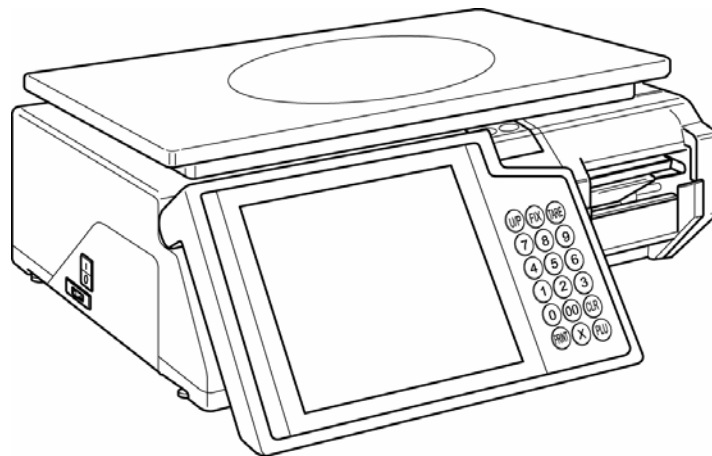

## Automatic Scale Register

# SR-2000 $\alpha$

## SERVICE MANUAL



### CAUTION

#### READ AND UNDERSTAND THIS MANUAL

- Thoroughly read and understand this manual before installing, operating, inspecting, or servicing the machine.
- Keep this manual in a safe place where you can refer to it whenever necessary.

# CONTENTS

<b>Chapter 1</b>	<b>OUTLINE</b>	<b>1-1</b>
1.1	NAME OF EACH PART	1-1
1.2	SPECIFICATIONS	1-2
1.3	FEATURE	1-3
<b>Chapter 2</b>	<b>MACHINE SETUP</b>	<b>2-1</b>
2.1	DELIVERY WORK FLOW	2-1
2.2	CONFIRMATION OF INSTALLATION PLACE	2-2
2.3	POWER SUPPLY	2-2
2.4	CONFIRMATION OF INSTALLATION CONDITIONS	2-2
2.5	BACK-UP DEVICE CONNECTION	2-3
2.6	LEVEL ADJUSTMENT	2-4
2.7	PROCESSING IN EACH MODE	2-5
2.8	SPAN CONFIRMATION	2-6
2.9	OPERATION CHECK	2-6
2.10	OPERATION PROCEDURES AND PRECAUTIONS	2-6
<b>Chapter 3</b>	<b>TEST MODE</b>	<b>3-1</b>
3.1	START UP OF TEST MODE	3-1
3.2	TEST MODE HIERARCHICAL CHART	3-2
3.3	KEY CHECK	3-3
3.4	MACHINE TYPE SELECTION	3-5
3.5	SELF DIAGNOSTIC	3-6
3.6	MEMORY CLEAR	3-7
3.7	DISPLAY CONFIRMATION	3-7
3.8	SCALE CALIBRATION	3-8
3.9	PRINTER ADJUSTMENT	3-8
3.10	PROGRAM NUMBER	3-12
3.11	COMMUNICATION CHECK	3-13
3.12	OPTION CHECK	3-15
3.13	MEMORY DATA CHANGE	3-15
<b>Chapter 4</b>	<b>SYSTEM SETTING MENU</b>	<b>4-1</b>
4.1	START UP OF SYSTEM SETTING MENU	4-1
4.2	HIERARCHICAL CHART OF SYSTEM SETTING MENU	4-2
4.3	SALES MODE SETTING	4-3
4.4	MACHINE NUMBER SETTING	4-4
4.5	HOLD DATA SETTING	4-5
4.6	AUTOMATIC PROGRAM SETTING	4-6
4.7	OPTION SETTING	4-7
4.8	CASSETTE SETTING	4-8
4.9	LABEL SPECIFICATION SETTING	4-10
4.10	FORMAT SETTING	4-12
4.11	UNIT SETTING	4-13
4.12	PRINT SETTING	4-13
4.13	FILE CHECK	4-14
4.14	FILE SAVE/LOAD	4-15

<b>Chapter 5</b>	<b>SET UP MENU</b>	<b>5-1</b>
5.1	START-UP OF SET UP MENU	5-1
5.2	SET UP MENU 1	5-2
1.	Expiry Data Setting	5-2
2.	Password Setting	5-3
3.	Reference Data Setting	5-3
4.	Total Setting	5-4
5.	Preset Report Setting	5-4
6.	Download Setting	5-5
7.	Word Wrap Width Setting	5-6
8.	Key Image Select	5-6
5.3	SET UP MENU 2	5-7
1.	System Data Setting	5-8
2.	Barcode Setting	5-9
3.	Product Code Setting	5-9
4.	PLU Update	5-10
5.	Default PLU Data Setting	5-11
<b>Chapter 6</b>	<b>ELECTRICITY</b>	<b>6-1</b>
6.1	NAME OF EACH ELECTRICAL COMPONENT	6-1
6.2	ELECTRIC BLOCK DIAGRAM (BENCH TYPE)	6-2
6.3	ELECTRIC BLOCK DIAGRAM (POLE TYPE)	6-3
6.4	MAIN BOARD (P-910)	6-4
6.5	THERMAL BOARD (P-909)	6-6
6.6	A/D BOARD (P-888)	6-8
6.7	POWER SUPPLY UNIT	6-9
6.8	CONNECTOR BOARD (P-989)	6-10
6.9	MAIN BODY ASSEMBLY	6-11
6.10	PRINTER UNIT ASSEMBLY	6-12
6.11	OPERATING CONSOLE ASSEMBLY	6-13
6.12	POLE UNIT ASSEMBLY	6-14
<b>Chapter 7</b>	<b>MECHANICAL COMPONENTS</b>	<b>7-1</b>
7.1	DETACH OF TOP HOUSING	7-1
7.2	EXCHANGE OF THERMAL HEAD	7-3
7.3	EXCHANGE OF LABEL SENSOR	7-5
7.4	EXCHANGE OF PEEL SENSOR	7-6
7.5	EXCHANGE OF CASSETTE SENSOR	7-7
7.6	POSITIONING OF THE THERMAL HEAD	7-8
<b>APPENDIX</b>	<b>LABEL FORMATTING</b>	<b>A-1</b>
A.1	LABEL FORMAT TABLE	A-1
A.2	CONFIGURATION OF LABEL FORMAT TABLE	A-2
A.3	MAX. NUMBER OF LABEL FORMAT TABLES	A-2
A.4	CHANGE OF PRINTING POSITION	A-3
A.5	CHANGE OF THE PRINT SIZE	A-4
A.6	CHANGE OF THE FIXED CHARACTER CONTENTS	A-5

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*