

Ishida SR-2000a Touch Screen Scale and Printer Quick Setup Instructions

For those familiar with the Ishida SR-2000a Touch Screen scale, this document may be used as a quick reference guide. Simply refer to the Table of Contents below and go to the appropriate page for instructions. It may also be used as a source of detailed step-by-step instructions to setup and configure the scale.

I.	Check and Update Firmware.....	2
II.	Clear Memory: Standard and Special	4
III.	Install RF card	7
IV.	Configure IP Address, Subnet Mask, etc.	8
V.	Load i-View Backup File.....	11
VI.	Setting Up Label Cassette(s)	13
VII.	Setting Up Label Specifications	14
VIII.	Enable Ad (Display) Messages:	16
IX.	Load PLU File Via ScaleLink Pro	17
X.	Create Keyboards: Categories, Presets, and Function Keys.....	18
	A. Importing Key Images into ScaleLink Pro.....	18
	B. Assigning Images to Keys	18
	C. Assigning Category Keys.....	19
	D. Assigning Function Keys	19
XI.	Appendix.....	21
	1. Label sizes	21

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*