
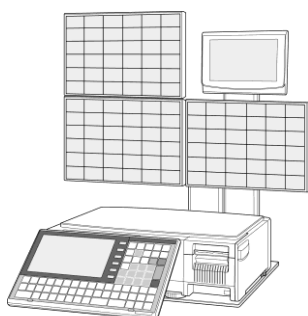
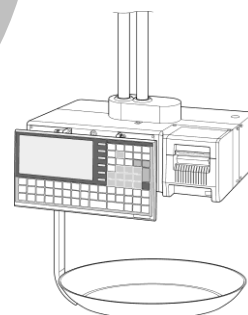


***UNI-7***  
***Program Manual***

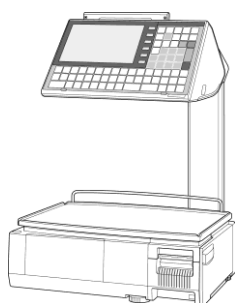

**IMPORTANT**

- Read this manual thoroughly, and do not perform installation, operation, maintenance, or inspection unless you fully understand all of the contents.
- Keep this manual in a safe place where you can refer to it easily while installing, operating, and carrying out maintenance or inspections.

**ISHIDA CO., LTD.**

# TABLE OF CONTENTS

## Chapter 1 BASIC INFORMATION

<b>1.1</b>	<b>OUTER DIMENSIONS FOR EACH TYPE .....</b>	<b>1-1</b>
1.1.1	OUTER DIMENSIONS FOR BENCH TYPE .....	1-1
1.1.2	OUTER DIMENSIONS FOR POLE TYPE .....	1-2
1.1.3	OUTER DIMENSIONS FOR BAKERY TYPE .....	1-3
1.1.4	OUTER DIMENSIONS FOR SELF-SERVICE TYPE .....	1-4
1.1.5	OUTER DIMENSIONS FOR ELEVATED TYPE .....	1-5
1.1.6	OUTER DIMENSIONS FOR HANGING TYPE .....	1-6
<b>1.2</b>	<b>SPECIFICATIONS.....</b>	<b>1-7</b>
<b>1.3</b>	<b>INSTALLATION .....</b>	<b>1-8</b>
1.3.1	POWER SUPPLY .....	1-8
1.3.2	PRECAUTIONS FOR INSTALLATION.....	1-9

## Chapter 2 SETUP MODE

<b>2.1</b>	<b>ENTERING SETUP MODE.....</b>	<b>2- 1</b>
<b>2.2</b>	<b>CASSETTE SETTING .....</b>	<b>2- 4</b>
<b>2.3</b>	<b>LABEL SETTING .....</b>	<b>2- 11</b>
<b>2.4</b>	<b>LABEL FORMAT SETTING .....</b>	<b>2- 12</b>
<b>2.5</b>	<b>BARCODE SETTING .....</b>	<b>2- 14</b>
<b>2.6</b>	<b>CUSTOM BARCODE SETTING .....</b>	<b>2- 18</b>
<b>2.7</b>	<b>MENU TILTLE EDITING.....</b>	<b>2- 22</b>
<b>2.8</b>	<b>OPERATION SETTING .....</b>	<b>2- 28</b>
<b>2.9</b>	<b>ERROR PROCESS SETTING .....</b>	<b>2- 31</b>
<b>2.10</b>	<b>ERROR LOG DISPLAY.....</b>	<b>2- 33</b>
<b>2.11</b>	<b>TRACEABILITY SETTING .....</b>	<b>2- 34</b>
<b>2.12</b>	<b>DUAL CURRENCY SETTING .....</b>	<b>2- 35</b>
<b>2.13</b>	<b>PRICE DOUNDING SETTING .....</b>	<b>2- 36</b>
<b>2.14</b>	<b>FREQUENT SHOPPER SETTING .....</b>	<b>2- 37</b>
<b>2.15</b>	<b>DATA DISTRIBUTION SETTING .....</b>	<b>2- 38</b>
<b>2.16</b>	<b>COUNTRY SETTING.....</b>	<b>2- 42</b>
<b>2.17</b>	<b>FILE SAVE / LOAD .....</b>	<b>2- 43</b>

## Chapter 3 ADJUSTMENT MODE

<b>3.1</b>	<b>ADJUSTMENT MODE ENTRY.....</b>	<b>3- 1</b>
<b>3.2</b>	<b>KEY CHECK.....</b>	<b>3- 3</b>
<b>3.3</b>	<b>FIRMWARE DETAILS .....</b>	<b>3- 5</b>

---

3.4	MEMORY CLEAR .....	3- 6
3.5	PRINTER ADJUSTMENT .....	3- 8
3.6	CALIBRATION .....	3- 16
3.7	DOWNLOADING .....	3- 19
3.8	OPTION CHECK .....	3- 23
3.9	DISPLAY CAPTURE .....	3- 25
3.10	MODEL SETTING .....	3- 26

## Chapter 4 ERROR SCREENS

4.1	ERROR SCREENS.....	4- 1
-----	--------------------	------

## Appendix TEXT EDITING

A.1	OPERATION PANEL AND KEY FUNCTIONS .....	A-1
A.2	NORMAL CHARACTER REGISTRATION.....	A-3
A.3	SPECIAL CHARACTER REGISTRATION.....	A-6
A.4	CHARACTER SELECTION.....	A-8
A.5	LINE DELETION .....	A-10
A.6	CHARACTER DELETION .....	A-11
A.7	CHARACTER BACKSPACING.....	A-13

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/UNI-7 programing manual.html](https://the-checkout-tech.com/manuals/ishida/UNI-7%20programing%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)