
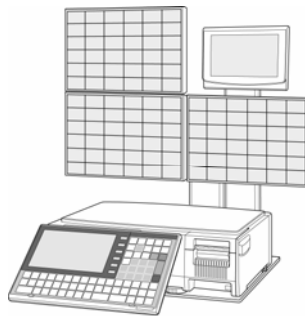


# UNI-7

## Service Manual

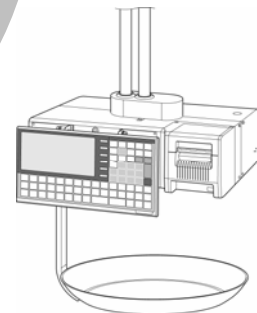

### IMPORTANT

- Read this manual thoroughly, and do not perform installation, operation, maintenance, or inspection unless you fully understand all of the contents.
- Keep this manual in a safe place where you can refer to it easily while installing, operating, and carrying out maintenance or inspections.

**ISHIDA CO., LTD.**

# TABLE OF CONTENTS

## Chapter 1 BASIC INFORMATION

<b>1.1</b>	<b>OUTER DIMENSIONS FOR EACH TYPE .....</b>	<b>1-1</b>
1.1.1	OUTER DIMENSIONS FOR BENCH TYPE .....	1-1
1.1.2	OUTER DIMENSIONS FOR POLE TYPE .....	1-2
1.1.3	OUTER DIMENSIONS FOR BAKERY TYPE .....	1-3
1.1.4	OUTER DIMENSIONS FOR SELF-SERVICE TYPE .....	1-4
1.1.5	OUTER DIMENSIONS FOR ELEVATED TYPE .....	1-5
1.1.6	OUTER DIMENSIONS FOR HANGING TYPE .....	1-6
<b>1.2</b>	<b>SPECIFICATIONS .....</b>	<b>1-7</b>
<b>1.3</b>	<b>INSTALLATION .....</b>	<b>1-8</b>
1.3.1	POWER SUPPLY .....	1-8
1.3.2	PRECAUTIONS FOR INSTALLATION .....	1-9

## Chapter 2 ASSEMBLY DRAWINGS

<b>2.1</b>	<b>BENCH TYPE .....</b>	<b>2-1</b>
<b>2.2</b>	<b>POLE TYPE .....</b>	<b>2-3</b>
<b>2.3</b>	<b>BAKERY TYPE .....</b>	<b>2-5</b>
<b>2.4</b>	<b>SELF-SERVICE TYPE .....</b>	<b>2-7</b>
<b>2.5</b>	<b>ELEVATED SINGLE PRINTER TYPE .....</b>	<b>2-8</b>
<b>2.6</b>	<b>ELEVATED DUAL PRINTER TYPE .....</b>	<b>2-10</b>

## Chapter 3 BLOCK DIAGRAMS

<b>3.1</b>	<b>BLOCK DIAGRAM (BENCH/POLE TYPE) .....</b>	<b>3-1</b>
<b>3.2</b>	<b>BLOCK DIAGRAM (BAKERY TYPE).....</b>	<b>3-2</b>
<b>3.3</b>	<b>BLOCK DIAGRAM (SELF-SERVICE TYPE).....</b>	<b>3-3</b>
<b>3.4</b>	<b>BLOCK DIAGRAM (HANGING TYPE).....</b>	<b>3-4</b>
<b>3.5</b>	<b>BLOCK DIAGRAM (ELEVATED TYPE).....</b>	<b>3-5</b>

## Chapter 4 ELECTRICAL SIGNALS

<b>4.1</b>	<b>MAIN BOARD (PK-260).....</b>	<b>4-1</b>
<b>4.2</b>	<b>KEY/LCD BOARD (PK-261).....</b>	<b>4-7</b>
<b>4.3</b>	<b>LCD BOARD (PK-263) .....</b>	<b>4-9</b>
<b>4.4</b>	<b>WIRELESS LAN BOARD (PK-265).....</b>	<b>4-10</b>
<b>4.5</b>	<b>SELF-SERVICE MASTER BOARD (PK-266) .....</b>	<b>4-11</b>
<b>4.6</b>	<b>SELF-SERVICE MASTER BOARD (PK-267) .....</b>	<b>4-12</b>
<b>4.7</b>	<b>THERMAL BOARD (PK-268) .....</b>	<b>4-13</b>

<b>4.8</b>	<b>THERMAL CONNECTOR BOARD (PK-268)</b> .....	<b>4-15</b>
<b>4.9</b>	<b>SCALE BOARD (PK-999)</b> .....	<b>4-17</b>

## **Chapter 5 MACHINE DISASSEMBLY**

<b>5.1</b>	<b>BENCH TYPE</b> .....	<b>5-1</b>
5.1.1	UPPER CASE.....	5-1
5.1.2	WEIGH PLATTER HOLDER.....	5-2
5.1.3	MAIN BOARD .....	5-3
5.1.4	OPERATION PANEL.....	5-4
5.1.5	CUSTOMER DISPLAY .....	5-6
5.1.6	LABEL SENSOR.....	5-7
5.1.7	PEEL SENSOR .....	5-8
5.1.8	CASSETTE SENSOR.....	5-8
5.1.9	THERMAL HEAD UNIT .....	5-9
5.1.10	LOAD CELL & A/D BOARD .....	5-10
5.1.11	POWER SUPPLY UNIT.....	5-11
5.1.12	MOTOR UNIT .....	5-12
5.1.13	WIRELESS LAN UNIT .....	5-14
<b>5.2</b>	<b>POLE TYPE</b> .....	<b>5-15</b>
5.2.1	POLE UNIT.....	5-15
5.2.2	CUSTOMER DISPLAY UNIT.....	5-16
<b>5.3</b>	<b>BAKERY TYPE</b> .....	<b>5-17</b>
5.3.1	UPPER CASE.....	5-17
<b>5.4</b>	<b>SELF-SERVICE TYPE</b> .....	<b>5-19</b>
5.4.1	SELF-SERVICE PANEL UNIT .....	5-19
5.4.2	PANEL CONTROL BOARD.....	5-21
<b>5.5</b>	<b>ELEVATED TYPE</b> .....	<b>5-22</b>
5.5.1	OPERATION PANEL UNIT (FOR DUAL PRINTER).....	5-22
5.5.2	OPERATION PANEL UNIT (FOR SINGLE PRINTER).....	5-24
5.5.3	PRINTER UNIT (FOR DUAL PRINTER).....	5-25
5.5.4	CUSTOMER DISPLAY UNIT .....	5-26
5.5.5	ELEVATED UNIT.....	5-27
<b>5.6</b>	<b>HANGING TYPE</b> .....	<b>5-28</b>
5.6.1	HANGING POLE.....	5-28
5.6.2	MAIN BOARD .....	5-30
5.6.3	OPERATION PANEL .....	5-31
5.6.4	FRONT & REAR STAINLESS-STEEL HOUSINGS .....	5-32
5.6.5	POWER SUPPLY UNIT .....	5-35
5.6.6	LOAD CELL BOARD .....	5-36

5.6.7 MOTOR UNIT ..... 5-37

**Chapter 6 MECHANICAL ADJUSTMENT**

6.1 FOUR CORNER LIMIT SPACE ..... 6-1  
 6.2 CASSETTE MAGNET POSITION..... 6-2  
 6.3 GEAR ENGAGEMENT ..... 6-3  
 6.4 SUPPORT ROLLER ..... 6-4  
 6.5 PRINT POSITION..... 6-5  
 6.6 THERMAL HEAD POSITION..... 6-6

**Chapter 7 SETUP MODE**

7.1 ENTERING SETUP MODE ..... 7-1  
 7.2 CASSETTE SETTING..... 7-3  
 7.3 LABEL SETTING ..... 7-10  
 7.4 LABEL FORMAT SETTING..... 7-11  
 7.5 BARCODE SETTING..... 7-13  
 7.5 CUSTOM BARCODE SETTING ..... 7-17  
 7.6 MENU TILTLE EDITING ..... 7-21  
 7.7 OPERATION SETTING..... 7-27  
 7.8 ERROR PROCESS SETTING ..... 7-29  
 7.9 ERROR LOG DISPLAY ..... 7-31  
 7.10 TRACEABILITY SETTING..... 7-32  
 7.11 DUAL CURRENCY SETTING..... 7-33  
 7.12 PRICE DOUNDING SETTING ..... 7-34  
 7.12 COUNTRY SETTING ..... 7-35  
 7.13 FILE SAVE / LOAD..... 7-36

**Chapter 8 ADJUSTMENT MODE**

8.1 ADJUSTMENT MODE ENTRY ..... 8-1  
 8.2 KEY CHECK ..... 8-3  
 8.3 PROGRAM NUMBER ..... 8-5  
 8.4 MEMORY CLEAR ..... 8-6  
 8.5 PRINTER ADJUSTMENT ..... 8-8  
 8.6 CALIBRATION..... 8-16  
 8.7 DOWNLOADING..... 8-19  
 8.8 OPTION CHECK ..... 8-23  
 8.9 DISPLAY CAPTURE..... 8-25  
 8.10 MODEL SETTING ..... 8-26

**Chapter 9 ERROR SCREENS**

**Appendix TEXT EDITING**

A.1	OPERATION PANEL AND KEY FUNCTIONS.....	A-1
A.2	NORMAL CHARACTER REGISTRATION.....	A-3
A.3	SPECIAL CHARACTER REGISTRATION.....	A-6
A.4	LINE DELETION .....	A-8
A.5	CHARACTER DELETION.....	A-9
A.6	CHARACTER BACKSPACING .....	A-11

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/UNI-7 service manual.html](https://the-checkout-tech.com/manuals/ishida/UNI-7%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)