




# VEGA

## ELECTRONIC SCALE WITH ECR INTERFACE Service Manual

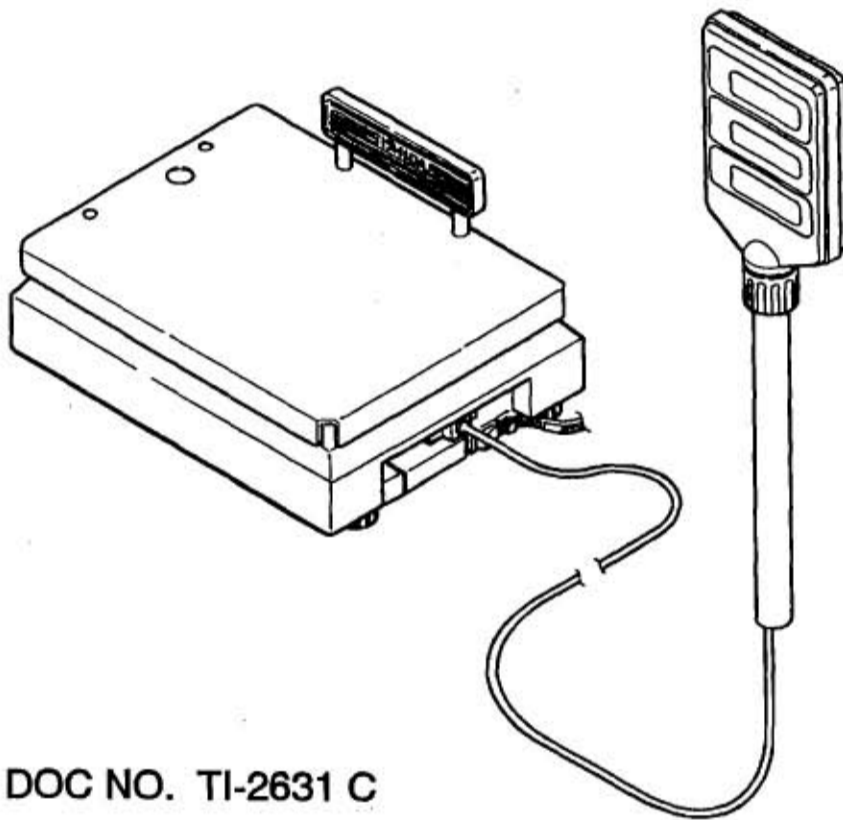

DOC NO. TI-2631 C

**ISHIDA CO., LTD.**

---

REVISION 0

---

# Table of Contents

## 1 Overview

EXTERNAL VIEW .....	1-1
FEATURES .....	1-1
SPECIFICATIONS .....	1-2

## 2 Mechanical Components

GENERAL CONFIGURATION .....	2-1
DISASSEMBLY VIEW .....	2-1

## 3 Electrical Components

WIRING DIAGRAM .....	3-1
LOAD CELL VICINITY .....	3-2
CPU BOARD P-656 .....	3-3
POWER TRANSFORMER VICINITY .....	3-8
CONNECTOR BRACKET VICINITY .....	3-8
DISPLAY BOARD P-657 .....	3-9

## 4 Adjustment

OVERVIEW .....	4-1
BEFORE STARTING ADJUSTMENT .....	4-1
ADJUSTMENT LOCATION .....	4-1
ADJUSTMENT PROCEDURE .....	4-2
REGION ADJUSTMENT .....	4-3

## 5 Communication

INTERFACE SETTINGS .....	5-1
PROTOCOLS .....	5-3
COMMUNICATION CIRCUITRY .....	5-7

## 6 Installation at Customer Site

INSTALLATION PROCEDURE .....	6-1
------------------------------	-----

TABLE OF CONTENTS

**7 Maintenance**

MAIN PARTS .....	7-1
TROUBLESHOOTING .....	7-2

**8 Circuit Diagrams**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*