




VEGA

ELECTRONIC SCALE WITH ECR INTERFACE Service Manual

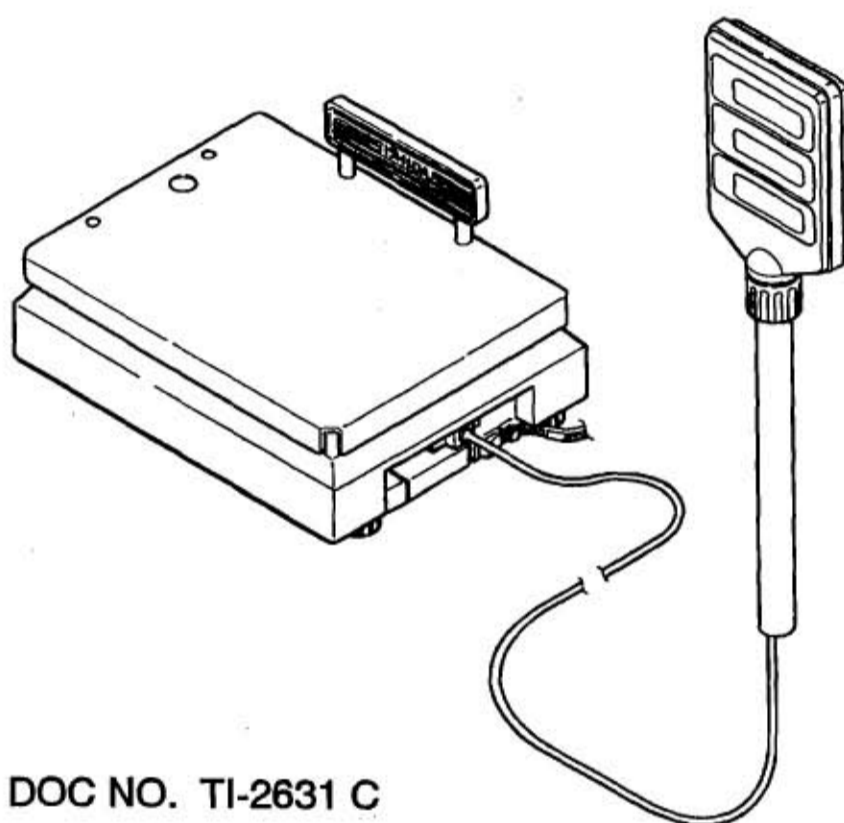

DOC NO. TI-2631 C

ISHIDA CO., LTD.

REVISION 0

Table of Contents

1 Overview

EXTERNAL VIEW	1-1
FEATURES	1-1
SPECIFICATIONS	1-2

2 Mechanical Components

GENERAL CONFIGURATION	2-1
DISASSEMBLY VIEW	2-1

3 Electrical Components

WIRING DIAGRAM	3-1
LOAD CELL VICINITY	3-2
CPU BOARD P-656	3-3
POWER TRANSFORMER VICINITY	3-8
CONNECTOR BRACKET VICINITY	3-8
DISPLAY BOARD P-657	3-9

4 Adjustment

OVERVIEW	4-1
BEFORE STARTING ADJUSTMENT	4-1
ADJUSTMENT LOCATION	4-1
ADJUSTMENT PROCEDURE	4-2
REGION ADJUSTMENT	4-3

5 Communication

INTERFACE SETTINGS	5-1
PROTOCOLS	5-3
COMMUNICATION CIRCUITRY	5-7

6 Installation at Customer Site

INSTALLATION PROCEDURE	6-1
------------------------------	-----

TABLE OF CONTENTS

7 Maintenance

MAIN PARTS 7-1
TROUBLESHOOTING 7-2

8 Circuit Diagrams

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/Vega service and calibration manual.html](https://the-checkout-tech.com/manuals/ishida/Vega%20service%20and%20calibration%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)