



WPL-3000

SERVICE MANUAL



IMPORTANT

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

Table of Contents

1. Overview	1.1 External Parts and Names (I Line Type)	1-2
	1.2 External Parts and Names (L Line Type)	1-3
	1.3 Location of Safety Stickers	1-4
2. Setup	2.1 Confirm Before Delivery	
	2.1.1 Location	2-2
	2.1.2 Installation Route	2-2
	2.1.3 Electrical Power	2-2
	2.1.4 Setup Environment	2-2
	2.1.5 Work Clothes	2-3
	2.2 Necessary Items for Installation	
	2.2.1 Tools	2-3
	2.2.2 Manuals	2-3
	2.3 Package Confirmation	2-4
	2.4 Positioning and Adjusting Conveyor Stands	
	2.4.1 Fastening to Stand	2-5
	2.4.2 Fastening Stands	2-6
	2.4.3 Stand Fastening Method 1	2-7
	2.4.4 Stand Fastening Method 2	2-7
	2.5 Connecting Cable	2-8
	2.6 Setup Procedures	2-9
	2.7 Method for Threading Labels	2-10
	2.8 WPL-3000 USA Rescue Mode	2-11
3. Test Mode	3.1 Menu Directory Diagram	3-2
	3.2 Test Mode	
	3.2.1 Starting Test mode	3-3
	3.2.2 Hardware Test (C01)	3-3
	3.2.3 RAM Clear (C02)	3-6
	3.2.4 Thermal Head Setting (C03)	3-7
	3.2.5 Sensor Check (C04)	3-9
	3.2.6 Extra Memory (C05)	3-9
	3.2.7 Setting ROM Switch (C06)	3-9
	3.2.8 Label Format Editing (C07)	3-12
	3.2.9 Sales Mode Setting (C08)	3-12

	3.2.10 Machine ID No. Setting (C09)	3-13
	3.2.11 Preset Function Setting (C10)	3-14
	3.2.12 Password (C11)	3-14
	3.2.13 Data Transmission (C99)	3-15
4. Setting Mode		
	4.1 Menu Directory Diagram.....	4-2
	4.2 Setup Mode	
	4.2.1 Label Format (b01)	4-5
	4.2.2 Bar Code Setting (b02)	4-7
	4.2.3 Code Settings (b03)	4-8
	4.2.4 Setting Initial Data (b04)	4-9
	4.2.5 PLU File (b08)	4-11
	4.2.6 Preset Report (b10)	4-12
	4.2.7 Registration Select (b11)	4-14
	4.2.8 Total Mode Select (b12)	4-15
	4.2.9 Password (b13)	4-15
	4.2.10 Tray Master Registration (b15).....	4-16
	4.2.11 Conveyor Setup (b16)	4-16
5. Controller Unit		
	5.1 Overview	5-2
	5.2 Block Diagram.....	5-3
	5.3 Electronic Parts	
	5.3.1 Display Board	5-3
	5.3.2 Junction/Buzzer Board.....	5-4
	5.4 Display and Key Check	5-6
	5.5 Disassembly Diagram	5-7
6. Weigh Conveyor		
	6.1 Overview	6-2
	6.2 Block Diagram	6-3
	6.3 Electronic Parts	
	6.3.1 Load Cell Unit.....	6-4
	6.3.2 A/D Converter Board	6-5
	6.4 Scale Check	6-6
	6.5 Disassembly Diagram	6-7

7. Printer / Label Applicator Unit	7.1 Overview	7-2
	7.2 Block Diagram	7-3
	7.3 Electronic Components	7-4
	7.3.1 Printer Unit (Thermal head, label sensor adjustment) ...	7-4
	7.3.2 Label Applicator Unit	7-10
	7.4 Adjustment Position of the Label Applicator Unit	7-14
	7.5 Movement Test	7-15
	7.6 Disassembly Diagram (Stand Unit)	7-16
	7.7 Disassembly Diagram (Printer Unit).	7-16
	7.8 Disassembly Diagram (Label Applicator Unit) ..	7-17
8. Weigh Conveyor Unit	8.1 Weigh Conveyor Unit	8-2
	8.2 Block Diagram	8-3
	8.3 Electronic Components	8-4
	8.3.1 Power Supply Unit	8-4
	8.3.2 Drive Board (P-854)	8-5
	8.3.3 Electromagnetic Valve	8-5
	8.3.4 Air Cylinder	8-6
	8.3.5 Application Timing Sensor	8-7
	8.4 Elevator Check and Parts Adjustment	8-8
	8.4.1 Weigh Conveyor	8-8
	8.4.2 Conveyor Fall Prevention Screw Adjustment	8-9
	8.5 Disassembly Diagram.....	8-10
9. Troubleshooting	9.1 Periodic Parts Replacement	9-2
	9.2 Breakdown and Countermeasure	9-3
	9.3 Error Messages	9-4
10. Load Cell Unit	10.1 Location of Main Parts	10-2
	10.2 Replacing the Load Cell Unit	10-3
	10.3 Span Calibration Adjustment	10-6
Appendix	A.1 Installation Notes	A-2
	A.2 Label Format Worksheets.....	A-9

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ishida/WPL-3000 service manual.html](https://the-checkout-tech.com/manuals/ishida/WPL-3000%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)