

JCA-Dual Channel Series

User's Manual

CONTENTS

| | |
|--------------------------|---|
| PRECAUTIONS | 1 |
|--------------------------|---|

DUAL CHANNEL

| | |
|----------------------|---|
| Analog Section | 2 |
| Installation | 2 |
| Set Up | 3 |

BASIC OPERATIONS

| | |
|--|----|
| Zero – Point | 12 |
| Tare | 13 |
| Pre-Tare | 14 |
| The Counting Method 1 (Key In Unit Weight) | 15 |
| The Counting Method 2 (Sampling) | 16 |
| Manual Accumulation | 17 |
| Manual Print | 18 |

ADVANCED OPERATIONS

Print

| | |
|---------------------------------|----|
| Set / Choose A Print Form | 19 |
| Set Print Mode | 20 |
| Select The Printer Model | 21 |
| Set RS-232 Baud Rate | 22 |
| RS-232 Data Format | 23 |
| Samples Of Print Forms | 24 |

Serial Number

| | |
|---|----|
| Activate The Serial Number Function | 26 |
| Set The Serial Number Mode | 27 |
| Set Max Serial Number | 28 |
| Change The Serial Number | 29 |

Accumulation

| | |
|---|----|
| Set/Choose Accumulation Mode | 30 |
| Set The Max Amount Of Accumulations | 31 |
| Display Of Accumulation | 32 |
| Print While Display Of Accumulation | 33 |
| Delete Accumulations | 34 |

Piece Checking

| | |
|--|----|
| Set The High Limit Of The Pieces | 36 |
| Set The Low Limit Of The Pieces | 37 |
| Enable / Disable The Piece Checking Function | 38 |

Weight Checking

| | |
|---|----|
| Set The High Limit Of The Weight | 39 |
| Set The Low Limit Of The Weight | 40 |
| Enable / Disable The Weight Checking Function | 41 |

Auto-Tare Checking

| | |
|--|----|
| Set The High Limit Of The Tare Value | 42 |
| Set The Low Limit Of The Tare Value | 43 |
| Enable / Disable The Auto-Tare Checking Function | 44 |

Unit Weight ID

| | |
|----------------------------|----|
| Saving ID -Method 1 | 45 |
| Saving ID - Method 2 | 46 |
| Call Up ID | 47 |
| Pre-Tare By ID | 48 |

Label

| | |
|--------------------------------|----|
| Customize Your Own Label | 49 |
| Label Example | 51 |

Show / Readjust The Time

ACAI

| | |
|-----------------------------------|----|
| ACAI Parameter | 53 |
| Sampling With ACAI Function | 54 |

Data Protection

Parameter

| | |
|------------------------------|----|
| Parameters Setting | 60 |
| Parameters Description | 61 |

The Rule For Using The Keypad

Connector

Data Protocol

Applications

FAQ

LCD Characters

Error Messages

Option

Relay Module Diagram

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*