



User Manual counting scale J CL.

Table of Contents

1. Introduction	1
2. Precautions	1
3. Before Using the Product	
3-1 Unpacking and Checking.....	1
3-2 Installing Components.....	1
3-3 Leveling the Scale.....	1
4. Product Introduction	
4-1 Specifications & General Features	2
4-2 Front Panel	
4-2-1 Display	3
4-2-2 Keyboard.....	4
4-3 Power Supply.....	5
5. Operation	
5-1 Basic Weighing	
5-1-1 Weighing.....	6
5-1-2 Tare & Preset Tare.....	6
5-1-3 Unit Switch Operation	6
5-2 Basic Counting	
5-2-1 Upper & Lower Quantity Limit Checking	7
5-2-2 Entering a Known Unit Weight	7
5-2-3 Sample Counting & ACAI	7
5-2-4 Accumulation, Accumulation Display and Accumulation Clear.....	8
6. Calibration	
6-1 Single Point Calibration	9
6-2 Linear Calibration.....	9
7. Setting Mode	10
8. Serial Interface	
8-1 RS-232 Connector.....	12
8-2 Single Option.....	12
8-3 RS-232 Output Format.....	12
9. Troubleshooting and Error Message	13

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/jadever/JCL user manual.html](https://the-checkout-tech.com/manuals/jadever/JCL%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)