



# User Manual counting scale JCL.

# Table of Contents

<b>1. Introduction</b> .....	1
<b>2. Precautions</b> .....	1
<b>3. Before Using the Product</b>	
3-1 Unpacking and Checking.....	1
3-2 Installing Components.....	1
3-3 Leveling the Scale.....	1
<b>4. Product Introduction</b>	
4-1 Specifications & General Features .....	2
4-2 Front Panel	
4-2-1 Display .....	3
4-2-2 Keyboard.....	4
4-3 Power Supply.....	5
<b>5. Operation</b>	
5-1 Basic Weighing	
5-1-1 Weighing.....	6
5-1-2 Tare & Preset Tare.....	6
5-1-3 Unit Switch Operation .....	6
5-2 Basic Counting	
5-2-1 Upper & Lower Quantity Limit Checking .....	7
5-2-2 Entering a Known Unit Weight .....	7
5-2-3 Sample Counting & ACAI .....	7
5-2-4 Accumulation, Accumulation Display and Accumulation Clear.....	8
<b>6. Calibration</b>	
6-1 Single Point Calibration .....	9
6-2 Linear Calibration.....	9
<b>7. Setting Mode</b> .....	10
<b>8. Serial Interface</b>	
8-1 RS-232 Connector.....	12
8-2 Single Option.....	12
8-3 RS-232 Output Format.....	12
<b>9. Troubleshooting and Error Message</b> .....	13

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*