## [PRECAUTIONS]

The scale or indicator should always be used in an environment which is free from excessive air currents, corrosives, vibrations, temperatures and humidity extremes. These factors will affect displayed weight readings.

## DO NOT use the scale or indicator

Next to open windows or doors causing drafts or rapid temperatures changes! A temperature between 0 ~ 40 degree Celsius is recommended.

Near air conditioning or heat ventilations!

Near vibrating, rotating or reciprocating equipment!

Near magnetic fields or equipment that generates magnetic fields.

On a rough work surface!

## Leveling the scale

(when the indicator is connected to a platform)

Always adjust the scale to a level position with level adjusters until the bubbles appear in the center circle of the level indicator!

## **Battery**

Recharged the battery whenever the symbol is flashing; this indicates that battery level is low. Charge the battery with the DC 9V / 1A adaptor attached. And when the battery is charging, the LED is red and when is fully charged the LED turns green. (it takes approximately 6 hours to charge battery completely)

NOTE: This manual has no table of contents and is 45 pages long

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/jadever/JIK-6 user manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM