[Precautions]

The scale should always be used in an environment, which is free from excessive air currents, corrosives, vibration, and temperature or humidity extremes. These factors will affect displayed weight readings. Before starting the operation of the scale, please read the following instructions operate the scale properly.

DO NOT use the scale:

- next to open windows or doors causing drafts or rapid temperature changes.
- near air conditioning or heat vents.
- near vibrating, rotating or reciprocating equipment.
- near magnetic fields or equipment that generates magnetic fields.
- on a rough work surface

1. Loosen the delivery protection screw (this screw can't be removed)

Please find the delivery protection screw in the bottom of the scale. Loose it according to the instruction sticker next to it

- Before use the scale Loose the screw counter-clockwise to the end
- Before move the scale Tighten the screw clockwise to the end

2. Install the weighing pan

Put on the weighing pan to complete the installation.

3. Leveling the scale

The scale is equipped with four level adjusters. Adjust the scale to a level position with four level adjusters until the bubble appears in the center of the level indicator.

4. Recharging battery

Recharging battery when the battery sign starts blinking. When battery is being charged, the LED indicated by the word CHARGE on the display panel will be RED, the LED will become <u>GREEN</u> when the indicator has been charged to full capacity (charging time is about <u>8 hours</u>).

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/jadever/JWA user manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM