_JWP

Series

Service Manual

SECTION 1.	Structure assembly drawing	2
1 – 1	Breakdown drawing of whole scale set (fixed pan	2
	type)	
1 – 2	Breakdown drawing of whole scale set (movable	3
	pan type)	
1 - 3	Breakdown drawing of scale body	4
1 - 4	Breakdown drawing of platform	5
1 - 5	Breakdown drawing of upper case	6
1 – 6	Breakdown drawing of base	7
1 - 7	Breakdown drawing of load cell components	8
1 - 8	Breakdown drawing of front display board	9
1 - 9	Breakdown drawing of rear display board	10
1 - 10	Spare part list	11
SECTION 2.	Electronic structure	13
2 - 1	Block diagram	13
2 - 2	Wring diagram	14
SECTION 3.	Steps of troubleshooting	14
3 - 1	Table of troubleshooting	14
3 – 2	Confirmation of application environments	15
SECTION 4.	Service and setting	15
4 – 1	Flows of service	15
4 - 2	Calibration method and model setting	. 17
4 - 3	Parameter and function setting	18
4 – 4	Switch of accuracy	21

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/jadever/JWP service and calibration manual.htm

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM