



Model 3825 BENCH SCALE



User's Manual

TABLE OF CONTENTS

GENERAL INFORMATION

Introduction	1
Specifications	1
Options	1

INSTALLATION

Unpacking Container	2
Electrical Requirements	2
Scale Installation	2
Leveling the Scale	2
Counter Cut-Out Installation	2
Remote Display Connection	4
Tare Footswitch Connection	4
Attaching Remote Display to Scale Base	4
Installing an Internal Display	5
Installing Remot Display Cable through Conduit	6

SETUP & CALIBRATION

Scale Setup	8
Equipment Required	8
Line Frequency (Hertz)	9
Filtering and Averaging	9
Country Selection	9
Zero Calibration	9
Span Calibration	9
Corner Stop Adjustments	9

COMMUNICATIONS INTERFACE

RS232 I/O Port	10
Baud Rate Setup	10
Parity Selection	10
Protocol Response Selection	10
Communications Protocol	10
Status Display	10

OPERATION

Description of Operation	11
Initial Power Up	11
Start Up	11
Error Signals	11

USER MAINTENANCE

Preliminary Troubleshooting Checks	11
--	----

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/NCI/3825 users manual.html](https://the-checkout-tech.com/manuals/NCI/3825%20users%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)