





5000 Series Indicators

Instruction Manual

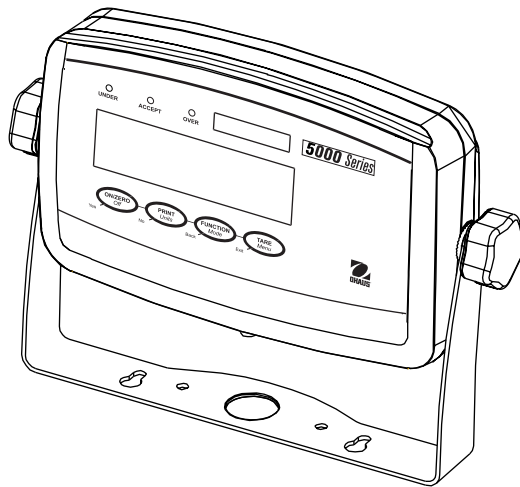

T51P Indicator

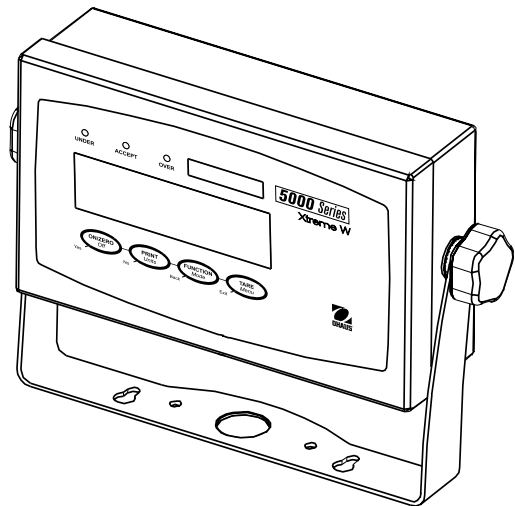

T51XW Indicator

TABLE OF CONTENTS

1. INTRODUCTION.....	EN-5
1.1 Safety Precautions	EN-5
1.1.1 Relay Option Safety Precautions	EN-5
1.2 Overview of Parts and Controls	EN-6
1.3 Control Functions.....	EN-10
2. INSTALLATION	EN-11
2.1 Unpacking	EN-11
2.2 External Connections.....	EN-11
2.2.1 Scale Base with Connector to T51P	EN-11
2.2.2 RS232 Interface Cable to T51P.....	EN-11
2.2.3 AC Power to T51P	EN-11
2.2.4 AC Power to T51XW.....	EN-11
2.2.5 Battery Power to T51P.....	EN-11
2.2.6 Mounting Bracket.....	EN-12
2.3 Internal Connections.....	EN-12
2.3.1 Opening the Housing.....	EN-12
2.3.2 Scale Base Without Connector to T51P or T51XW	EN-12
2.3.3 RS232 Interface Cable to T51XW.....	EN-13
2.3.4 Footswitch to T51P or T51XW.....	EN-13
2.4 T51P Rear Housing Orientation	EN-13
2.5 Mounting Bracket.....	EN-13
3. SETTINGS.....	EN-14
3.1 Menu Structure	EN-14
3.2 Menu Navigation	EN-15
3.3 Calibration Menu	EN-15
3.3.1 Zero Calibration	EN-16
3.3.2 Span Calibration.....	EN-16
3.3.3 Linearity Calibration	EN-17
3.3.4 Calibration Test	EN-18
3.3.5 Geographical Adjustment Factor	EN-18
3.3.6 End Calibration.....	EN-18
3.4 Setup Menu.....	EN-20
3.4.1 Reset.....	EN-20
3.4.2 Range	EN-20
3.4.3 Capacity	EN-20
3.4.4 Graduation.....	EN-21
3.4.5 Power On Unit	EN-21
3.4.6 Zero Range	EN-21
3.4.7 Auto-Tare.....	EN-22
3.4.8 Retain Weight Data	EN-22
3.4.9 Legal for Trade	EN-22
3.4.10 Beeper Volume	EN-23

TABLE OF CONTENTS (Cont.)

3.4.11	Beeper Signal	EN-23
3.4.12	Button Beeper	EN-23
3.4.13	End Setup	EN-23
3.5	Readout Menu	EN-23
3.5.1	Reset	EN-24
3.5.2	Stable Range	EN-24
3.5.3	Filter	EN-24
3.5.4	Auto-Zero Tracking	EN-24
3.5.5	Backlight	EN-25
3.5.6	Auto Off Timer	EN-25
3.5.7	Gross Indicator	EN-25
3.5.8	End Readout	EN-25
3.6	Mode Menu	EN-25
3.6.1	Reset	EN-26
3.6.2	Weighing Mode	EN-26
3.6.3	Parts Counting Mode	EN-26
3.6.4	Parts Counting Optimize	EN-26
3.6.5	Percent Weighing Mode	EN-26
3.6.6	Dynamic Weighing Mode	EN-26
3.6.7	Check Weighing Mode	EN-27
3.6.8	End Mode	EN-27
3.7	Unit Menu	EN-27
3.7.1	Reset	EN-27
3.7.2	Kilogram Unit	EN-27
3.7.3	Pound Unit	EN-27
3.7.4	Gram Unit	EN-28
3.7.5	Ounce Unit	EN-28
3.7.6	Pound Ounce Unit	EN-28
3.7.7	Tonnes Unit	EN-28
3.7.8	Custom Unit	EN-28
3.7.9	End Unit	EN-29
3.8	GMP Menu	EN-29
3.8.1	Reset	EN-29
3.8.2	Date Type	EN-29
3.8.3	Date Set	EN-30
3.8.4	Time Type	EN-30
3.8.5	Time Set	EN-30
3.8.6	User ID	EN-31
3.8.7	Project ID	EN-31
3.8.8	Scale ID	EN-31
3.8.7	End GMP	EN-31
3.9	Print1 and Print2 Menus	EN-32
3.9.1	Reset	EN-32
3.9.2	Print Stable data Only	EN-32
3.9.3	Auto Print	EN-32
3.9.4	Print Content Sub-menu	EN-33

TABLE OF CONTENTS (Cont.)

3.9.5	Layout Sub-menu	EN-35
3.9.6	Output	EN-35
3.9.7	List Menu Settings.....	EN-35
3.9.8	End Print1 or End Print2	EN-35
3.10	COM1 and COM2 Menus	EN-35
3.10.1	Reset.....	EN-36
3.10.2	Baud	EN-36
3.10.3	Parity	EN-36
3.10.4	Stop Bit.....	EN-36
3.10.5	Handshake	EN-36
3.10.6	Address	EN-36
3.10.7	Alternate Command Sub-menu.....	EN-37
3.10.8	End COM1 or End COM2	EN-37
3.11	I-O Menu.....	EN-37
3.11.1	Reset.....	EN-37
3.11.2	External Input	EN-38
3.11.3	Input Beep	EN-38
3.11.4	Relay Output	EN-38
3.11.5	End I-O.....	EN-39
3.12	Menu Lock Menu	EN-39
3.12.1	Reset.....	EN-39
3.12.2	Lock Calibration	EN-39
3.12.3	Lock Setup	EN-40
3.12.4	Lock Readout	EN-40
3.12.5	Lock Mode.....	EN-40
3.12.6	Lock Unit	EN-40
3.12.7	Lock Print1	EN-40
3.12.8	Lock Print2	EN-40
3.12.9	Lock COM1	EN-40
3.12.10	Lock COM2	EN-40
3.12.11	Lock GMP	EN-41
3.12.12	Lock I-O.....	EN-41
3.12.13	End Lock	EN-41
3.13	Key Lock Menu.....	EN-41
3.13.1	Reset.....	EN-41
3.13.2	Lock All Buttons.....	EN-41
3.13.3	Lock Off Button	EN-41
3.13.4	Lock Zero Button.....	EN-41
3.13.5	Lock Print Button	EN-42
3.13.6	Lock Unit Button	EN-42
3.13.7	Lock Function Button.....	EN-42
3.13.8	Lock Mode Button	EN-42
3.13.9	Lock Tare Button.....	EN-42
3.13.10	Lock Menu Button	EN-42
3.13.11	End Lock	EN-42
3.14	Security Switch	EN-42

TABLE OF CONTENTS (Cont.)

4. OPERATION.....	EN-43
4.1 Turning Indicator On/Off.....	EN-43
4.2 Zero Operation.....	EN-43
4.3 Manual Tare.....	EN-43
4.4 Pre-Set Tare.....	EN-43
4.5 Auto-Tare.....	EN-43
4.6 Changing Units of Measure.....	EN-44
4.7 Printing Data.....	EN-44
4.8 Application Modes.....	EN-44
4.8.1 Weighing.....	EN-44
4.8.2 Parts Counting.....	EN-44
4.8.3 Percent Weighing.....	EN-45
4.8.4 Check Weighing.....	EN-46
4.8.5 Dynamic Weighing.....	EN-47
5. SERIAL COMMUNICATION.....	EN-48
5.1 Interface Commands.....	EN-48
5.2 Output Format.....	EN-49
5.3 Printouts.....	EN-49
6. LEGAL FOR TRADE.....	EN-51
6.1 Settings.....	EN-51
6.2 Verification.....	EN-51
6.3 Sealing.....	EN-51
7. MAINTENANCE.....	EN-53
7.1 Model T51P Cleaning.....	EN-53
7.2 Model T51XW Cleaning.....	EN-53
7.3 Troubleshooting.....	EN-53
7.4 Service Information.....	EN-54
8. TECHNICAL DATA.....	EN-55
8.1 Specifications.....	EN-55
8.2 Accessories and Options.....	EN-56
8.3 Drawings and Dimensions.....	EN-57
8.4 Compliance.....	EN-58

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*